

**PARTS LIST**


Right door edge guard



Left door edge guard



Seam sealant cutting tool

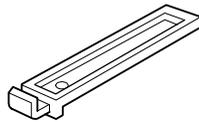**TOOLS AND SUPPLIES REQUIRED**

Rubber mallet

Felt-tip pen

Touch-up paint


**INSTALLATION**

**Customer information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

**NOTE:** These instructions show the right door edge guard being installed. The same procedure applies to installing in the left door edge guard.

1. Clean and wax the area to be covered with a high-quality paste wax.
2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.



3. Position the door edge guard against the inside edge of the door using the bends for reference. Mark the sealant at the top and bottom ending points of the door edge guard.

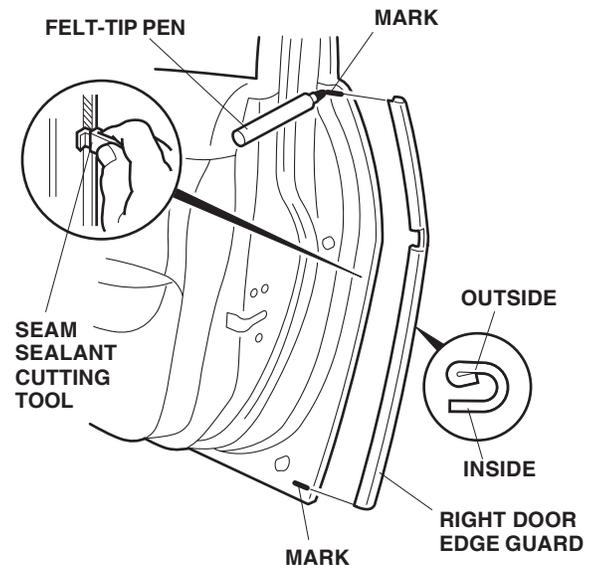

4. Position the cutting edge of the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark, top and bottom.
 

**NOTE:** The cutting tool only cuts in one direction. Move it upward on the right side of the car and downward on the left side.
5. Apply touch-up paint to the door, and let it dry.

6. Position the door edge guard on the door edge, and tap it into position with a series of light taps using a rubber mallet.

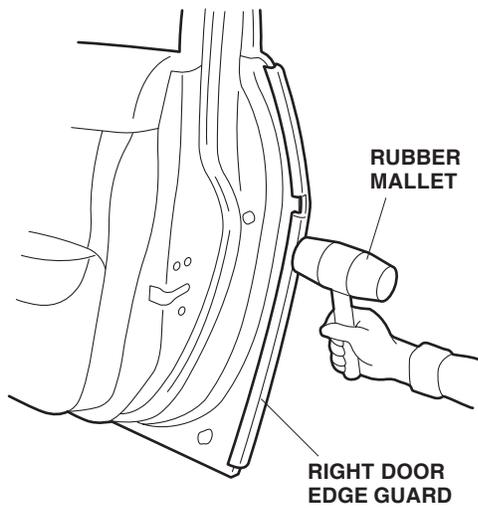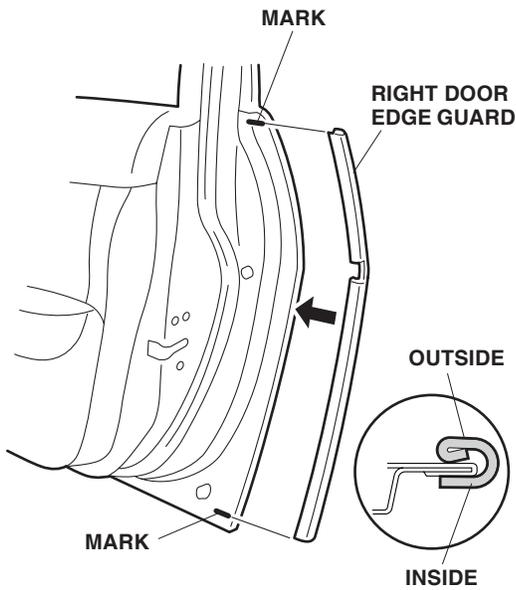

7. Repeat steps 3 thru 6 to install the left door edge guard.