



PARTS LIST

 
Left fog light

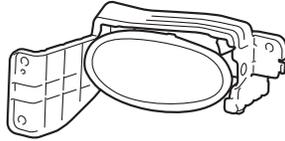


Right fog light

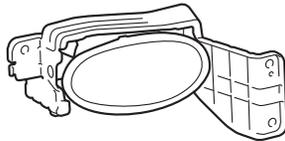


Left fog light trim




Right fog light trim

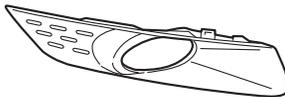 

Light switch

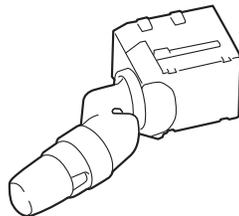


2 Fog light harnesses

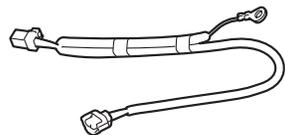


6 Self-tapping screws



5 Wire ties

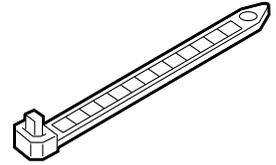

Wire tie with clip

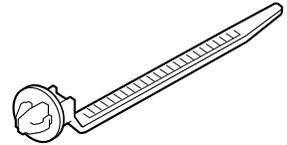

Ground bolt

**TOOLS AND SUPPLIES REQUIRED**

Phillips screwdriver

Long blade Phillips screwdriver

Flat-tip screwdriver

Diagonal cutters


Ratchet

10 mm Socket

10 mm Open end wrench

Blanket

Illustration of the Fog Lights Installed on the Vehicle

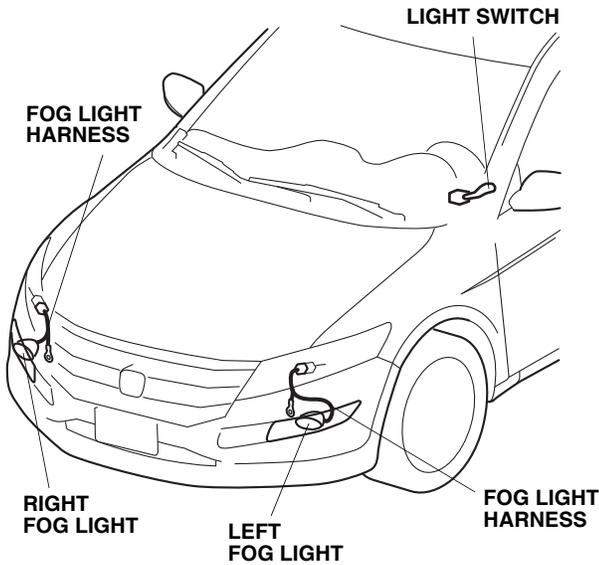


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


1. Make sure you have the anti-theft code for the audio unit and navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery.

3. Remove the front bumper:


- Remove the front grille cover (two short clips, five medium clips, and four long clips).

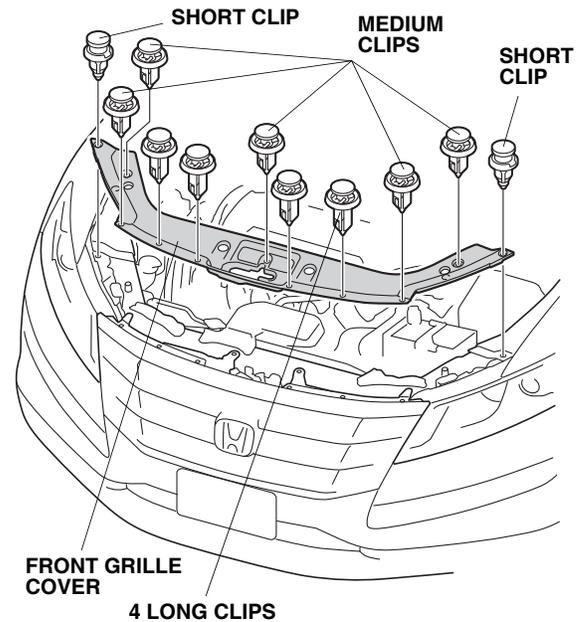

- Remove 2 self-tapping screws, 2 long clips, and 10 medium clips.

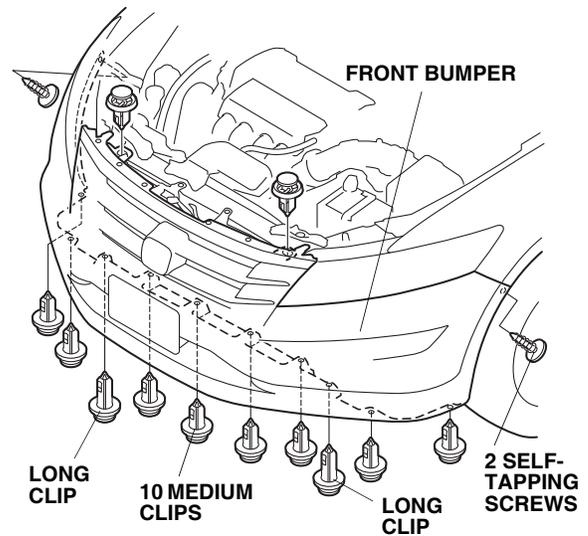


- With the help of an assistant, remove the front bumper. Place the front bumper on a blanket to prevent damage.

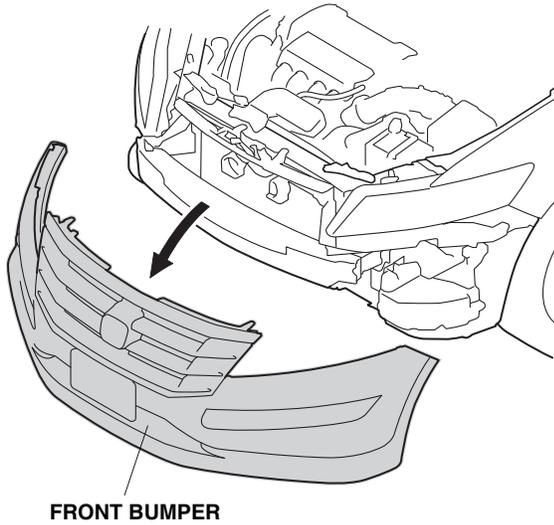


Installing the Fog Lights


4. Remove the left fog light trim from the bumper (one self-tapping screw and four retaining tabs).

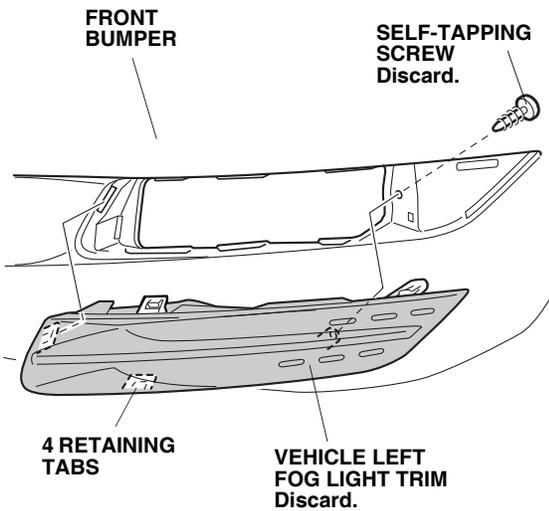

5. Install the new left fog light trim to the front bumper with four retaining tabs.

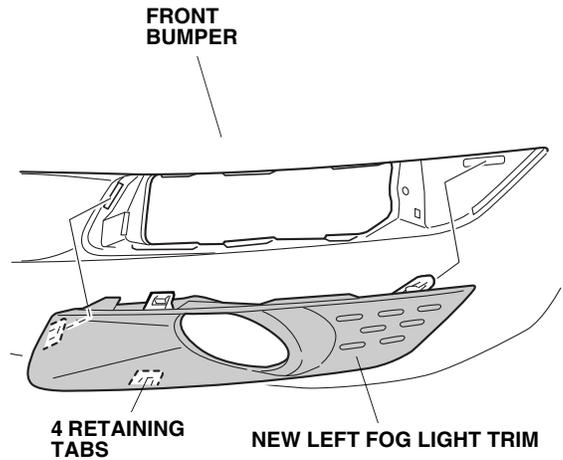


6. Install the left fog light to the front bumper with three self-tapping screws.

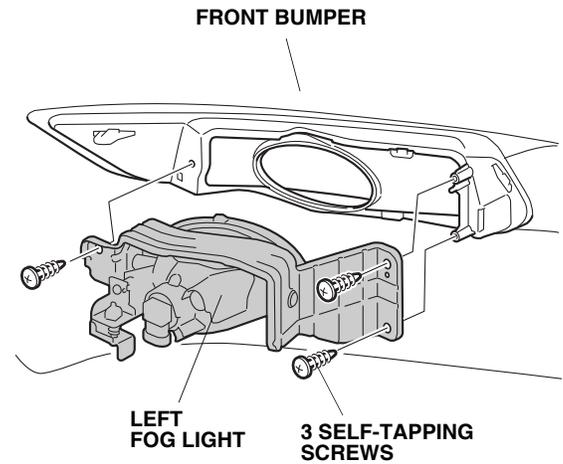


7. Repeat steps 4 through 6 on the right side of the front bumper.

Routing the Fog Light Harnesses


- On the driver's side of the vehicle, locate the vehicle 1-pin connector green taped to the vehicle harness. Remove the green tape to release the vehicle 1-pin connector.

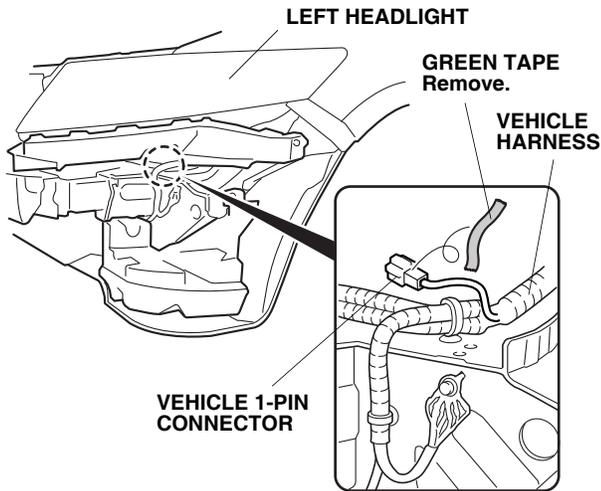


- Plug the fog light harness 1-pin connector into the vehicle 1-pin connector.

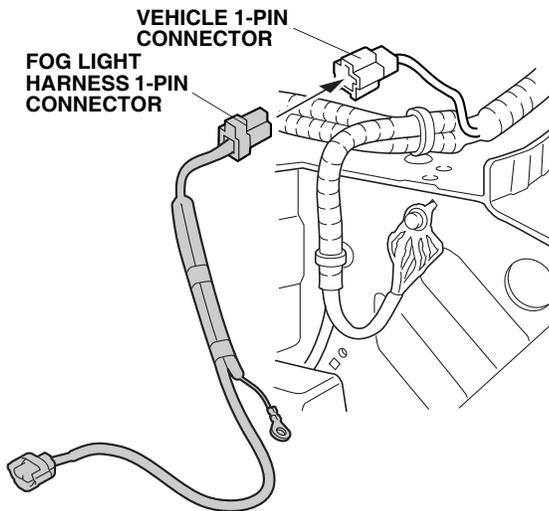

- Secure the fog light harness ground terminal to the vehicle frame with the ground bolt supplied.

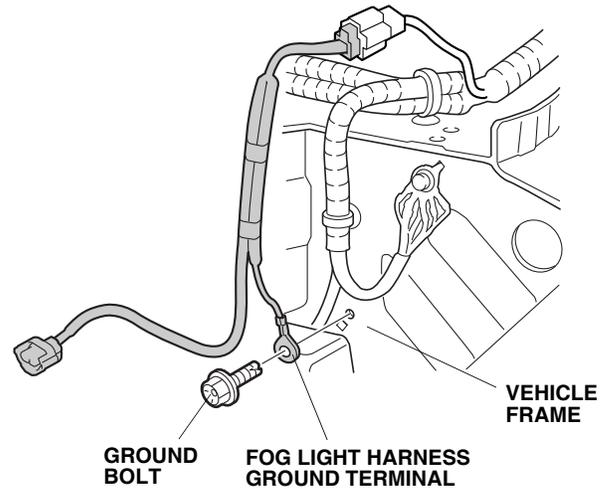


- Align the green tape on the fog light harness with the vehicle clip, and secure the fog light harness to the vehicle harness with one wire tie.

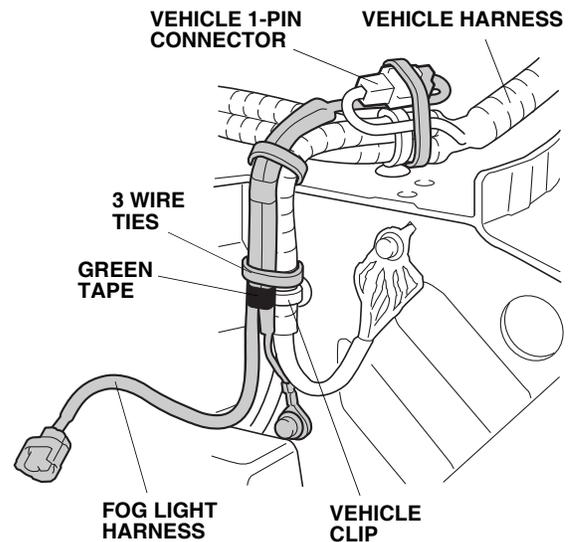


- Secure the fog light harness and vehicle 1-pin connector to the vehicle harness with two wire ties.


- On the passenger's side of the vehicle locate the vehicle 1-pin connector green taped to the vehicle harness. Remove the green tape to release the vehicle 1-pin connector.

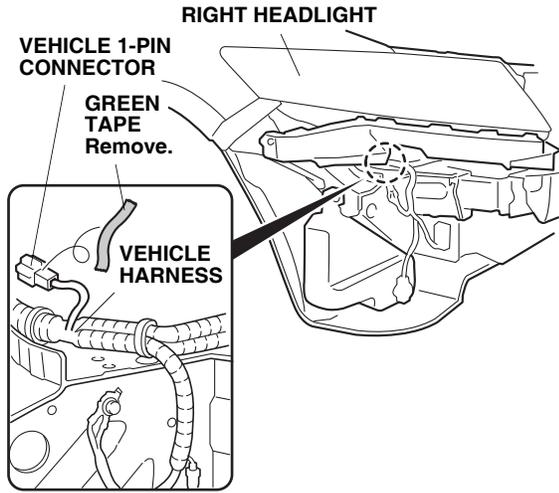


- Plug the fog light harness 1-pin connector into the vehicle 1-pin connector.

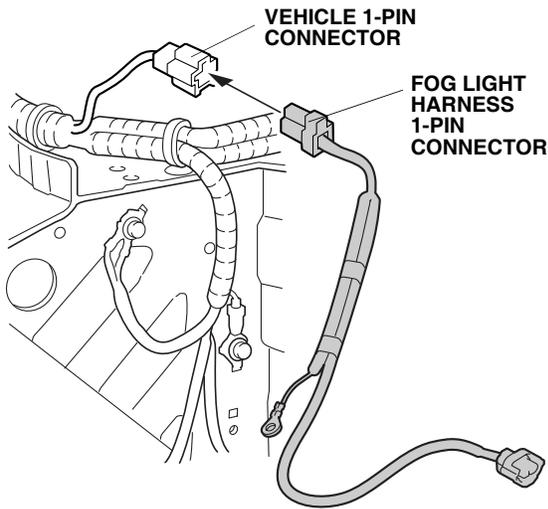


- Locate and remove the vehicle ground bolt. Secure the fog light harness ground terminal and vehicle ground terminal to the vehicle frame with the vehicle ground bolt just removed.

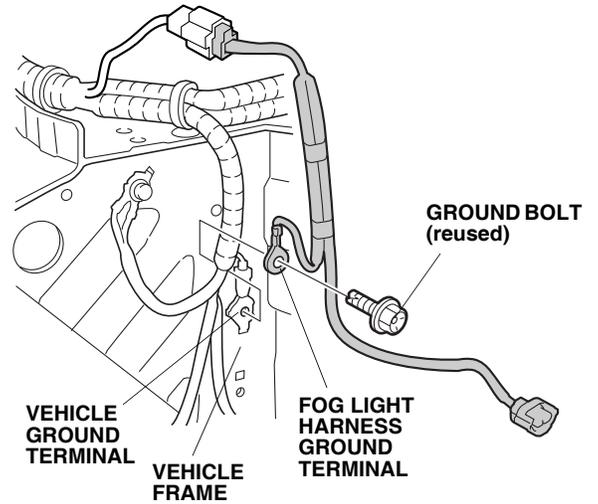


- Secure one wire tie with clip to the fog light harness at the green tape. Secure the wire tie with clip to the hole in the vehicle frame.

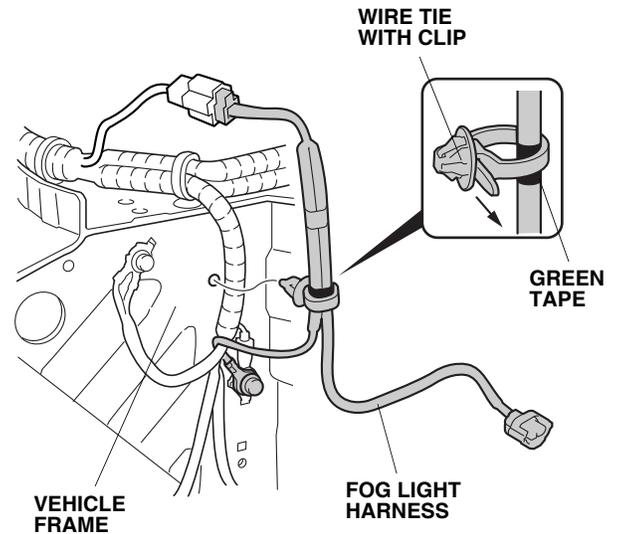

17. Secure the fog light harness and vehicle 1-pin connector to the vehicle harness with two wire ties.

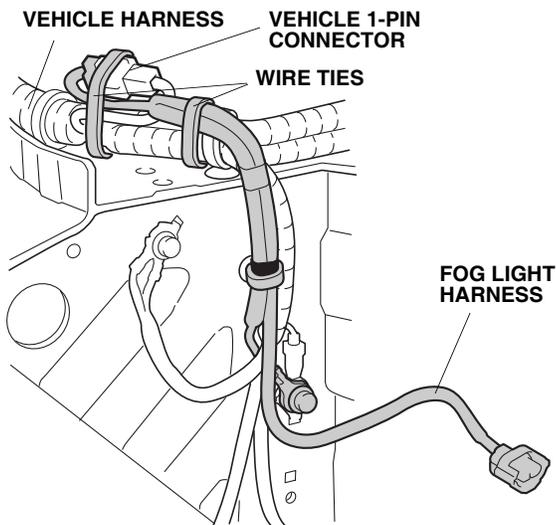


18. With the help of an assistant, bring the front bumper close to the vehicle, and plug in the fog light harness 2-pin connectors. Reinstall the front bumper.

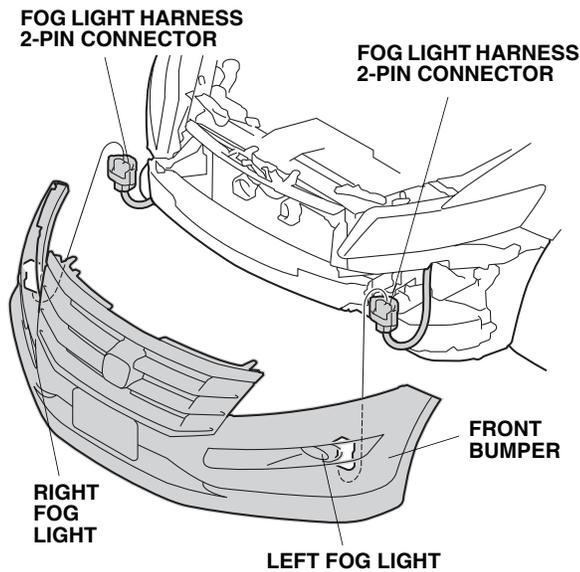

Installing the Light Switch


19. Lower the tilt lever and pull the steering wheel out.

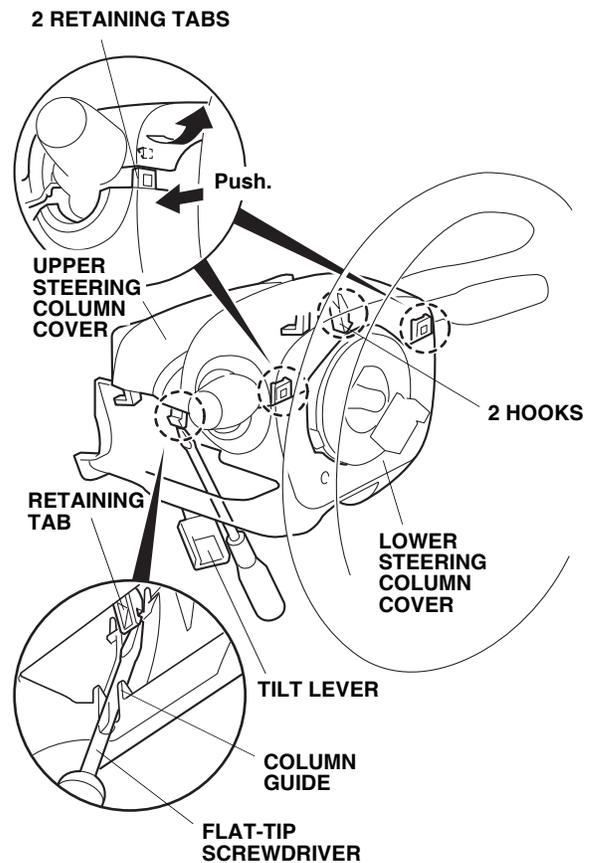


20. Remove the upper steering column cover:

- Insert a flat-tip screwdriver along the column guide inside the lower cover, and gently pry out on the retaining tab on the upper column cover.
- Push the lower cover to release two retaining tabs, and pull up on the upper cover to release two hooks.


21. Remove the lower steering column cover (three screws). The upper screws are self-tapping screws.

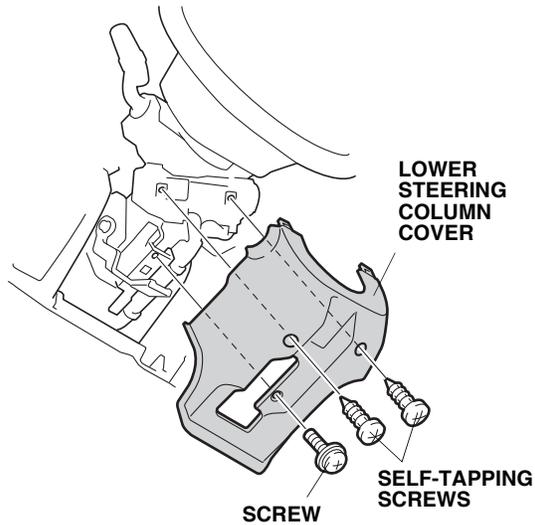


22. Turn the steering wheel 90° counterclockwise, and unplug the vehicle connector from the light switch.

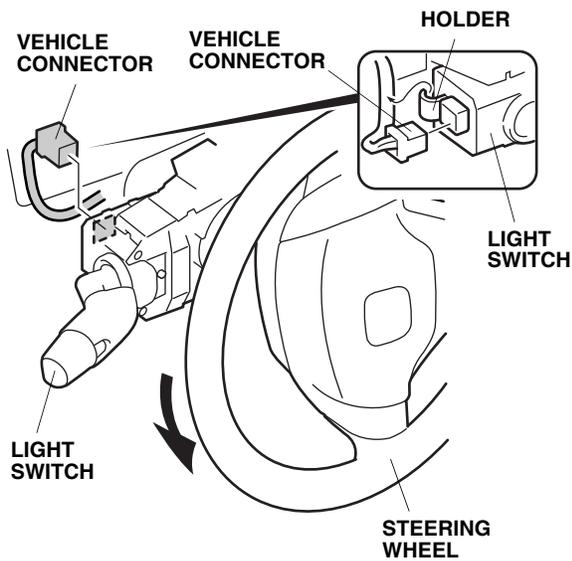


23. Remove two self-tapping screws from the light switch. While pushing the retaining tab, slide the light switch, and remove it from the steering column. Do not pull on the lever when removing the case. Do not damage the tab hole in the steering column.

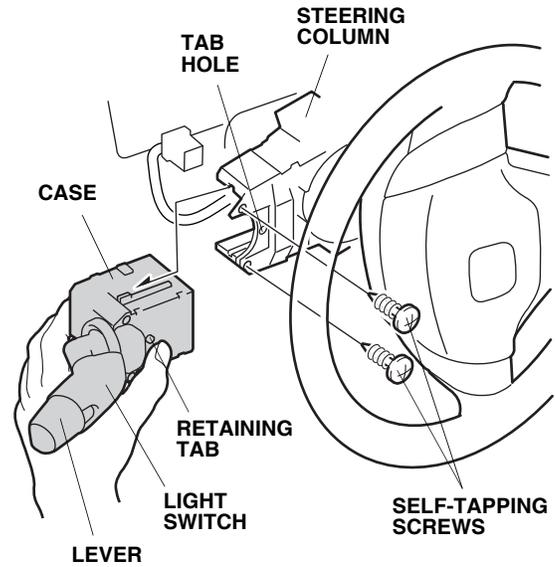

24. Holding the case in your hand, install the new lighting switch to the steering column. Install the two self-tapping screws. Do not push on the lever when installing the case. Push on the case and set the retaining tab in to the tab hole.

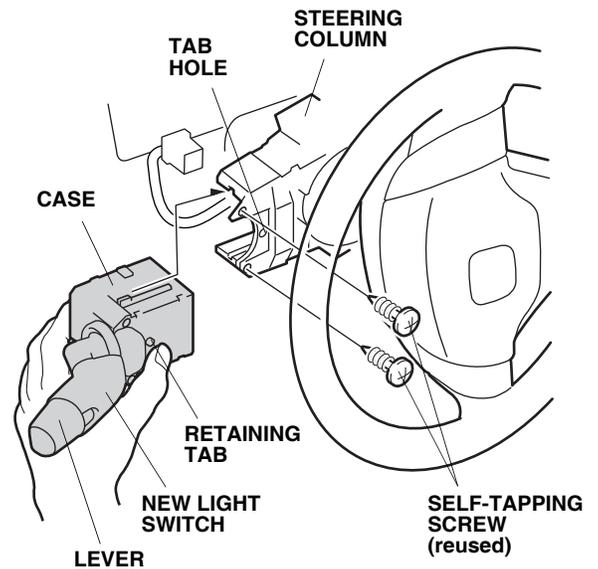

25. Plug the vehicle connector to the new light switch.


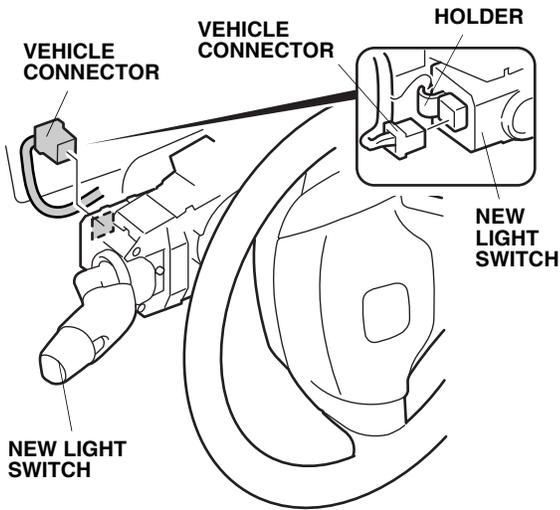


26. Check that all wire harness and cables are routed properly and that all connectors are plugged in.
27. Reinstall all removed parts.
28. Reconnect the negative cable to the battery.
29. Enter the anti-theft code for the audio unit and navigation system (if equipped), and reset the radio station presets.
30. Reset the clock on vehicles without navigation.

USE AND CARE

How to Operate the Fog Lights

 - Turn the headlight switch to the “D” position (headlights on low beam).
- Turn the fog light switch on (indicator is on).

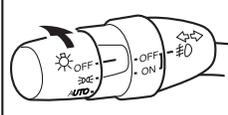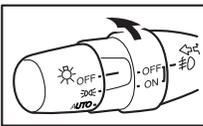
| | | | | | |
|---|-------------------------|-------------------------|---|---|------|
|  | | HEADLIGHT SWITCH | | | |
| | | OFF |  | AUTO/ | |
| | | | | Low | High |
|  | FOG LIGHT SWITCH | OFF | - | - | - |
| | | ON | - | - | ON |

NOTE: The fog light lenses can cloud when the outside temperature is cold; this is normal and should go away in warm weather.

- If the fog lights do not turn on, check the fuse and all the connectors, including the ground cable.


Fog Light Aiming Adjustment

31. Adjust the fog light:
- Adjust the aim according to local laws and regulations.
 - To adjust, turn the aiming adjustment screw in or out until the correct aim is obtained.

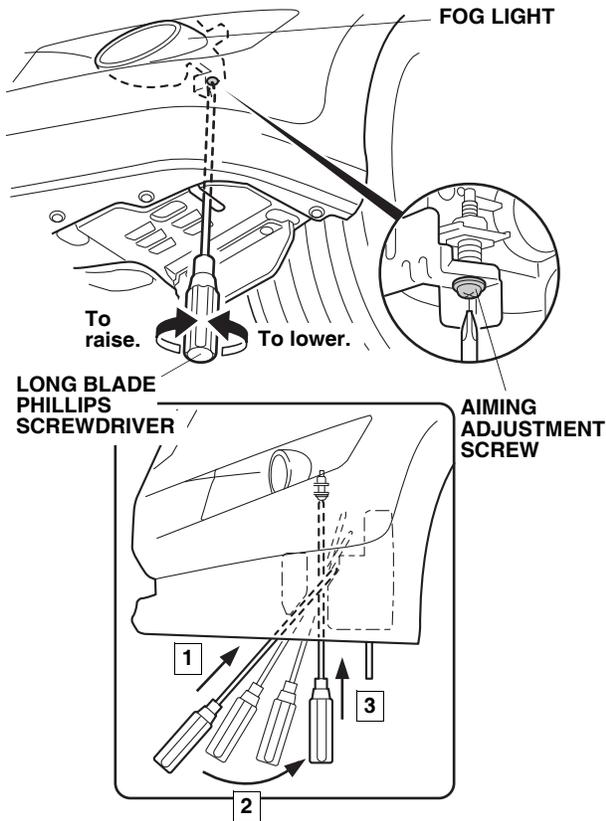


BULB REPLACEMENT


1. Turn the steering wheel counterclockwise. Remove two clips, and pull back the front inner fender.

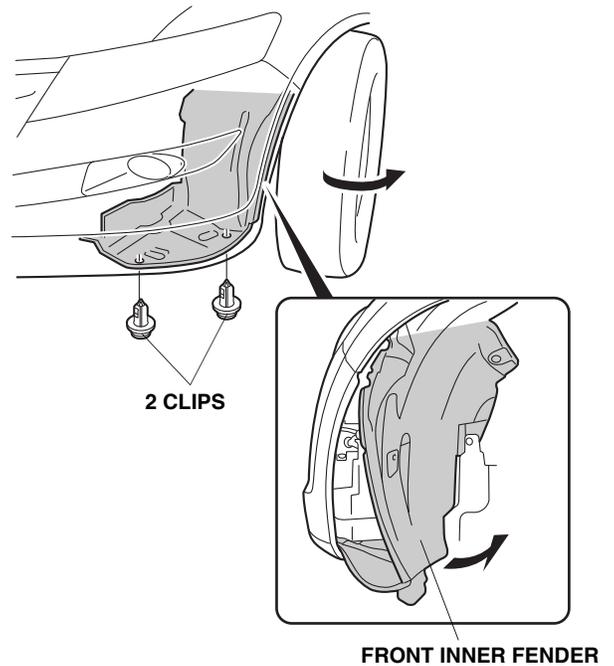

2. Insert your hand inside of the front inner fender pulled back in step 1. Unplug the fog light connector from the fog light, and remove the bulb by turning it counterclockwise.

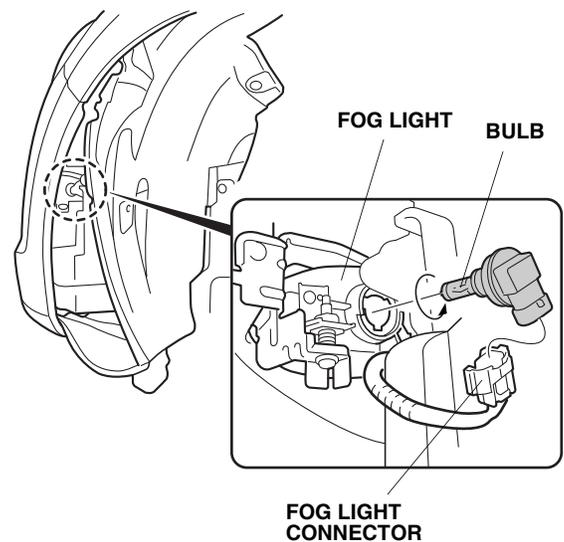

3. Install the new bulb to the fog light.
 - Use only a Genuine Honda halogen light bulb of specified wattage.
Rating: 12V 55W H11 Halogen Light Bulb
P/N 33165-S5A-003
 - Do not touch the bulb. Oily or greasy substances on the bulb can shorten its service life due to the heat produced when the bulb is turned on. If the bulb is accidentally touched, wipe it clean with a soft cloth that has been dampened with a denatured alcohol or a mild detergent solution.
 - When installing the new bulb, align the cutout on the fog light with the tab on the new bulb and turn the new bulb in completely. If not properly aligned, the fog light may annoy the oncoming driver's view.

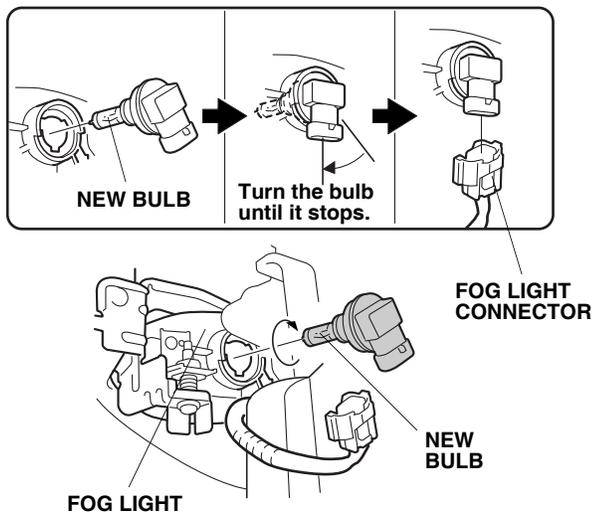

4. Reinstall the removed parts. Check that the wire harnesses is not pinched. Be sure to install the clips securely.
5. Check the operation of the fog light; adjust the aim if necessary.