



**PARTS LIST**

 
Right door edge guard

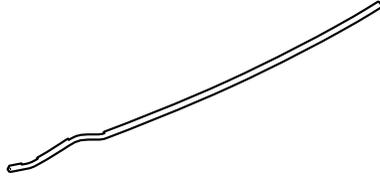

Left door edge guard

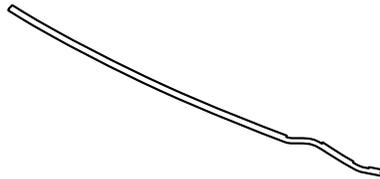


Seam sealant cutting tool

**TOOLS AND SUPPLIES REQUIRED**

Rubber mallet

Felt-tip pen

Touch-up paint

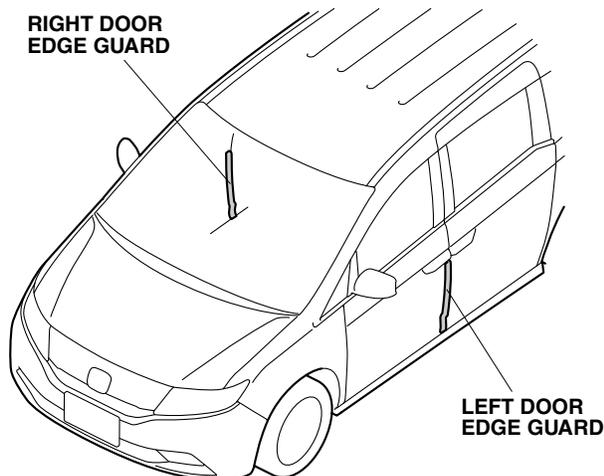
**Illustration of the Door Edge Guards on the Vehicle****INSTALLATION**

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

**NOTE:** These instructions show the right door edge guard being installed. The same procedure applies to installing the left door edge guard.


**Installing the Door Edge Guards**

1. Clean and wax the areas to be covered with a high quality paste wax.
2. Identify each door edge guard by holding it up to the door and matching its contour with the door edge.
3. Position the right door edge guard on the right front door while aligning it with the contour of the door. Mark the sealant at the top and bottom ends of the right door edge guard.

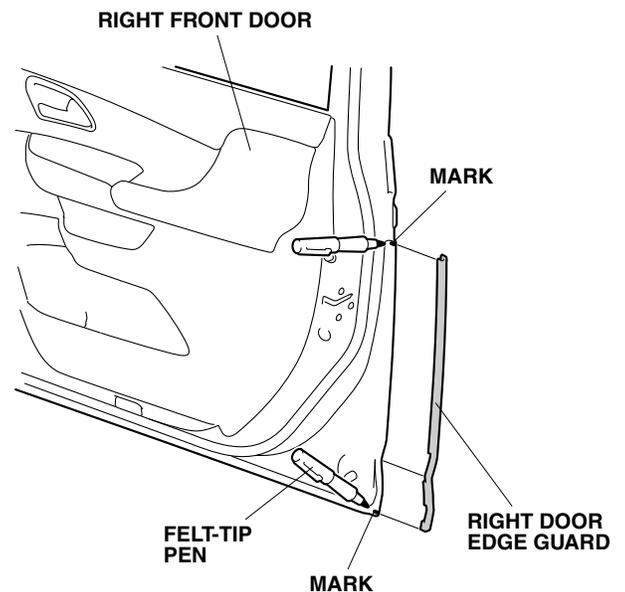


4. Remove the right door edge guard.


- Position the cutting edge of the seam sealant cutting tool against the door edge, and trim the seam sealant from mark to mark. The cutting tool cuts in only one direction.

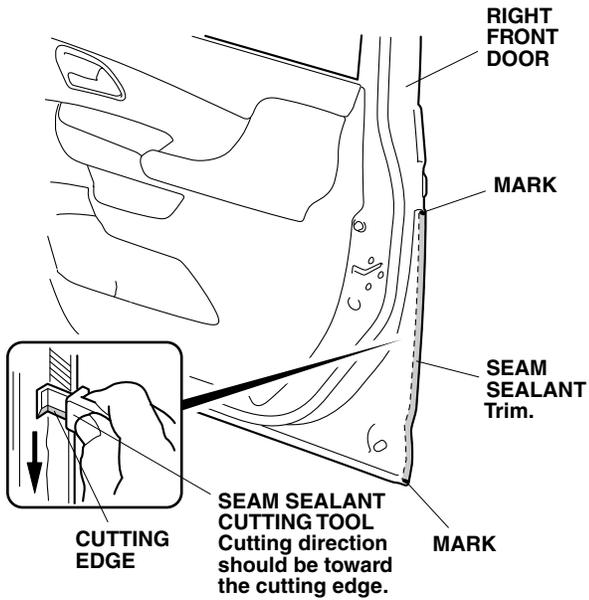

- Apply touch-up paint to the cut seam sealant area, and let it dry.
- Position the right door edge guard on the right front door edge and align it with the marks made in step 3.

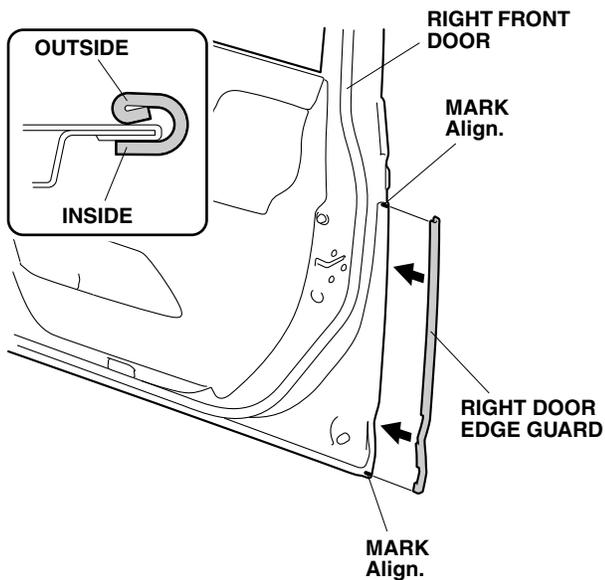

- Starting at the feature line, tap the right door edge guard into position with a series of light taps using a rubber mallet, then work up and down. Make sure the position of the right door edge guard is correct. Once in place, do not remove, reposition, or reinstall the right door edge guard.

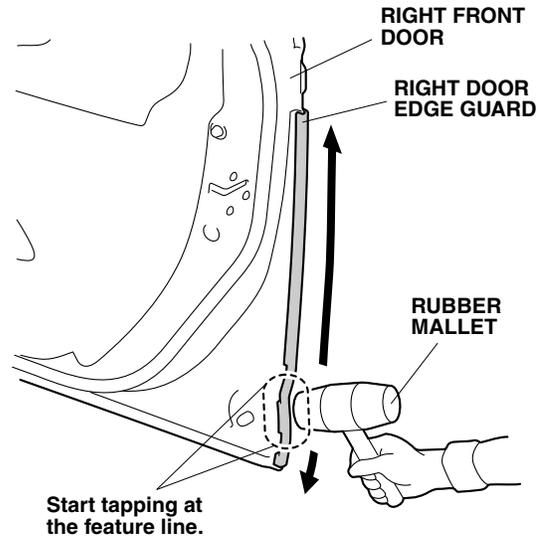

- Repeat steps 3 through 8 to install the door edge guard on the left side of the vehicle.