⊞ HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
SPLASH GUARDS **P/N 08P00-T7S-100**	**2016 HR-V**	**VERSION 1**
		Issue Date **APR 2015**

PARTS LIST

Left front splash guard

Right front splash guard

Left rear splash guard

Right rear splash guard

4   Self-tapping screws, 5 x 25 mm

2   Self-tapping screws, 5 x 18 mm

2   Spring nuts

TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

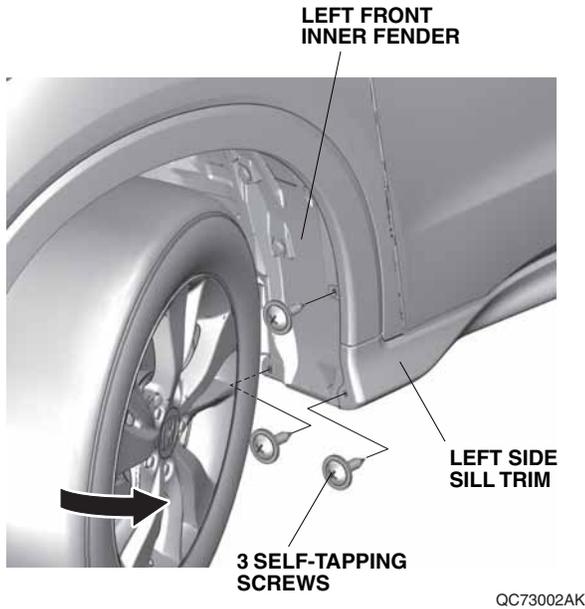Stubby Phillips screwdriver

High-quality paste wax

INSTALLATION

> **Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

• Be careful not to damage the paint finish.

• These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.

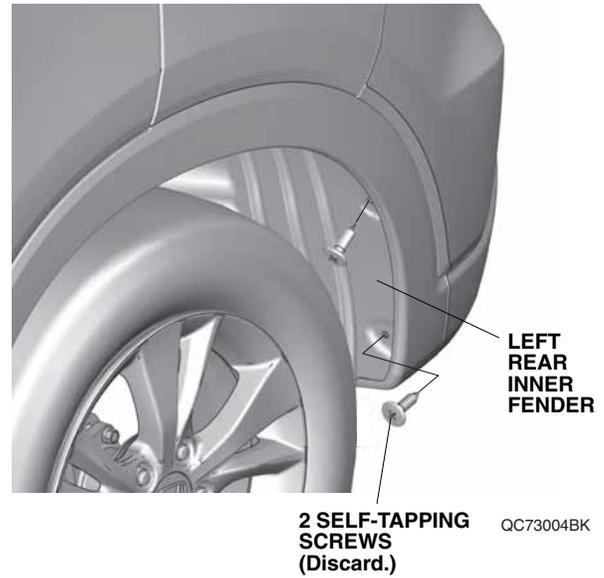• Clean and wax the areas to be covered with a high-quality paste wax.

AII01797-10 (1504)

1. Turn the steering wheel fully counterclockwise.

LEFT FRONT INNER FENDER

LEFT SIDE SILL TRIM

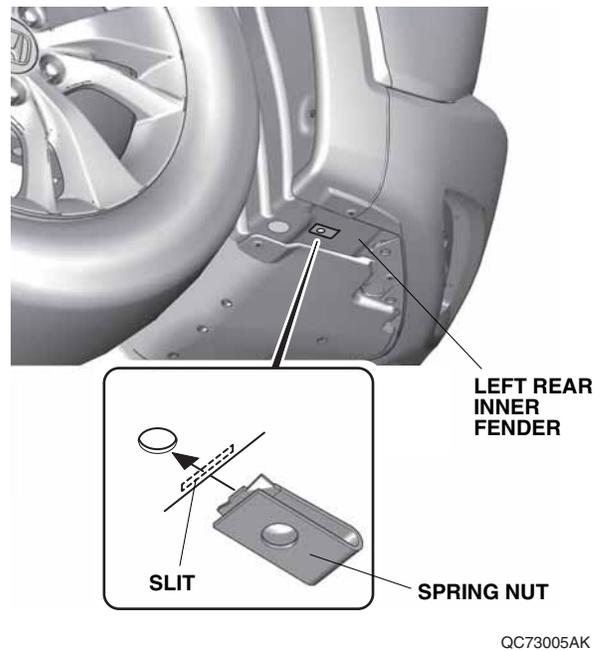**3 SELF-TAPPING SCREWS**

QC73002AK

2. Remove the three self-tapping screws.

3. Secure the left front splash guard with three self-tapping screws in the order shown below.
NOTE: Make sure there is no gap between the left front splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.

2

3

1

LEFT FRONT SPLASH GUARD

3 SELF-TAPPING SCREWS (reused)

QC73003AK

4. Remove the two self-tapping screws.

LEFT REAR INNER FENDER

2 SELF-TAPPING SCREWS (Discard.)

QC73004BK

5. Install one spring nut on the left rear inner fender as shown.

LEFT REAR INNER FENDER

SLIT

SPRING NUT

QC73005AK

AII01797-10 (1504)

6. Secure the left rear splash guard with two 5 x 25 mm self-tapping screws and one 5 x 18 mm self-tapping screw in the order shown below.
NOTE: Make sure there is no gap between the left rear splash guard and the vehicle body. If there is a gap, loosen the self-tapping screws, hold the splash guard against the body, and retighten the screws.
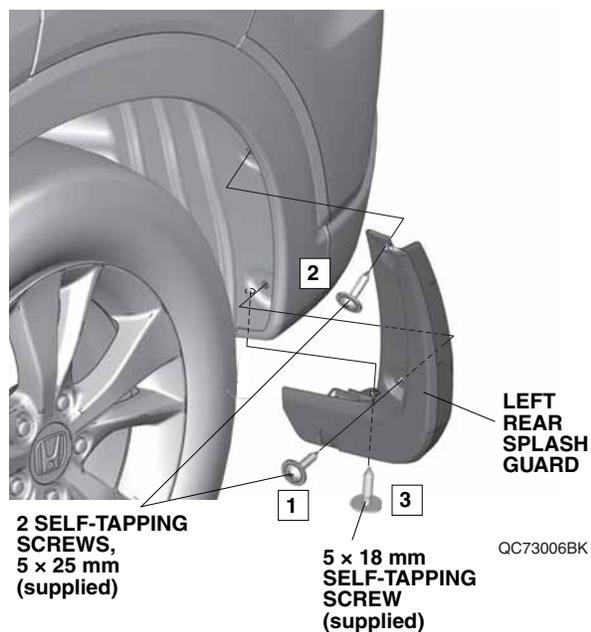

LEFT REAR SPLASH GUARD

2 SELF-TAPPING SCREWS, 5 × 25 mm (supplied)

5 × 18 mm SELF-TAPPING SCREW (supplied)

QC73006BK

7. Turn the steering wheel fully clockwise, and repeat steps 2 through 6 to install the right splash guards.

AII01797-10 (1504)