

PARTS LIST

Exhaust pipe finisher



Flange bolt



TOOLS AND SUPPLIES REQUIRED

Ratchet


10 mm Socket

Torque wrench


INSTALLATION

NOTE: Allow the exhaust pipe to cool down before installing the accessory.

- Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Partially thread the flange bolt into the exhaust pipe trim.

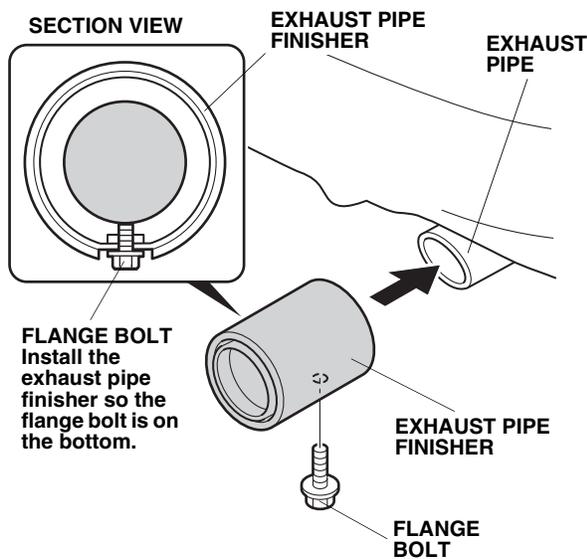

- Slide the exhaust pipe trim onto the exhaust pipe until it bottoms against the exhaust pipe.

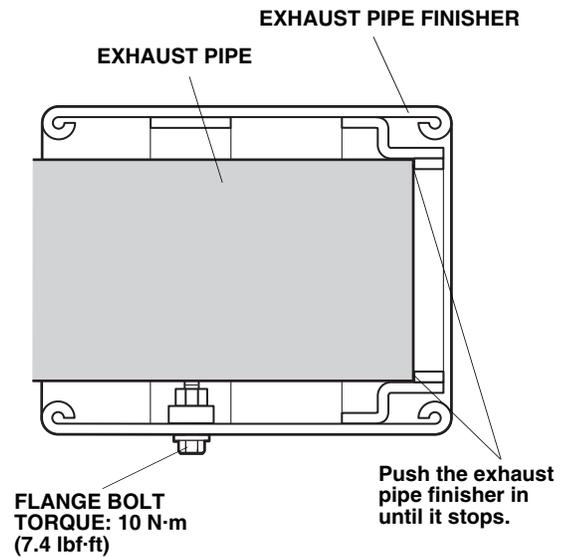

- While pushing the exhaust pipe finisher firmly against the exhaust pipe, torque the flange bolt to 10 N·m (7.5 lbs-ft).
- Start the engine, and rev it up a few times. Listen for vibrations from the exhaust pipe trim, and adjust if necessary.