

HONDA INSTALLATION INSTRUCTIONS

Accessory
EXHAUST PIPE FINISHER
P/N 08F53-TK6-100

Application
2010 FIT

Publications No.
All 42184
Issue Date
AUG 2009

PARTS LIST

Exhaust pipe finisher



Flange bolt




TOOLS AND SUPPLIES REQUIRED

Ratchet wrench
Socket (10 mm)
Torque wrench


INSTALLATION

NOTE: Allow the exhaust pipe to cool down before installing the accessory.

- Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Partially thread the flange bolt into the exhaust pipe trim.

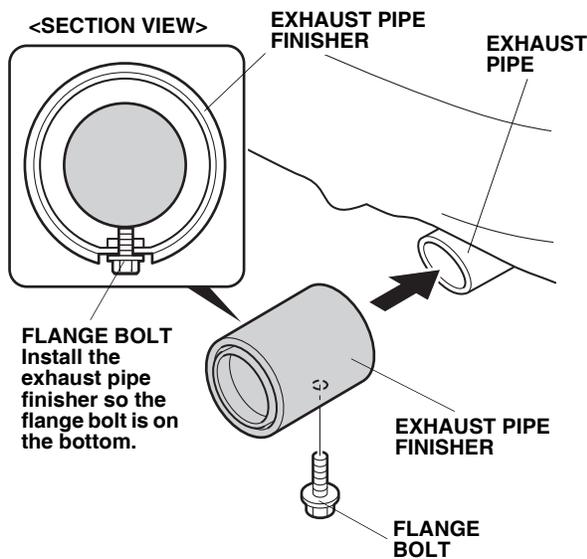

- Slide the exhaust pipe trim firmly onto the exhaust pipe until it bottoms.

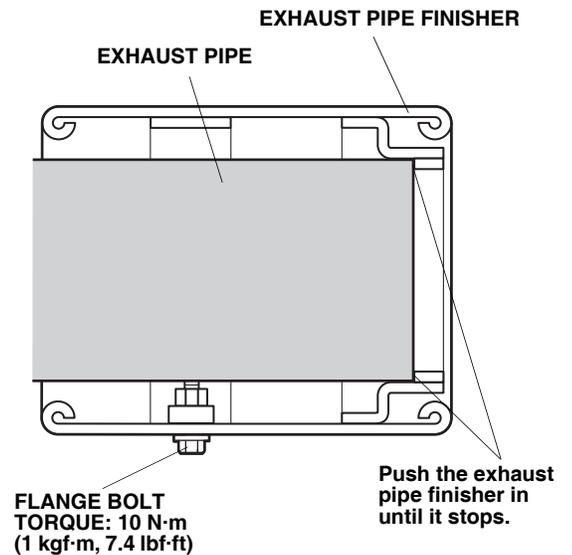

- While pushing the exhaust pipe trim firmly against the pipe, torque the flange bolt to 10 N·m (7.5 lbf·ft).
- Start the engine and rev it a few times. Listen for vibrations or abnormal noise from the exhaust pipe trim, and adjust it if necessary.