











INSTALLATION INSTRUCTIONS

Accessory
**ILLUMINATED
DOOR SILL TRIMS**
P/N 08E12-SZT-100

Application
2011 CR-Z

Publications No.
All 43565
Issue Date
AUG 2010


PARTS LIST

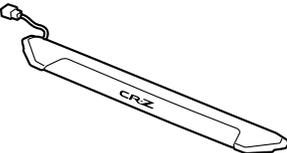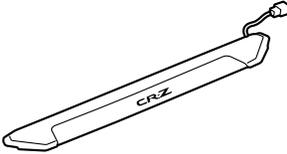- Left illuminated door sill trim 
- Right illuminated door sill trim 
- Illumination harness 
- 13 Wire ties 
- Clear protective tape 
- 2 Aluminum tapes 
- Fuse label 
- Wire tie with clip 
- 2 Wire clips 
- Alcohol swab 

TOOLS AND SUPPLIES REQUIRED

- Shop towel
- Trim Tool Set (SOJATP2014)
(Available through the Honda Tool and Equipment program. On the iN, click on: Service/Service Bay/Tool and Equipment Program, then enter the number under "Search." Or call 888-424-6857.)
- Masking tape
- Utility knife
- Needle nose pliers
- Diagonal cutters
- Tape measure
- Scissors
- 10 mm Open end wrench
- Isopropyl alcohol

Illustration of the Illuminated Door Sill Trims Installed on the Vehicle

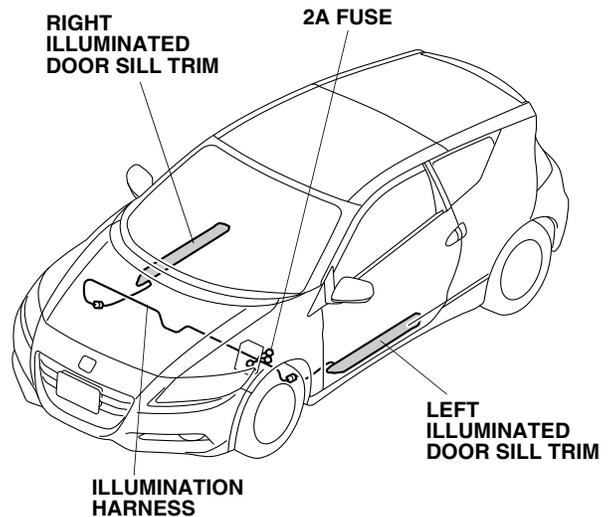


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the audio unit and the navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery.


- Remove the passenger's under cover (four clips and two pins). If equipped with footwell lights, release the clip, and unplug the connector.

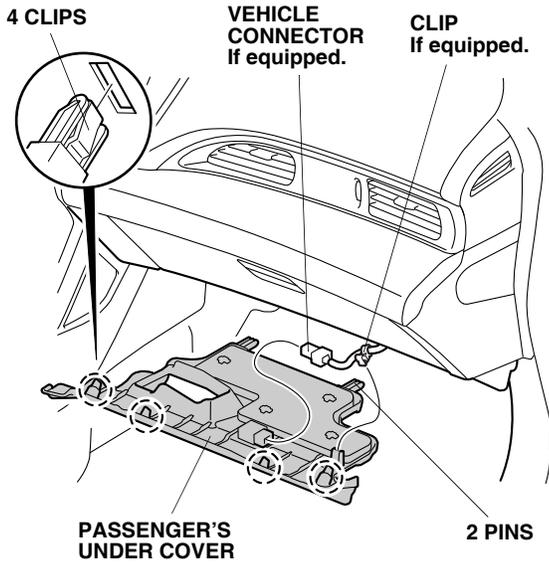


- Pull away the door seal from around the passenger's kick panel, and remove the passenger's kick panel (two clips and three retaining tabs).

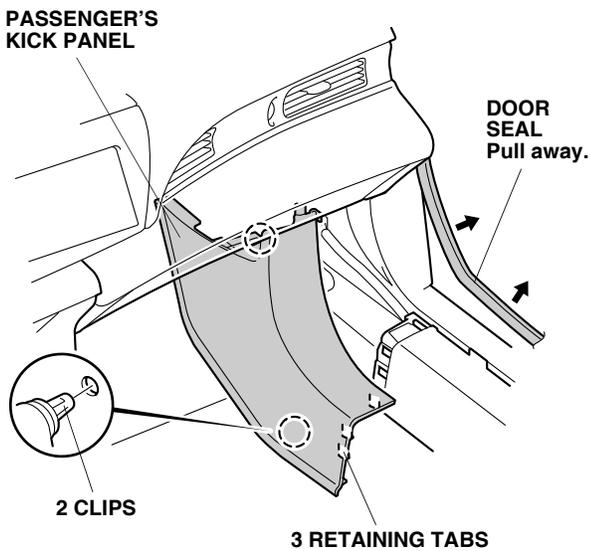


- Remove the fuse box cover (four retaining tabs).

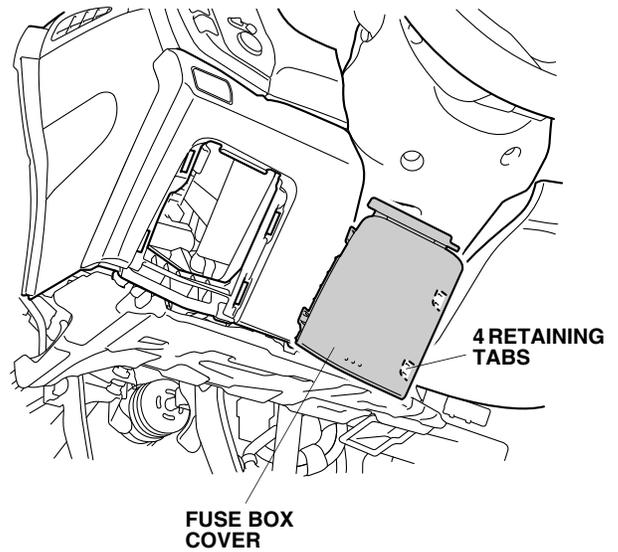

- Remove the driver's under cover (turn the knob, two clips, and one pin).

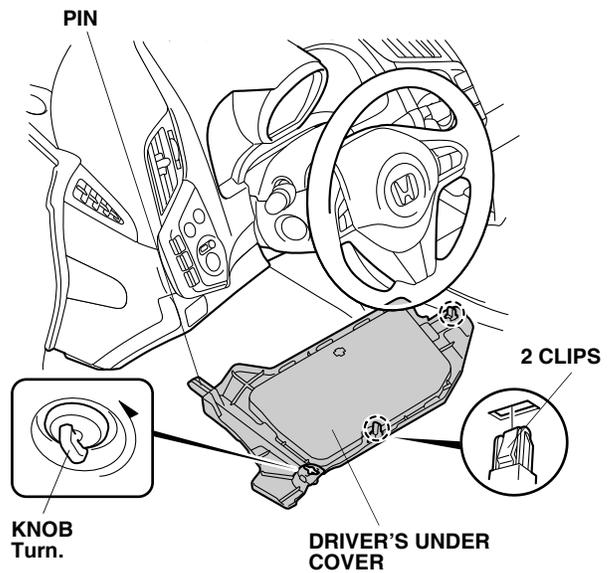


- Pull away the door seal from around the driver's kick panel, and remove the driver's kick panel (two clips and three retaining tabs). If equipped with footwell lights, unplug the vehicle connector.

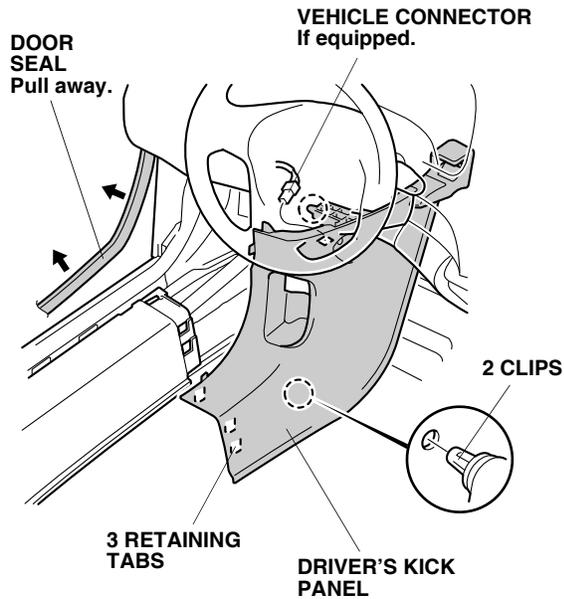


Installing the Illuminated Door Sill Trims

- Using scissors, cut the clear protective tape into five pieces.

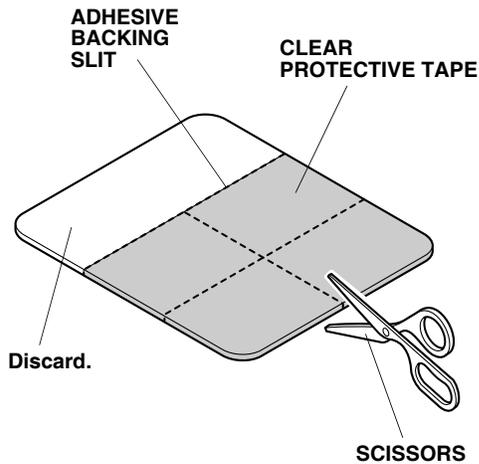


- Pull away the door seal from around the door sill trim.

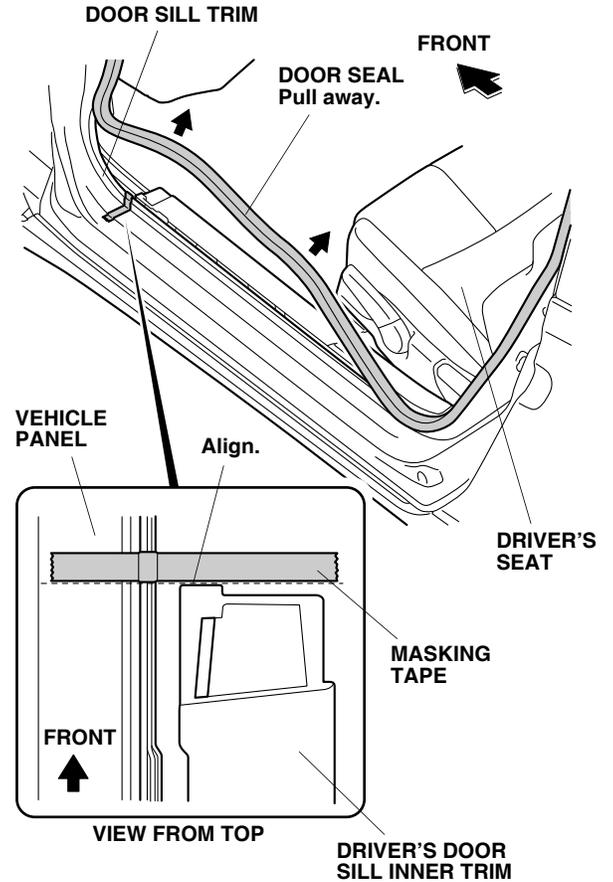


- Attach a piece of masking tape to the vehicle panel even with the front edge of the driver's door sill inner trim.

- Align the left illuminated door sill trim with the masking tape.
NOTE: The left illuminated door sill trim is marked "L".

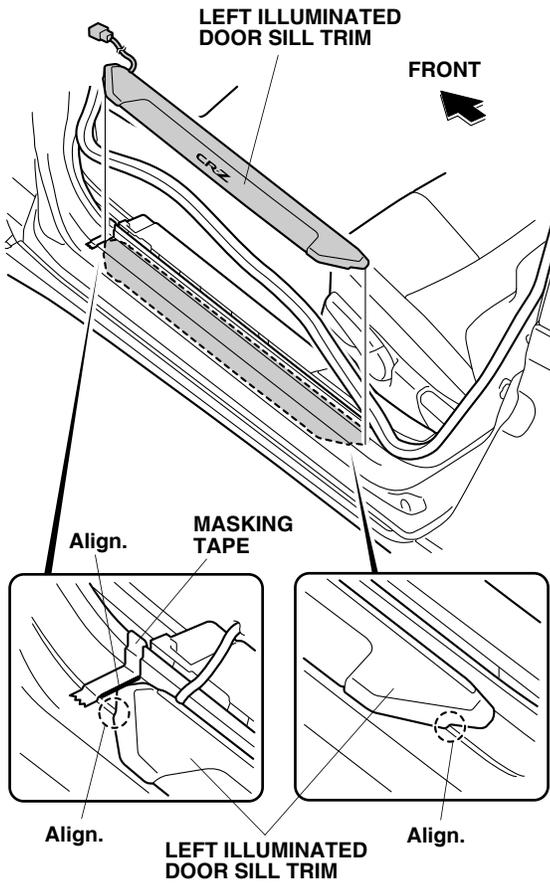


- Reinstall the door seal.

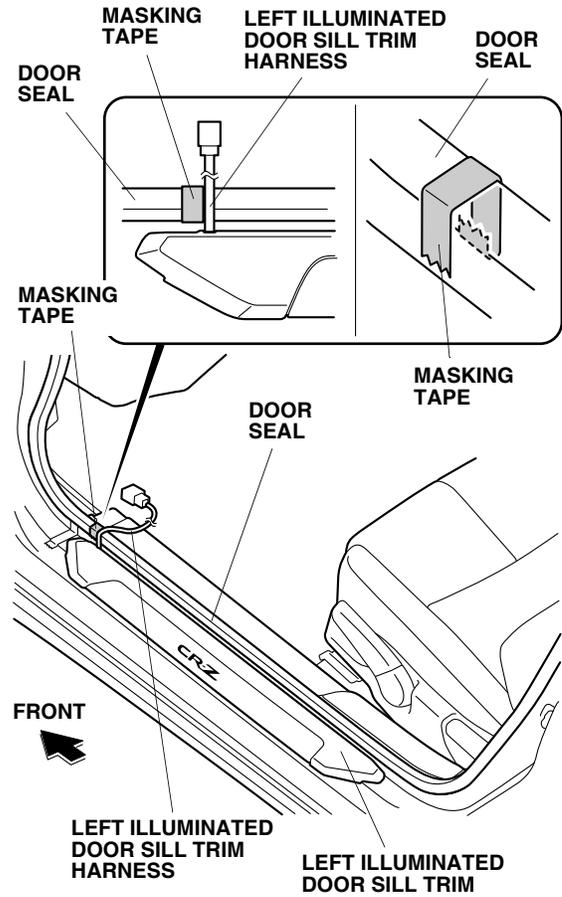


- Route the left illuminated door sill trim harness over the door seal, and attach a piece of masking tape to the door seal to mark the illuminated door sill trim harness location.

- Pull away the door seal at the masking tape from around the door sill trim.

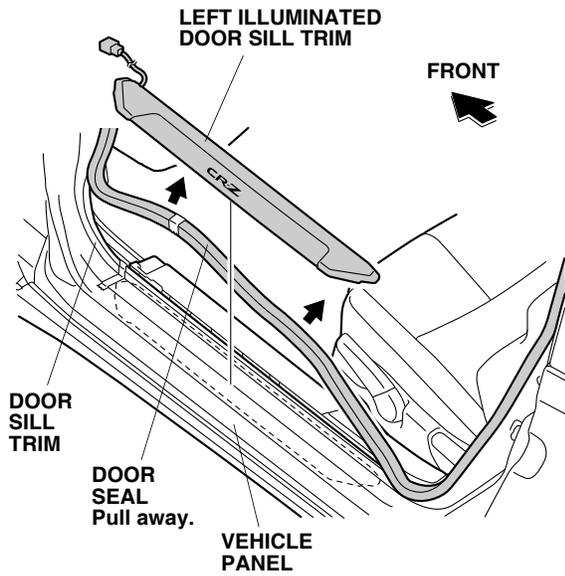


- Remove the left illuminated door sill trim from the vehicle panel.
- Fold back the door seal as shown.

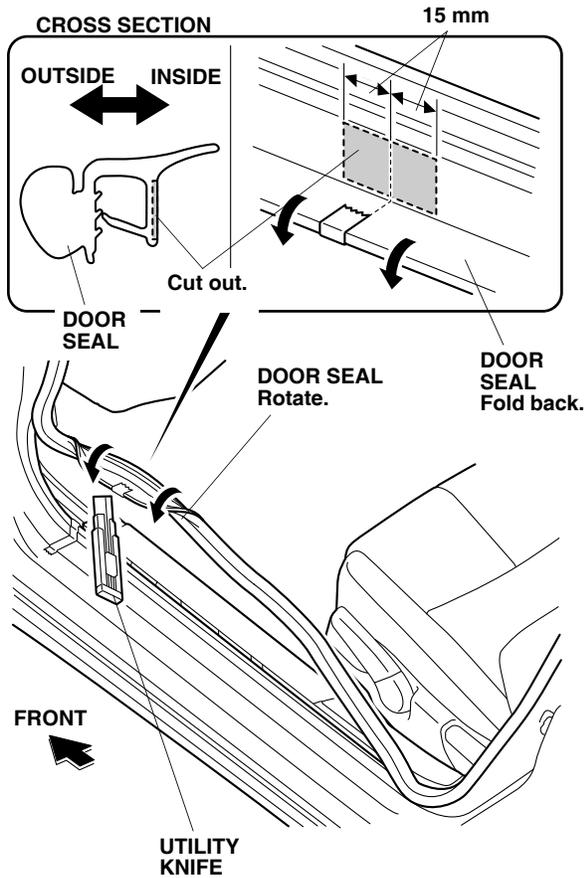


- Using a utility knife, make a slit in the door seal rubber to expose the small metal plates inside the rubber seal.

- Using needle nose pliers, remove three metal plates from the door seal.

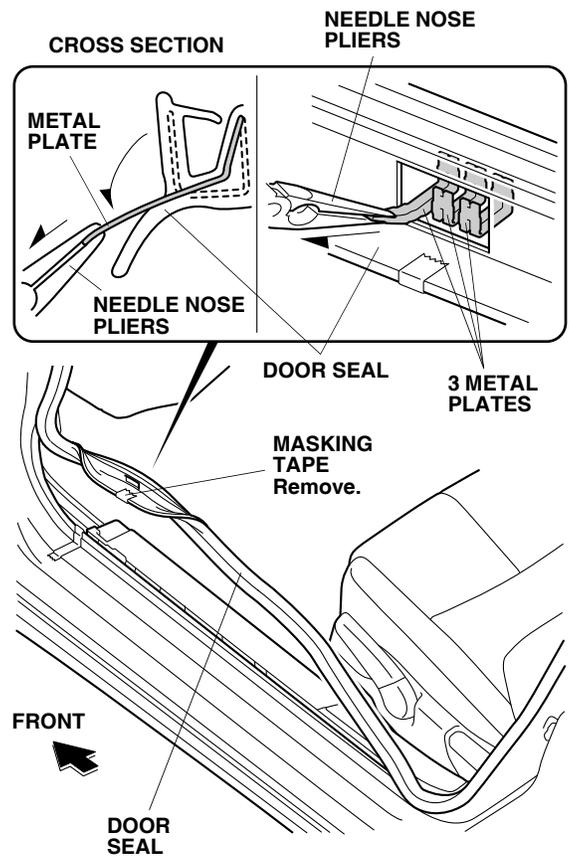


- Remove the masking tape from the door seal.


20. Lift the front edge of the driver's door sill inner trim.
NOTE: Do not fully remove the driver's door sill inner trim.

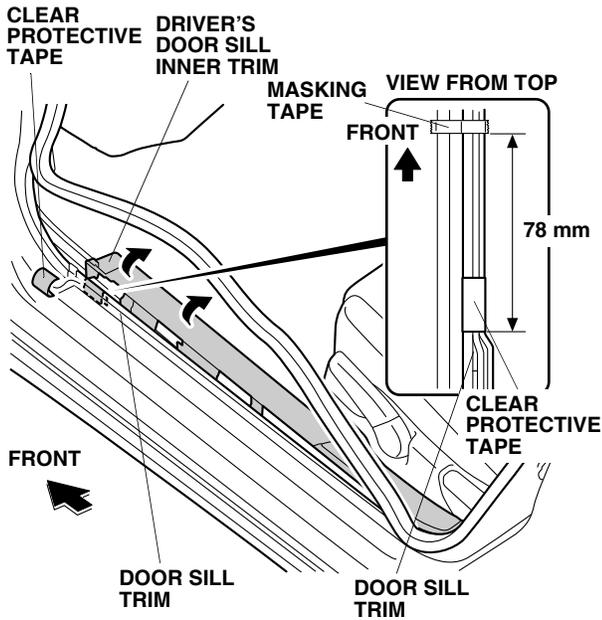


21. Using isopropyl alcohol on a shop towel, thoroughly clean the body where the clear protective tape will attach.
22. Attach one clear protective tape to the door sill trim in the area shown.
23. Peel back approximately 1½ to 2 inches of the adhesive backings from each of the outer adhesive tapes, and tape the ends to the front surface of the left illuminated door sill trim. Remove the remaining pieces of the adhesive backings from the left illuminated door sill trim.

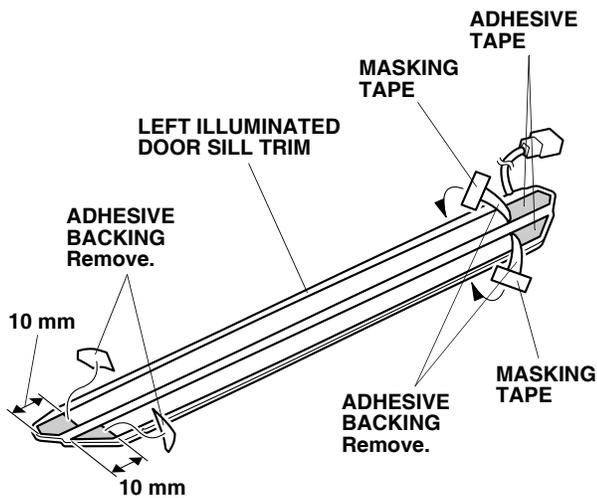


24. Using the alcohol swab, thoroughly clean the area where the left illuminated door sill trim will attach.

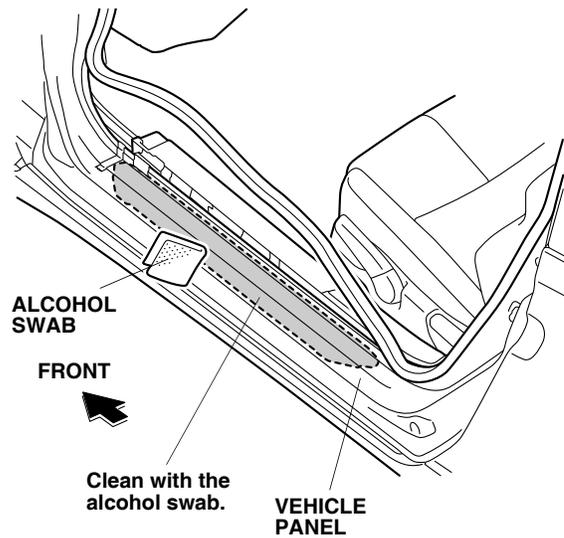

25. Align the left illuminated door sill trim with the masking tape.

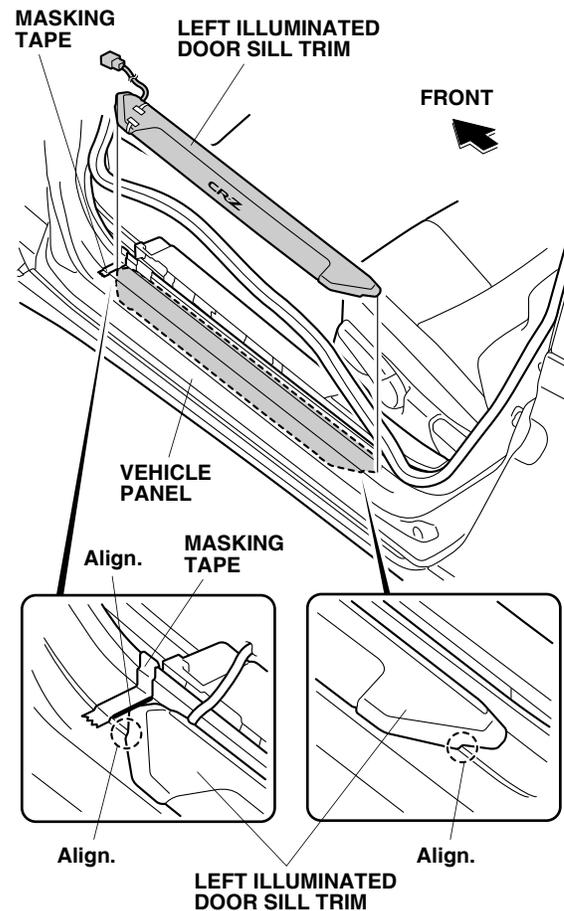


26. While applying light pressure against the left illuminated door sill trim, carefully remove the adhesive backings.

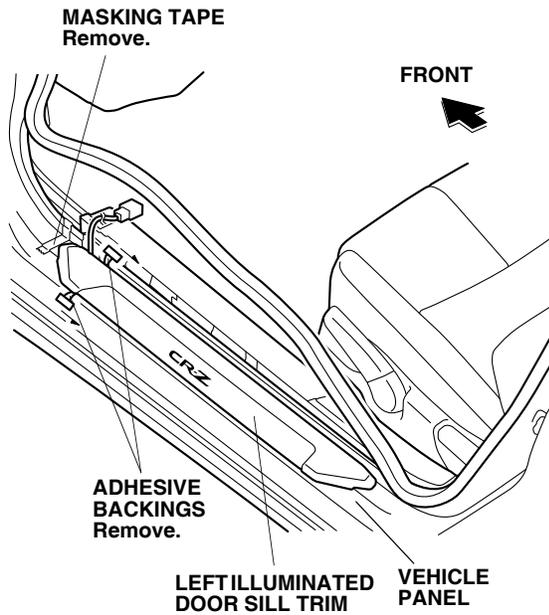


27. Using the palm of your hand, firmly press the left illuminated door sill trim against the vehicle panel.
28. Remove the masking tape.


29. Attach the wire clip to the clear protective tape you installed.

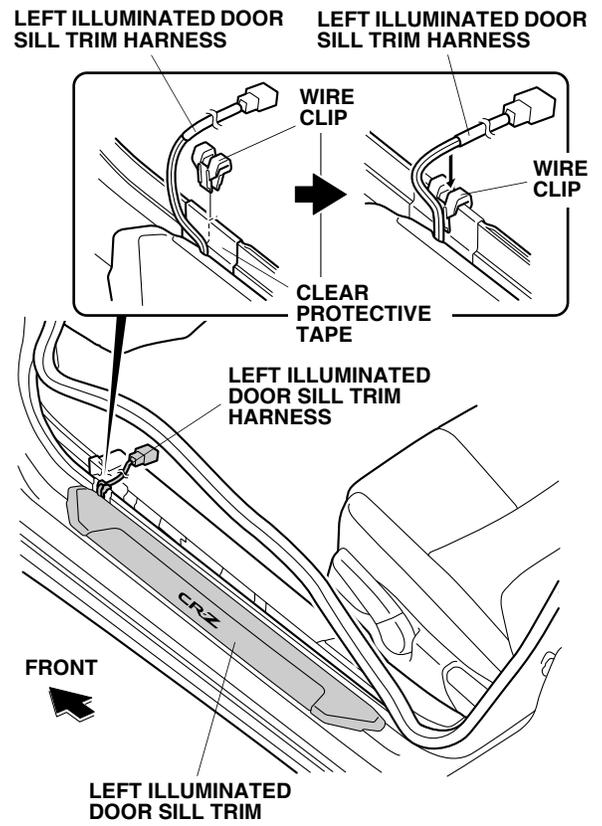


30. Route the left illuminated door sill trim harness through the wire clip as shown.
31. Install one additional clear protective tape over the wire clip as shown.

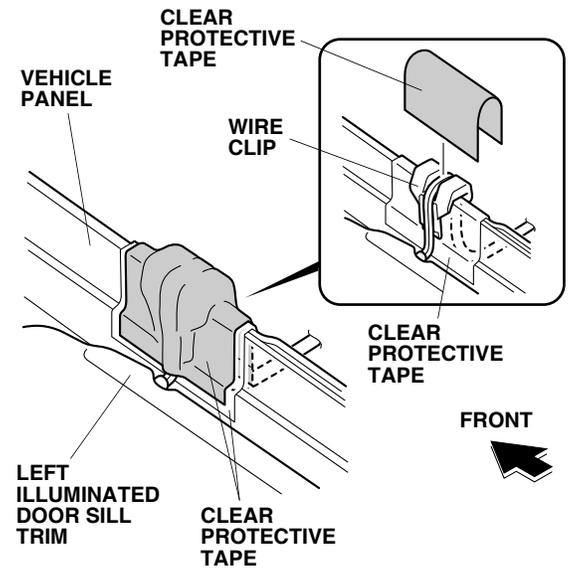

32. Route the left illuminated door sill trim harness through the driver's door sill inner trim.

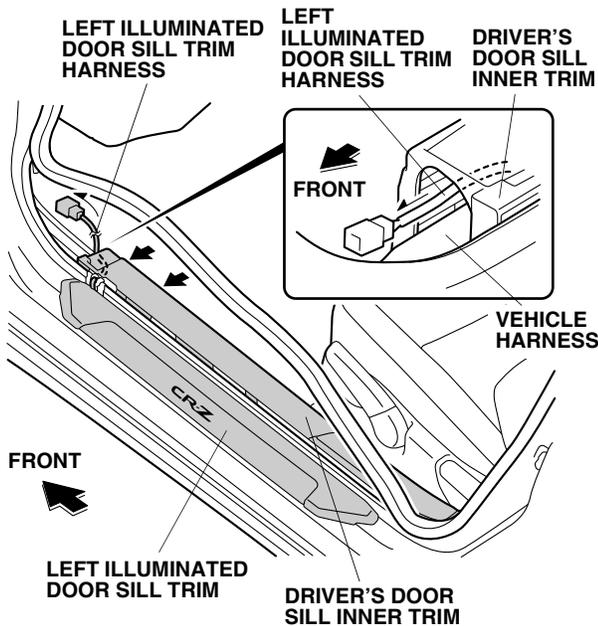


33. Reinstall the driver's door sill inner trim and door seal.
34. Repeat steps 9 through 33 to install the right illuminated door sill trim on the right side of the vehicle.
35. Route the left illuminated door sill trim harness along the vehicle harness, and secure it to the vehicle harness with two wire ties.

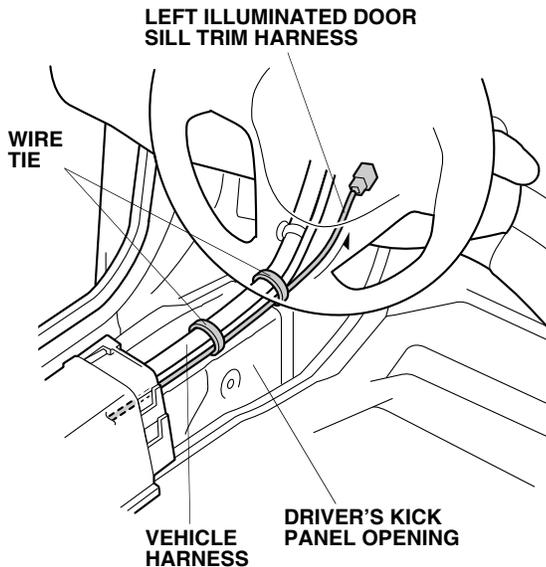


Routing the Illumination Harness

36. Using isopropyl alcohol on a shop towel, thoroughly clean the area where the fuse label will attach. Attach the fuse label (2A STEP ILLUMI) to the fuse case on the illumination harness.

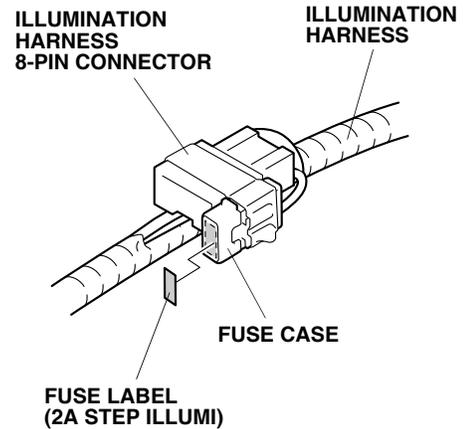


37. Unplug the vehicle 8-pin connector or other accessory 8-pin connector (if equipped) from the fuse box, and plug the illumination harness 8-pin connector into the fuse box.

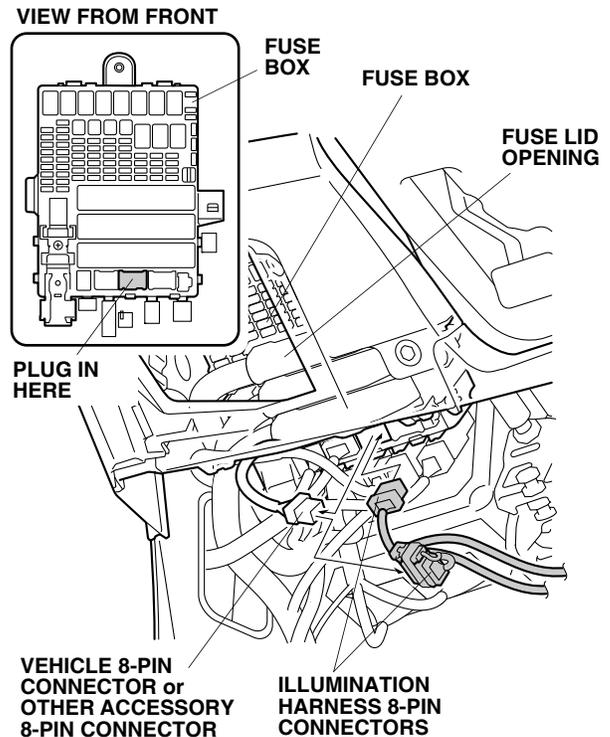


38. Plug the vehicle 8-pin connector or other accessory 8-pin connector into the illumination harness 8-pin connector.

39. Route the illumination harness 2-pin connector down, and plug it into the left illuminated door sill trim 2-pin connector.

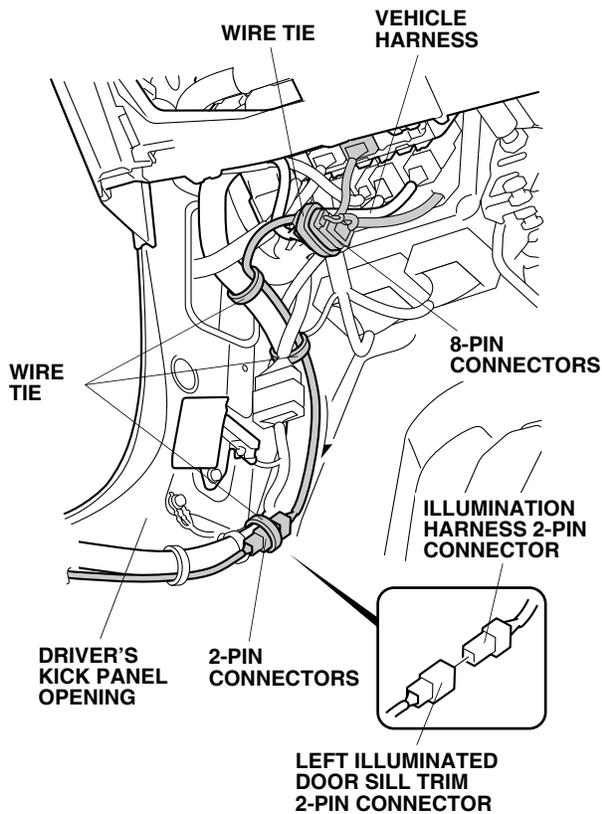


40. Secure the 8-pin connectors to the vehicle harness with one wire tie.
41. Secure the illumination harness and 2-pin connectors to the vehicle harness with three wire ties.


42. Route the illumination harness along the instrument panel.

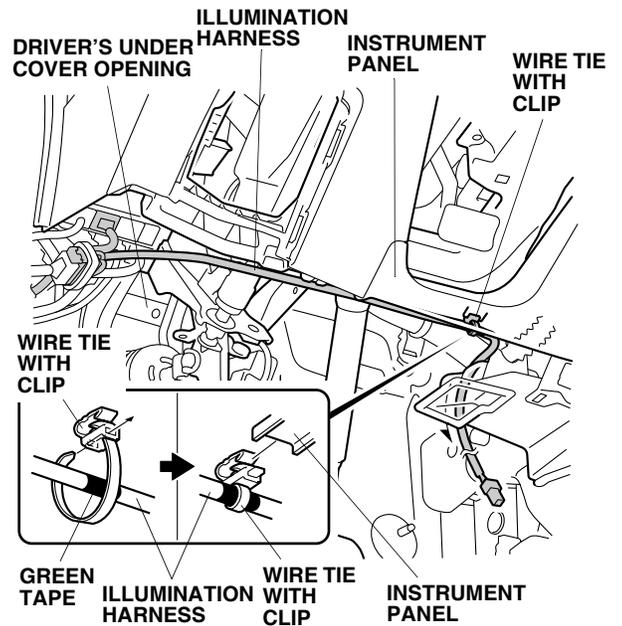

43. Attach one wire tie with clip to the green tape on the illumination harness, and secure it to the instrument panel.
44. Secure the illumination harness to the instrument panel with one wire tie. Make sure to secure the illumination harness in the correct position and orientation.

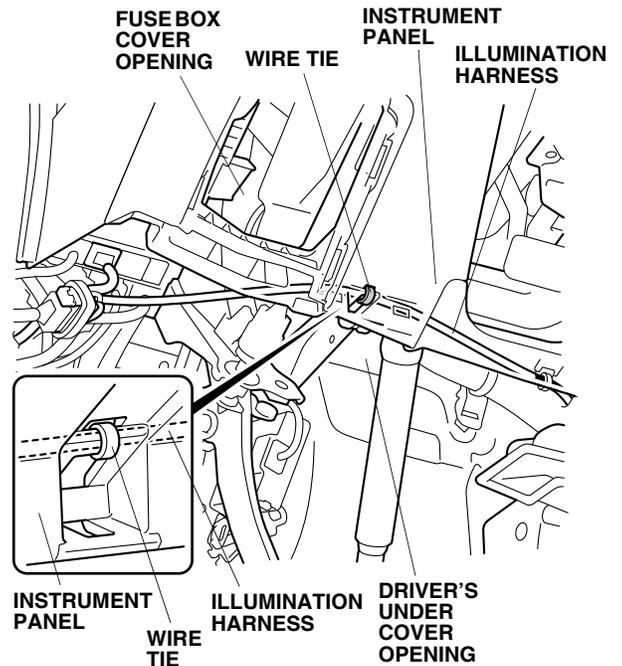


45. Route the illumination harness to the passenger side of the vehicle as shown.

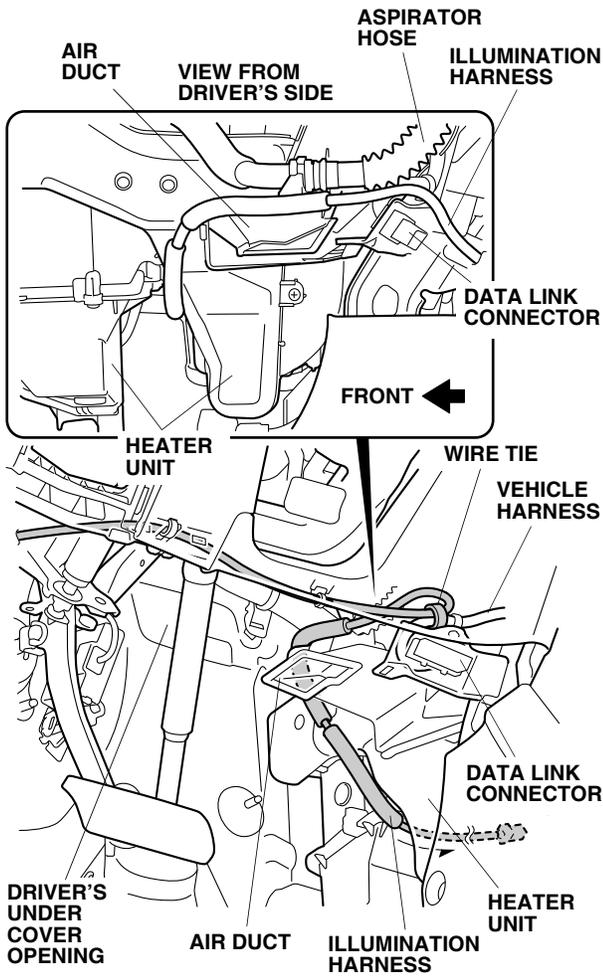


46. Secure the illumination harness to the vehicle harness with one wire tie.

47. Route the illumination harness along the blower harness.

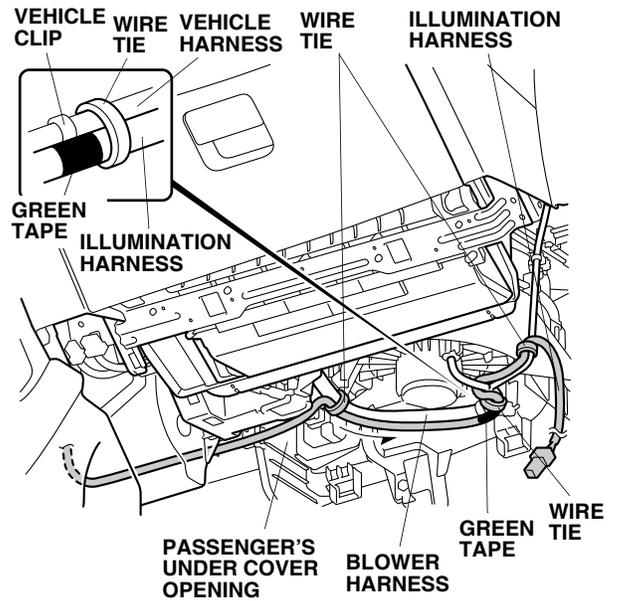


48. At the green tape, secure the illumination harness to the vehicle clip, and secure the illumination harness to the blower harness with one wire tie.
49. Secure the illumination harness to the vehicle harness with two additional wire ties.
50. Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the aluminum tape will attach.

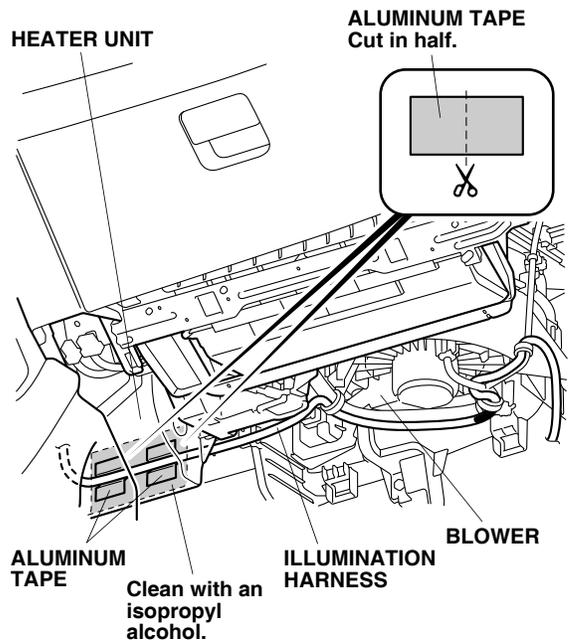


51. Using scissors, cut one aluminum tape in half. Secure the illumination harness to the back of the heater unit with two pieces of aluminum tape as shown.

- Route the illumination harness to the passenger's kick panel opening.

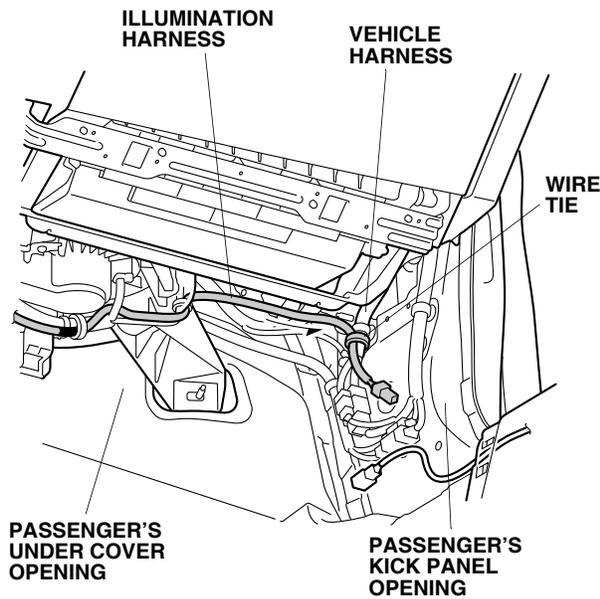


- Secure the illumination harness to the vehicle harness with one wire tie.
- Route the right illuminated door sill trim harness, and plug the illumination harness 2-pin connector into the right illuminated door sill trim 2-pin connector.

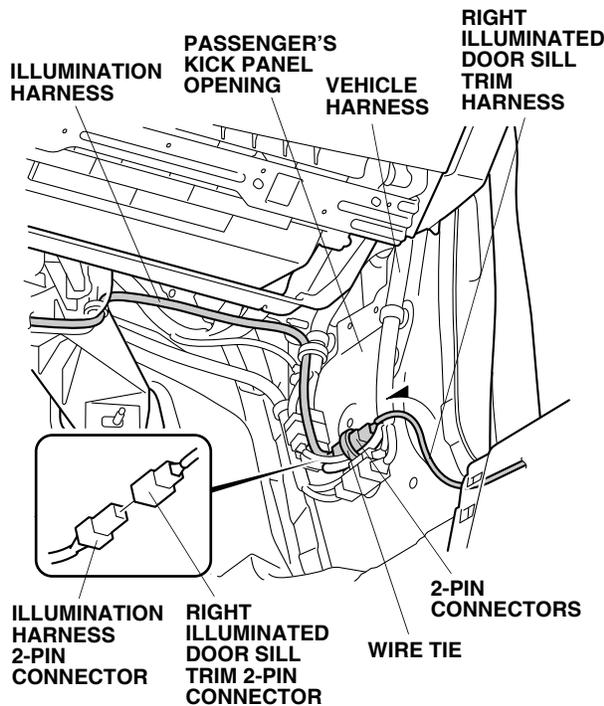

- Secure the 2-pin connectors to the vehicle harness with one wire tie.

- Using isopropyl alcohol on a shop towel, thoroughly clean the areas where the aluminum tapes will attach.

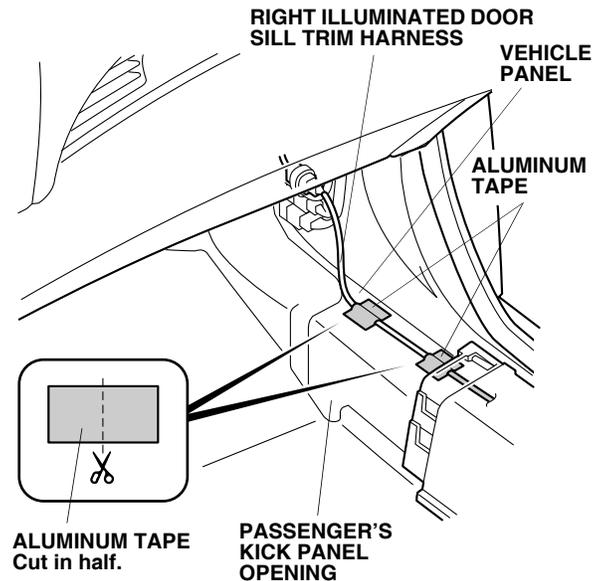

- Using scissors, cut one aluminum tape in half. Secure the illuminated door sill trim harness to the vehicle panel with two pieces of aluminum tape as shown.
- Check that all wire harnesses and cables are routed properly and that all connectors are plugged in.
- Reinstall all removed parts.
- Reconnect the negative cable to the battery.
- Enter the customer's anti-theft code for the audio and navigation system (if equipped), and reset the radio station presets.
- Reset the clock.
- If the IMA battery level gauge display is at zero, start the engine, and hold it between 3,500 rpm and 4,000 rpm (without load) in P or N position until the IMA battery level gauge shows at least half-charged.
- Check to see that the light comes on when each door is opened.