



**PARTS LIST**


Right front door edge film

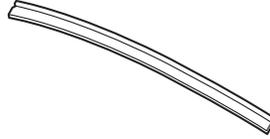


Left front door edge film

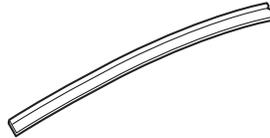

Right rear door edge film

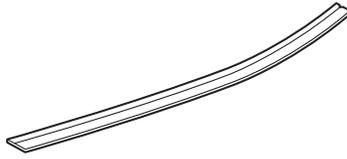


Left rear door edge film

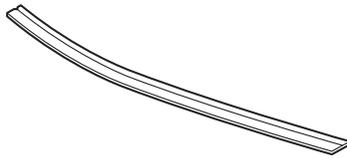


Applicator



Soft sleeve

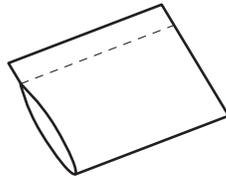

2 Alcohol swabs

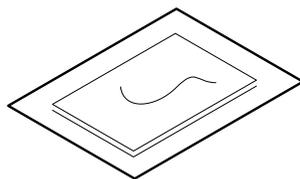**TOOLS AND SUPPLIES REQUIRED**

Shop towel

Spray bottle


3M Protective tape application solution

**INSTALLATION****NOTE:**


- These instructions show the right door edge films being installed. The same procedure applies to installing the left door edge films.
- Identify each door edge film by referring to the identification marks.
- Be careful not to damage the body paint finish.
- The door edge films should be installed only if the ambient air temperature is 15°C (60°F) or above. Heat the door edge films and bonding surfaces with a hair dryer set on LOW if the ambient air temperature is lower.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.

## Installing the Front Door Edge Film

1. Open the right front door.

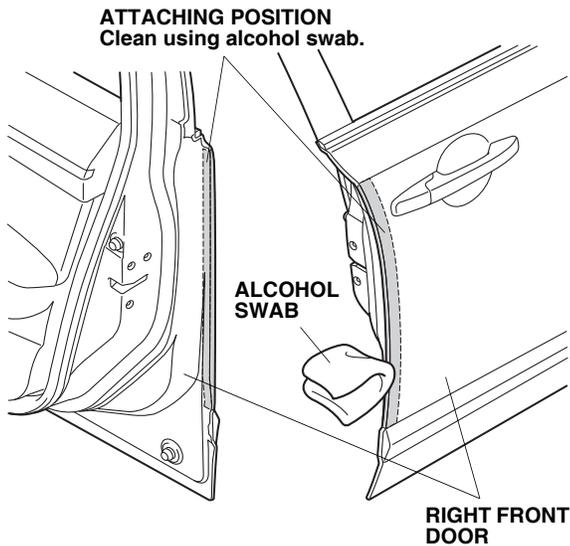


2. Using an alcohol swab, thoroughly clean the area where the right front door edge film will attach.
3. Close the right front door.

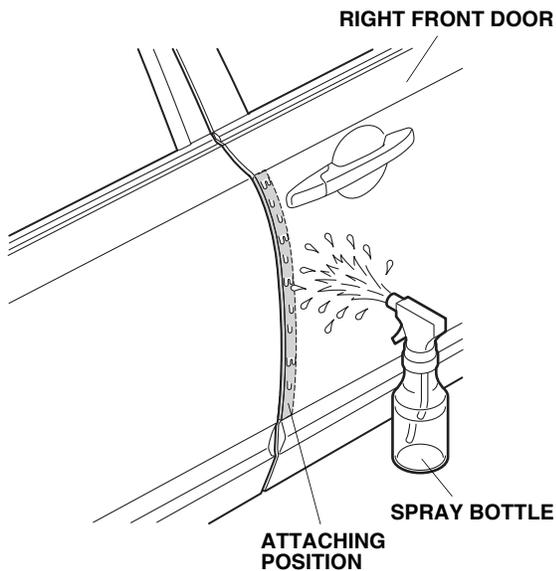


4. Using a spray bottle with 3M protective tape application solution, spray the area where the right front door edge film will attach.  
**NOTE:** Spray only the outside surface of the door where the right front door edge film will attach.

5. Open the right front door.
6. Peel back an end of the backing on the backside of the right front door edge film partway, and align the V-notch in the right front door edge film with the end of the character line on the upper part of the right front door.

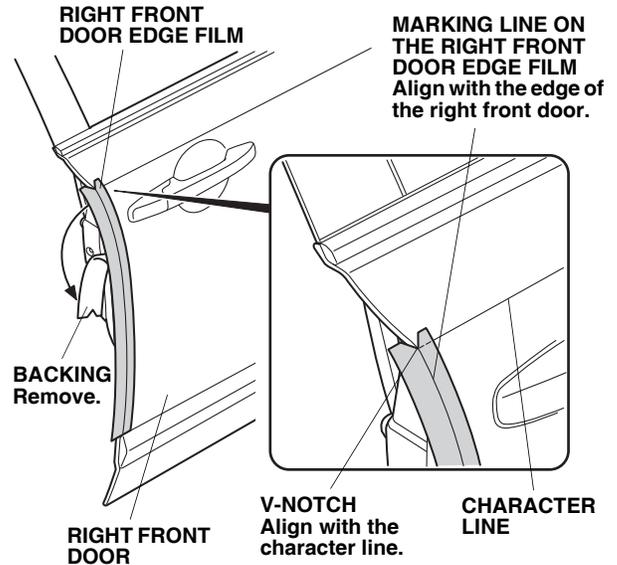


7. While slowly removing the backing on the backside of the right front door edge film, attach the right front door edge film to the right front door securely. Align the marking line on the right front door edge film with the edge of the right front door.


8. Insert the applicator into the soft sleeve.

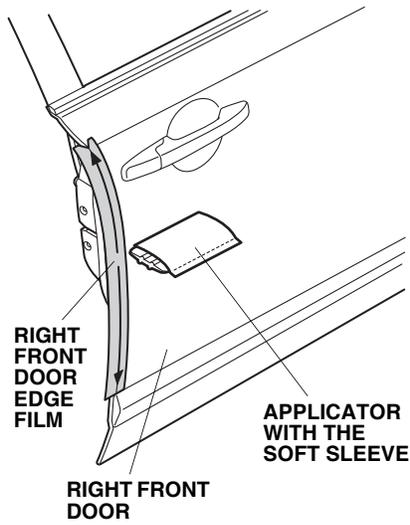


9. Starting from the middle and working outward, use the applicator to smooth the right front door edge film. Move the applicator in one direction only.
10. Slowly remove the protective film from the right front door edge film.

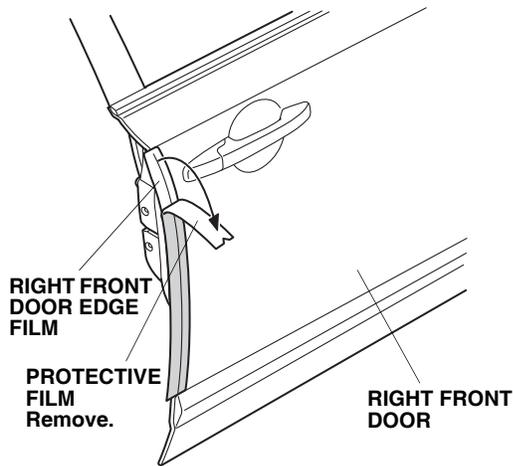

11. Starting from the middle and working outward, fold back the right front door edge film onto the inside edge of the right front door as shown. Move your fingers in one direction only.

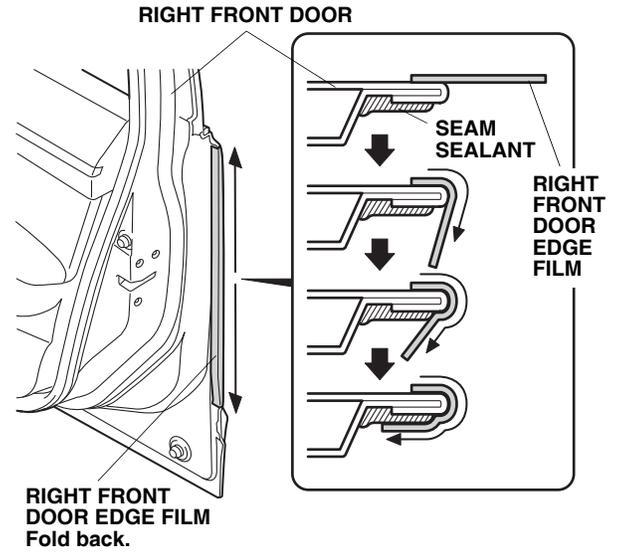

12. Wipe the water from the right front door edge film using a shop towel. Allow the right front door edge film to dry thoroughly.

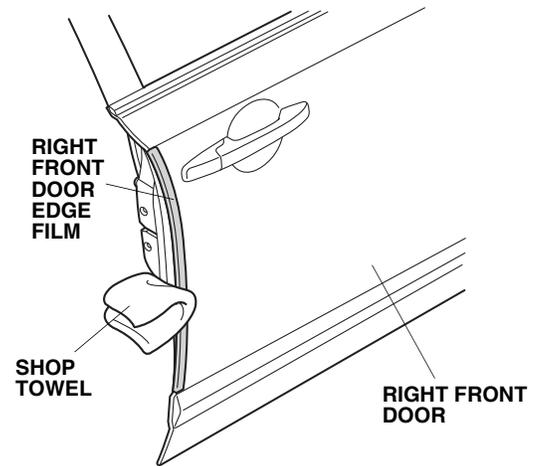

13. Repeat steps 1 thru 12 on the other side.

## Installing the Rear Door Edge Films

- Repeat steps 1 thru 13 to install the rear door edge films on the rear doors. Align the V-notch in the right rear door edge film with the end of the character line on the upper part of the right rear door.

