

HONDA

INSTALLATION INSTRUCTIONS

Accessory
EXHAUST PIPE FINISHER
 P/N 08F53-TK6-100


Application
2011 FIT

Publications No.
All 45090

Issue Date
NOV 2010

PARTS LIST

Exhaust pipe finisher

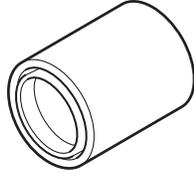

Flange bolt




TOOLS AND SUPPLIES REQUIRED

Ratchet wrench
 Socket (10 mm)
 Torque wrench


INSTALLATION

NOTE: Allow the exhaust pipe to cool down before installing the accessory.

1. Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Thread the flange bolt into the exhaust pipe trim.

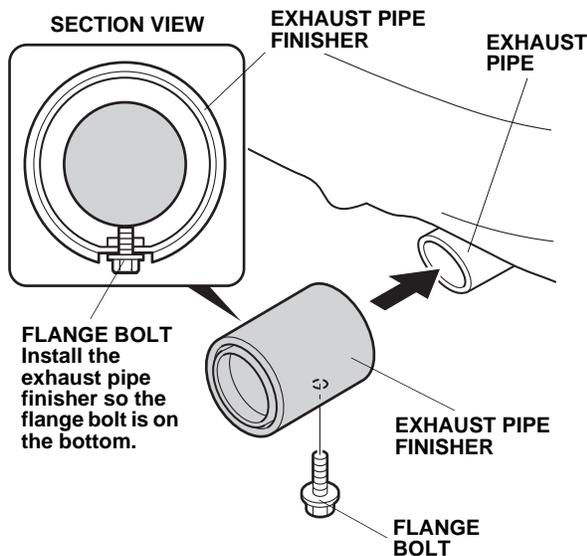

2. Slide the exhaust pipe trim firmly onto the exhaust pipe until it bottoms.

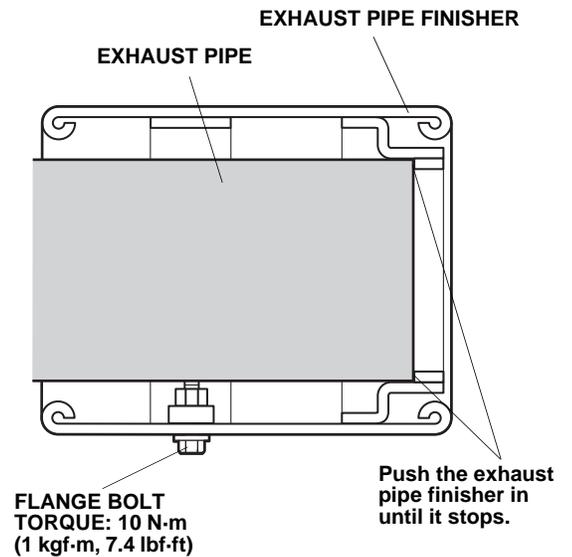

3. While pushing the exhaust pipe trim firmly against the pipe, torque the flange bolt to 10 N·m (7.5 lbf·ft).
4. Start the engine and rev it a few times. Listen for vibrations or abnormal noise from the exhaust pipe trim, and adjust it if necessary.