



# INSTALLATION INSTRUCTIONS


Accessory  
ILLUMINATED DOOR  
SILL TRIM  
P/N 08E12-TR0-101

Application  
2013 CIVIC  
2 AND 4-DOOR

Publications No.  
All 13049  
Issue Date  
NOV 2012

## PARTS LIST


2 Front illuminated door sill trims

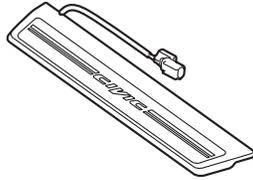


2 Rear door sill trims




2 Wire ties with holder

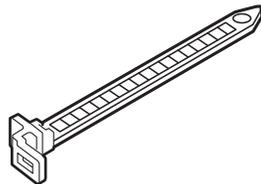


2 Aluminum tapes

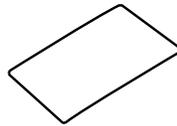


14 Wire ties

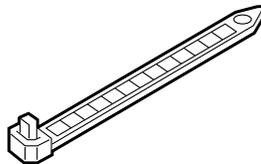

Fuse label

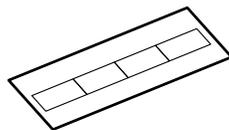

Protective tape




Door sill trim harness



2 Clips



2 Alcohol swabs

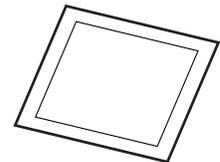

## TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Ratchet

10 mm Socket

Diagonal cutters

Utility knife

Ruler

Felt-tip pen

Masking tape

Tape


Isopropyl alcohol

Shop towel

*The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.*

- Trim Tool Set (T/N SOJATP2014)

**Illustration of the Illuminated Door Sill Trim in the Vehicle**

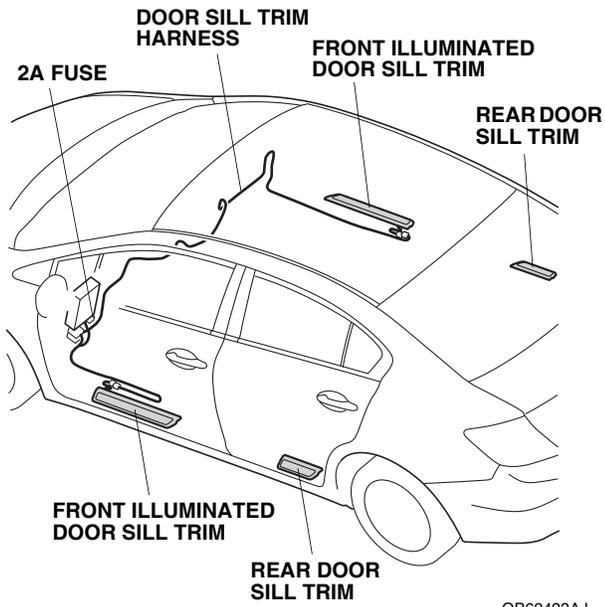


**INSTALLATION**


**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Disconnect the negative cable from the battery.


2. Remove the passenger’s front door sill trim (six clips, two hooks, and four retaining tabs).

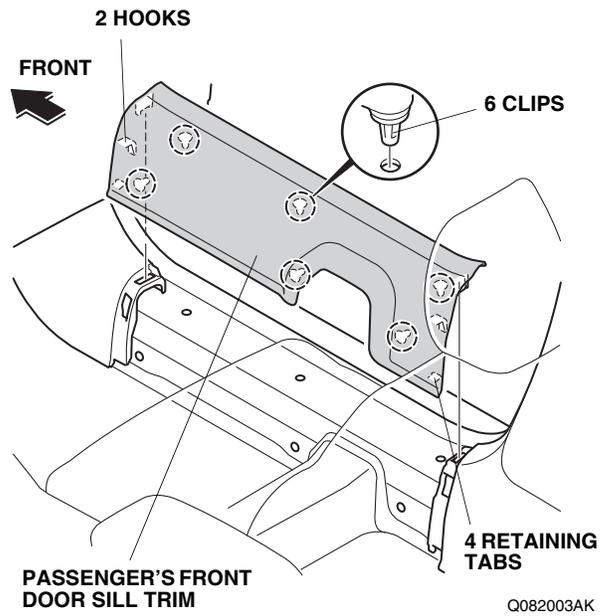

3. Pull away the door opening seal, and remove the passenger’s kick panel (two clips).

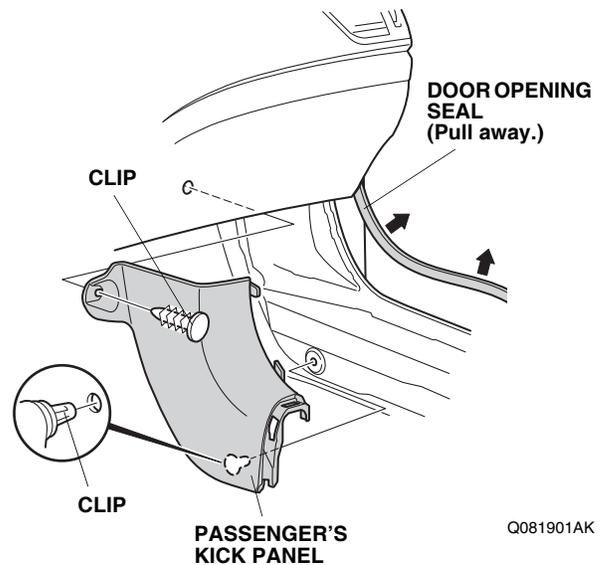


4. Remove the glove box:
  - Remove two bolts.

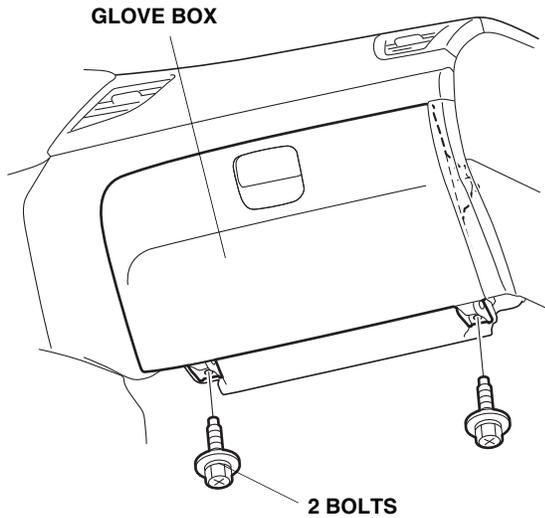


Q072101BH

- Open the glove box, push inward on the stops, and remove the glove box.

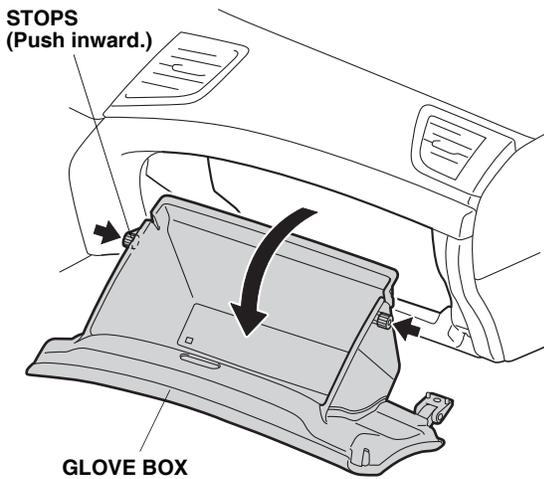


Q072102AH

5. Remove the trunk lid/fuel fill door opener cover (four retaining tabs and two hooks). Remove one self-tapping screw. Using the key, unlock the trunk lock.

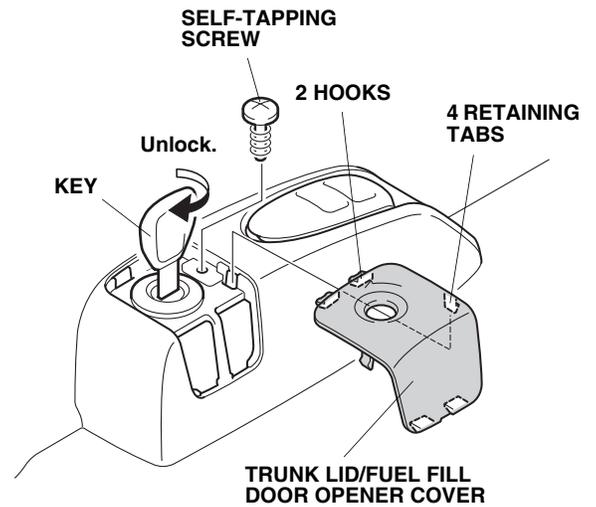


Q072052AK

6. Remove the driver's front door sill trim (six clips, two hooks, and four retaining tabs).

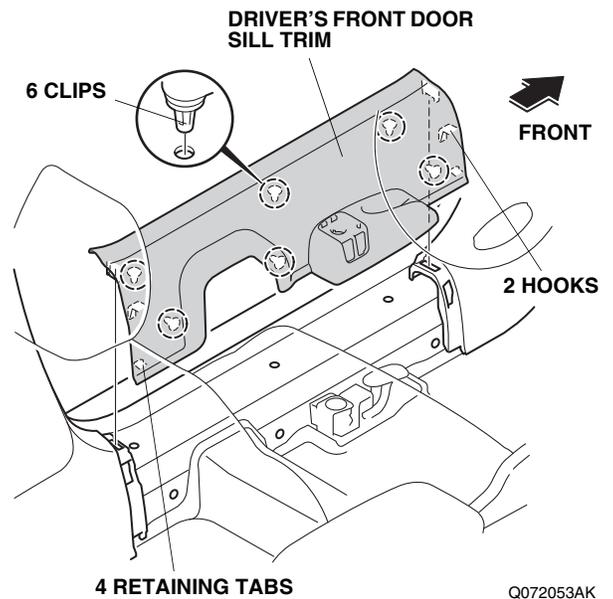


Q072053AK


- Pull away the door opening seal, and remove the driver's kick panel (two clips).

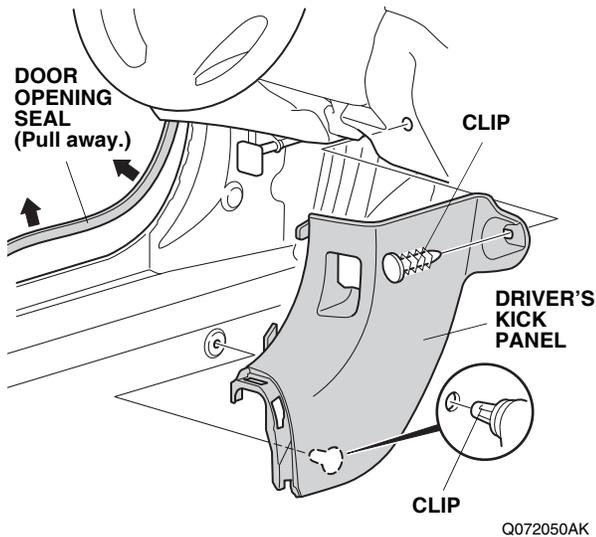


- Remove the driver's dashboard lower cover (nine clips and unplug the vehicle connectors, if equipped).

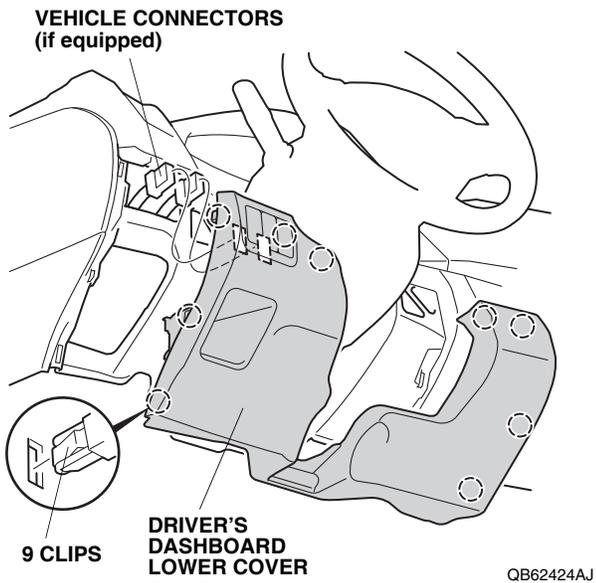

- To protect the vehicle, attach tape to the dashboard in the areas shown. Move the shift lever to the N (neutral) position, and wrap a shop towel around the shift lever.

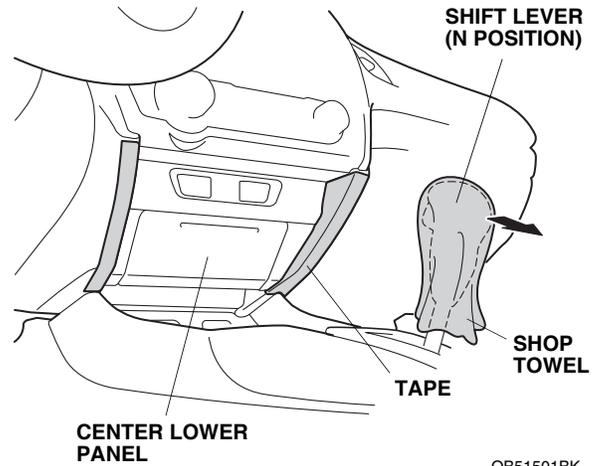


- Remove the center lower panel (two self-tapping screws, four clips, and unplug the vehicle connectors, if equipped).

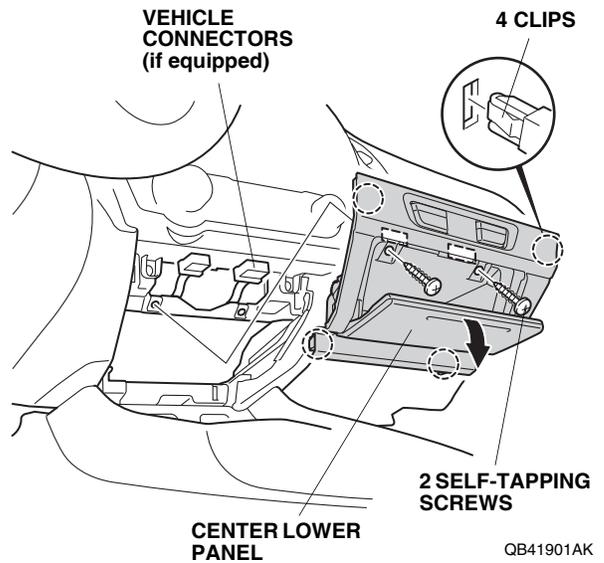


## Routing the Door Sill Trim Harness


- Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach.

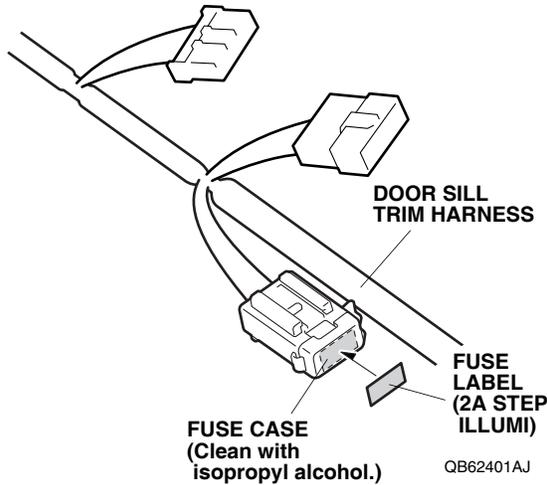


- Attach the fuse label (2A STEP ILLUMI) to the door sill trim harness fuse case.
- Attached to the bottom of the fuse box, locate the vehicle 28-pin connector. Unplug the vehicle 28-pin connector and plug it into the door sill trim harness 28-pin connector. Plug the door sill trim harness 28-pin connector into the vehicle 28-pin connector.

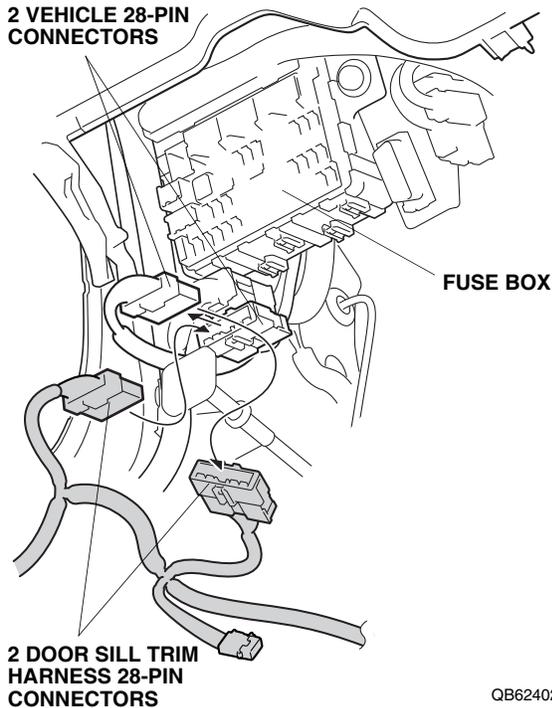


- Attach the door sill trim harness 28-pin connector to the vehicle 28-pin connector.

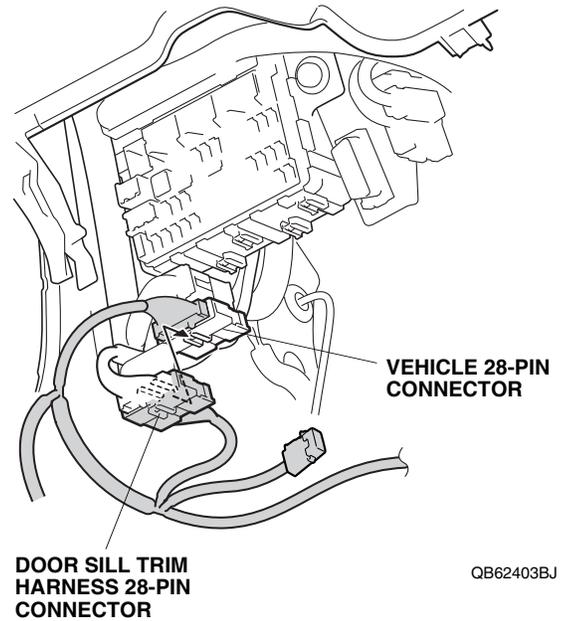

- Attach the door sill trim harness fuse case to the bottom of fuse box.

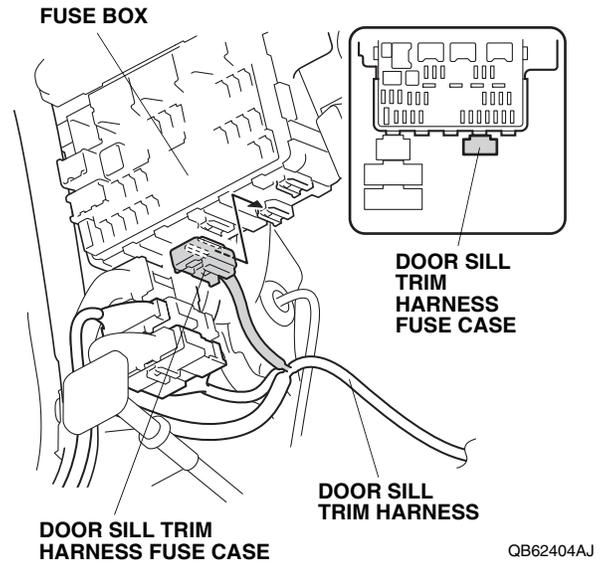


16. Secure the door sill trim harness to the vehicle harness with one wire tie.

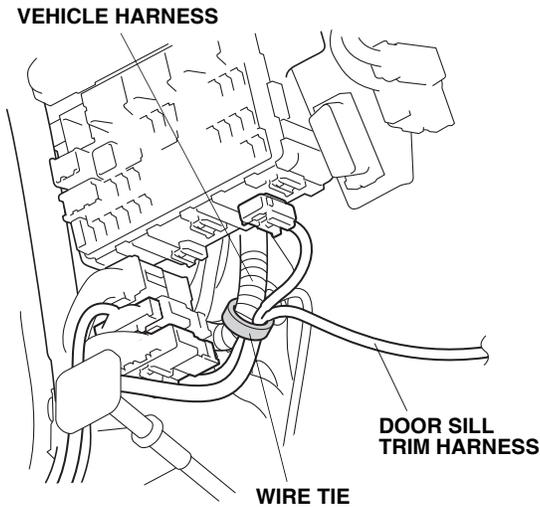


QB62405AJ

17. At the door sill area, secure the door sill trim harness to the vehicle harness with two wire ties.

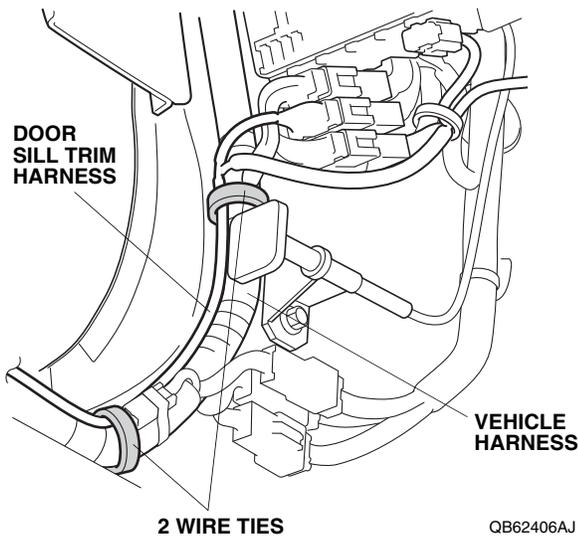


QB62406AJ

18. Continue to route the door sill trim harness along the vehicle harness, then loop the connector back to the measurement shown. Secure the door sill trim harness to the vehicle harness with one wire tie.

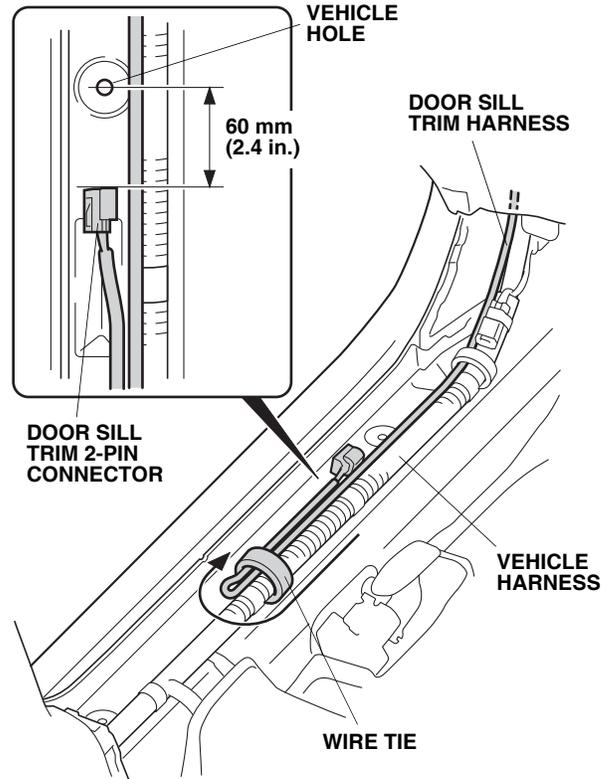


Q002601AH

19. Route the other end of the door sill trim harness up and over to the vehicle harness. Secure the door sill trim harness to the vehicle harness with one wire tie.

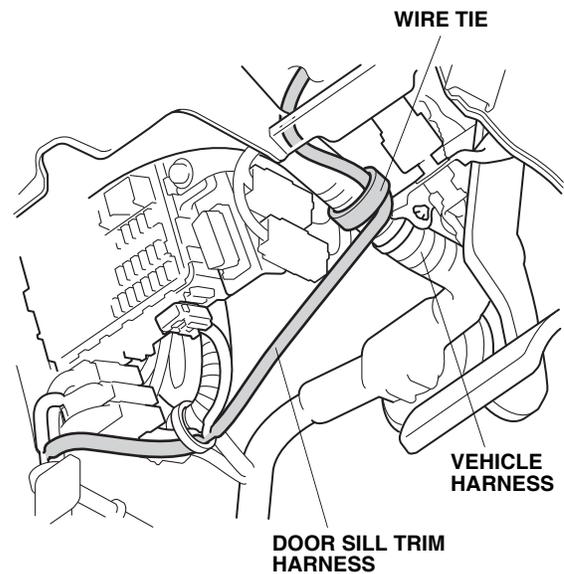


QB62407AJ

20. Secure the door sill trim harness to the holes in the dashboard panel with two wire ties. If another accessory harness is already attached to the dashboard panel, route and attach the other harness below the door sill trim harness.

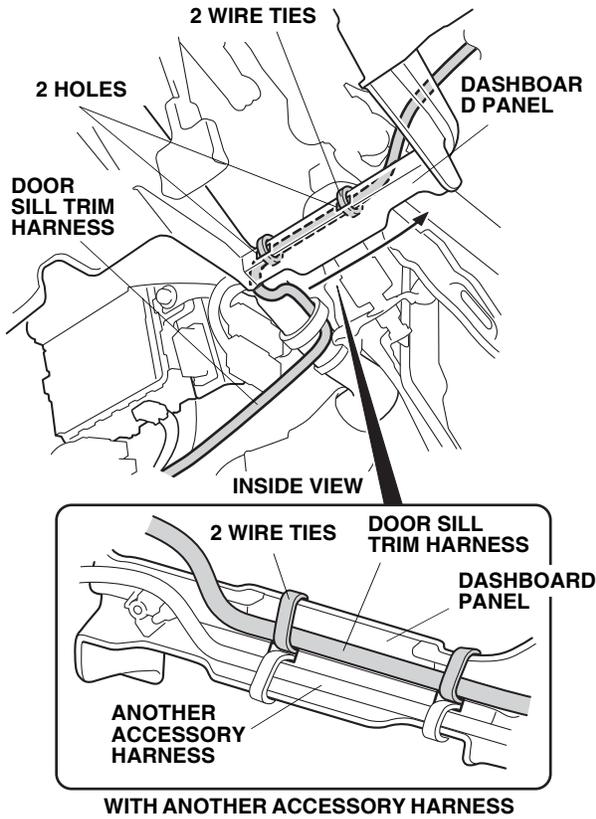


QB62408AJ

21. Route the door sill trim harness toward the passenger side of the vehicle, and secure it to the vehicle frame with one wire tie.

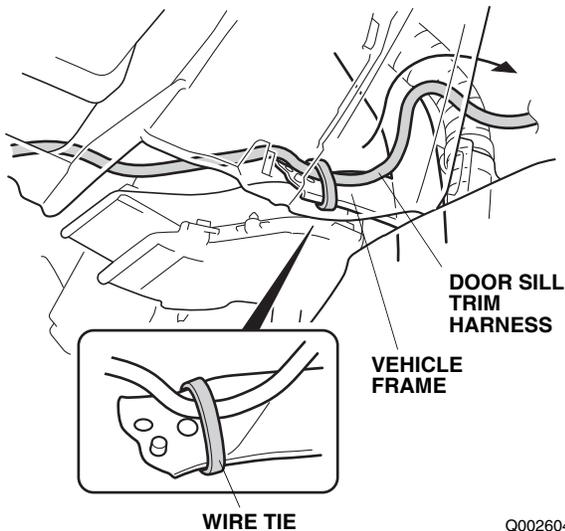


Q002604BH

22. Route the door sill trim harness through the center lower panel opening.

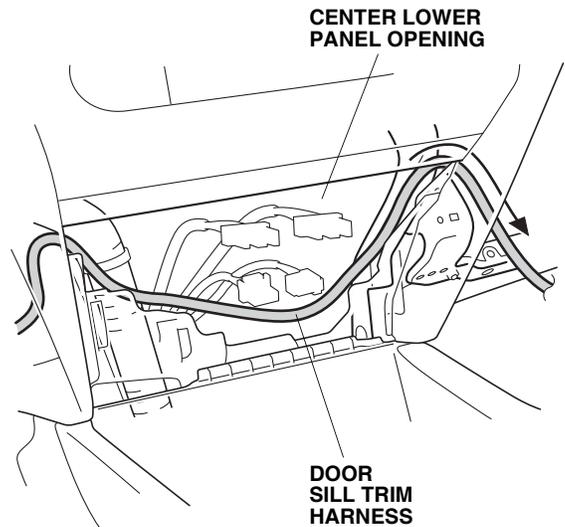


Q002605AH

23. Route the door sill trim harness through the glove box opening.

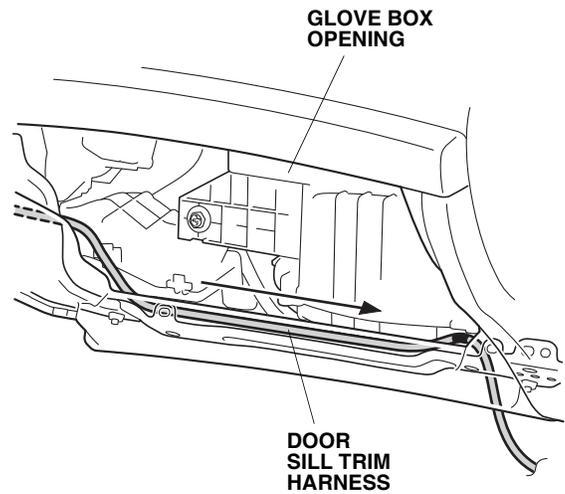


Q002606AH


24. Align the green tape on the door sill trim harness with the hole in the glove box frame, and secure the door sill trim harness to the glove box frame with one wire tie.

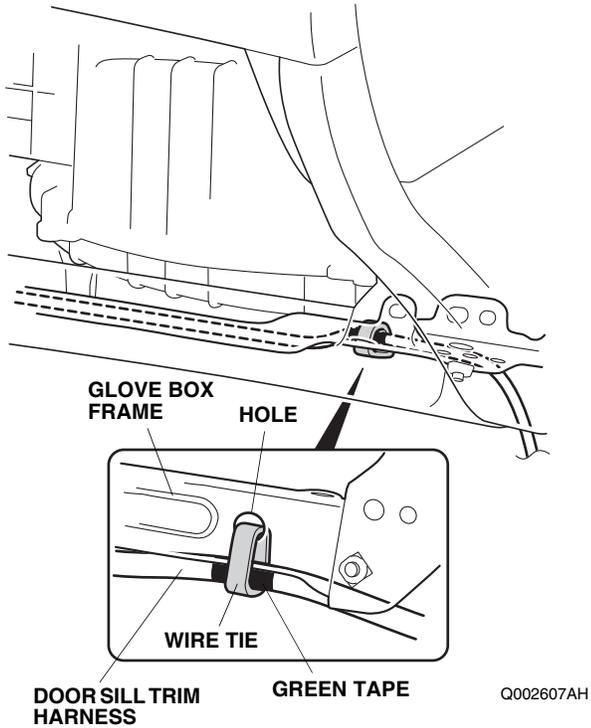

25. Secure the door sill trim harness to the glove box frame with one wire tie.

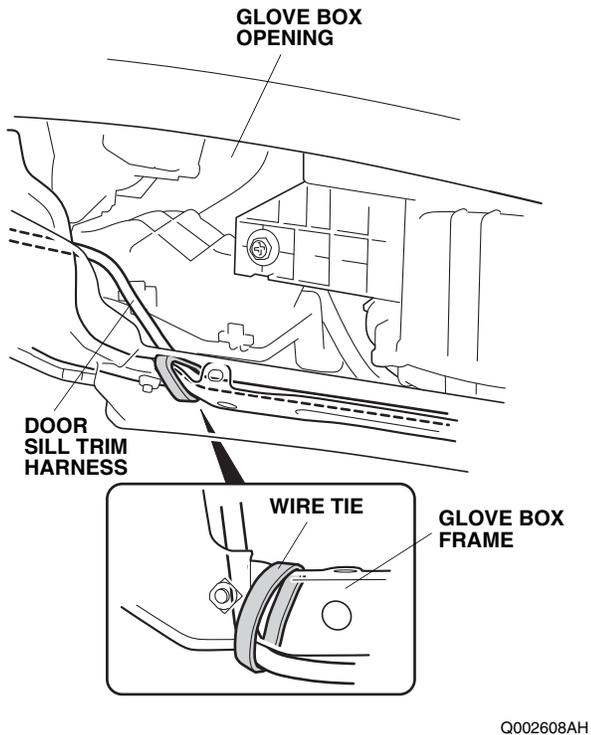


26. Inside the center lower panel opening, secure the door sill trim harness to the vehicle harness with two wire ties.

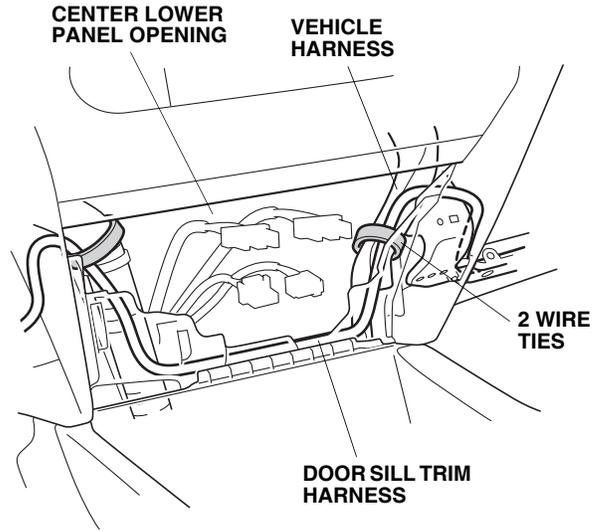


QB62409AJ

27. Secure the door sill trim harness to the glove box frame and the vehicle harness with two wire ties.

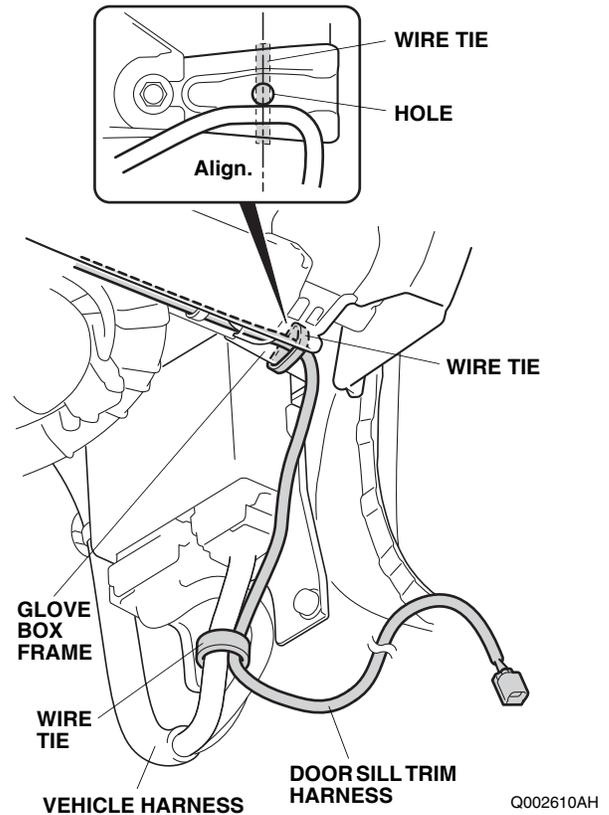


- Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tape will attach.

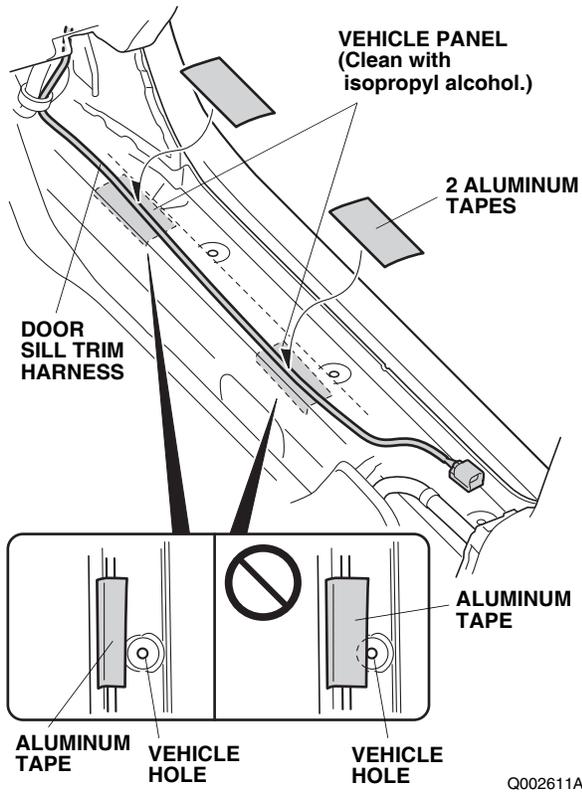

- Secure the door sill trim harness to the vehicle panel with two aluminum tapes. Do not attach the aluminum tape over any vehicle holes.


### Installing the Front Illuminated Door Sill Trim (Driver's side)

- Using a utility knife, cut one protective tape at the measurements shown.

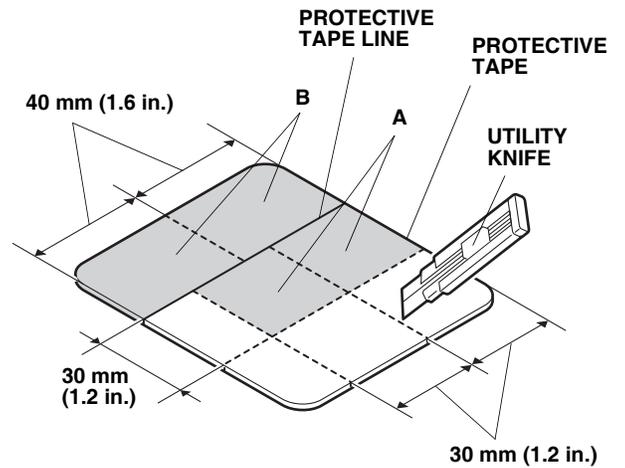

7D1509BR


- Pull away the left front door opening seal.

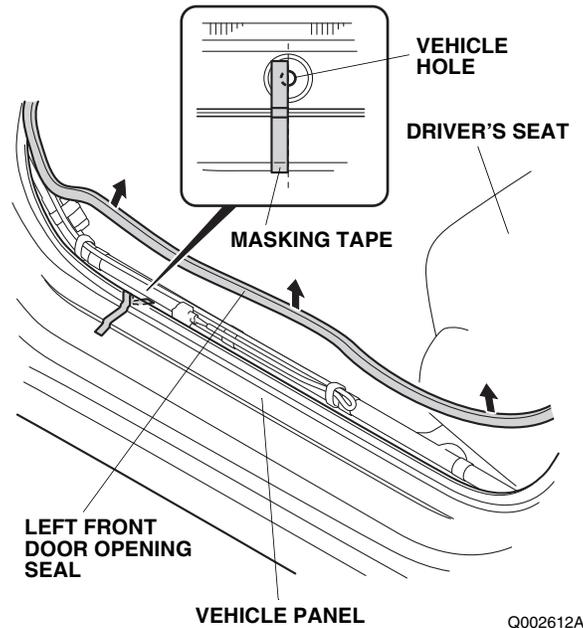

Q002612AH


- Attach a strip of masking tape to the vehicle panel at the location shown.

33. Position the front illuminated door sill trim with the masking tape.

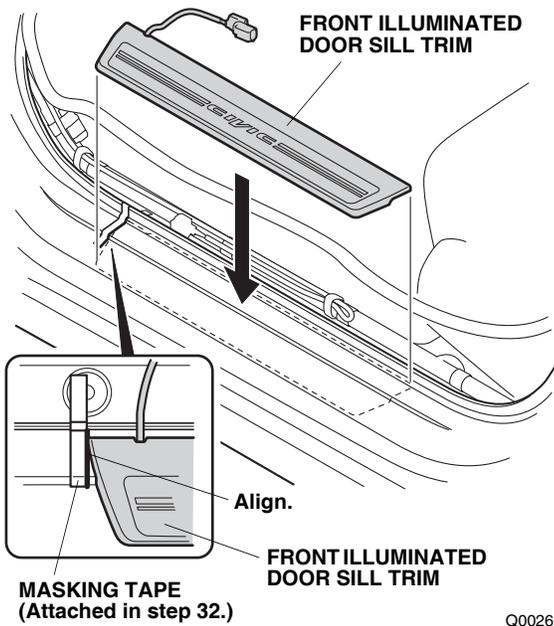

Q002613AH


34. Route the front illuminated door sill trim harness over the vehicle panel of the door opening seal.

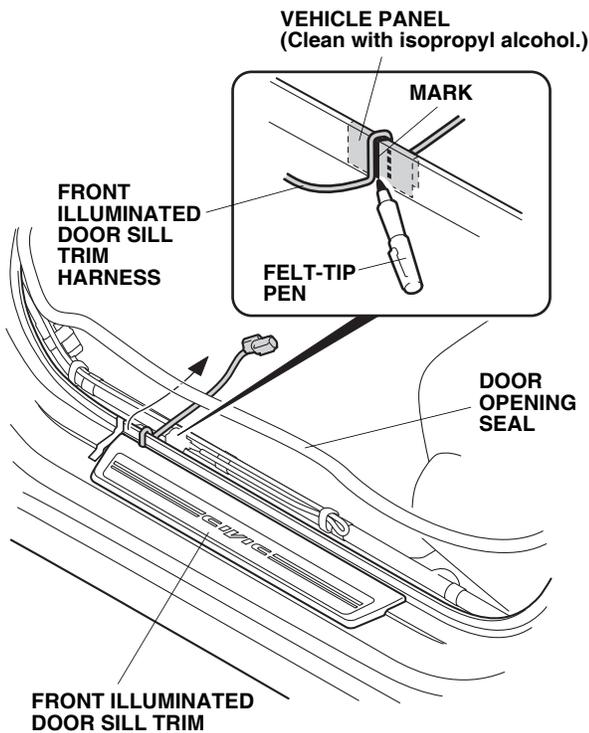

QB62410AJ


35. Using isopropyl alcohol on a shop towel, clean the vehicle panel around the harness, then use a felt-tip pen to mark the vehicle panel at the harness.

36. Remove the front illuminated door sill trim from the vehicle panel.

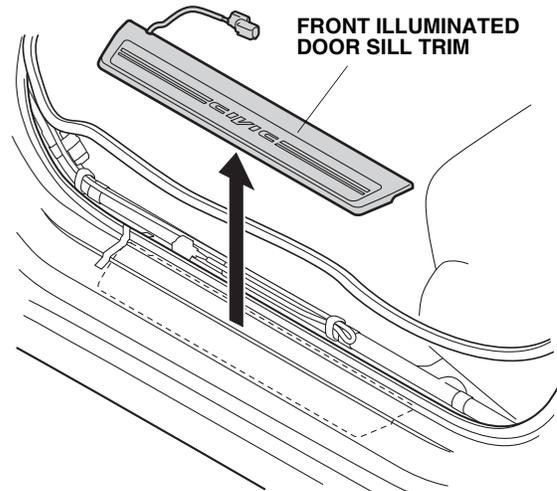


QB62411AJ

37. Attach one protective tape A over the mark you made on the vehicle panel, and install one clip over the protective tape.

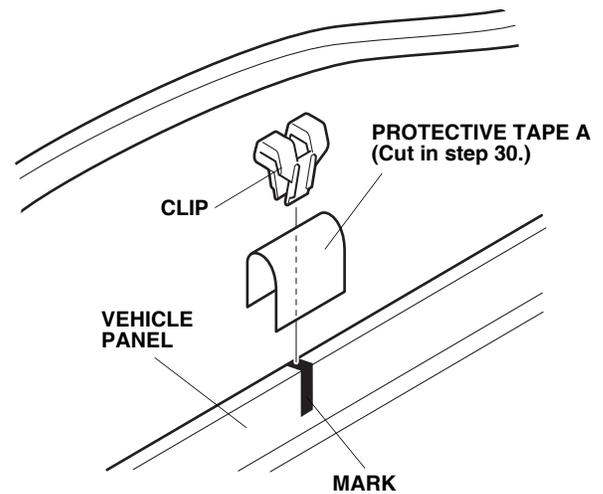


QAD1512AH

38. Peel back the ends of three adhesive backings on the front illuminated door sill trim and attach them to the front of the trim with masking tape. Remove the other two adhesive backings.

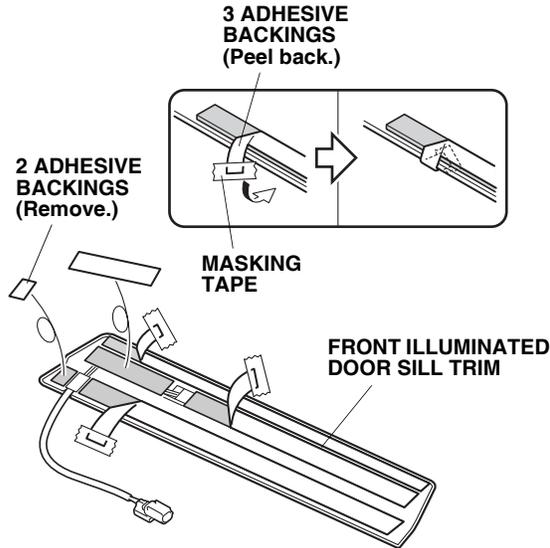


Q002617AH

39. Using an alcohol swab, thoroughly clean the vehicle panel where the front illuminated door sill trim will attach.

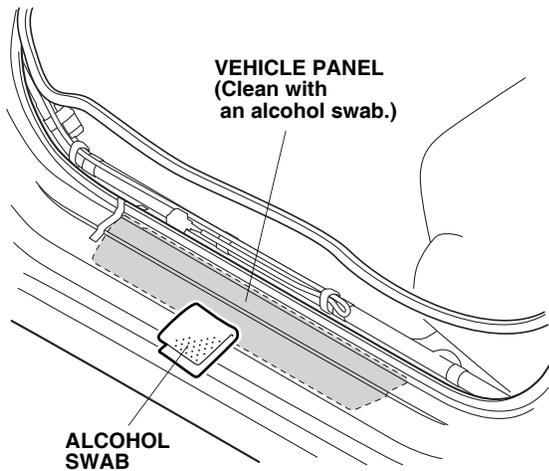


QB62412AJ

40. Position the front illuminated door sill trim on the vehicle panel and align it with the masking tape.

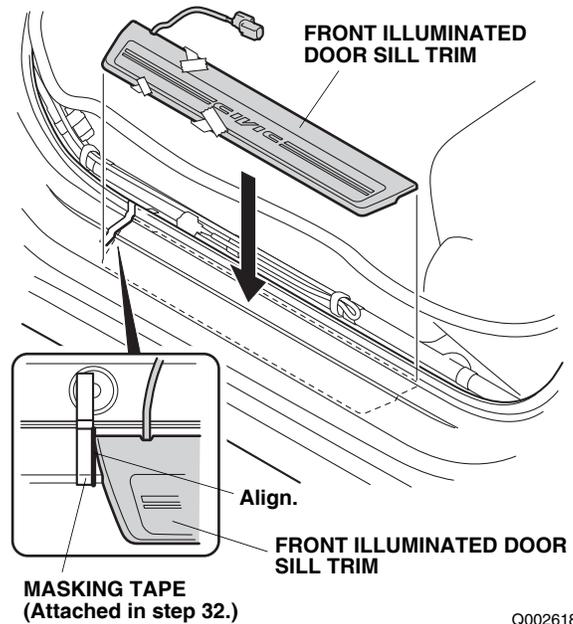

Q002618AH


41. Attach the front illuminated door sill trim to the vehicle panel by removing three adhesive backings in the order shown and pressing on the trim firmly with your hands.

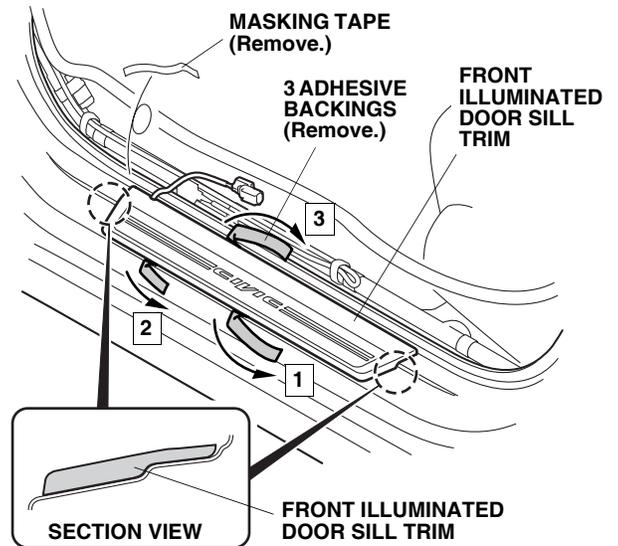


Q002619AH

42. Remove the masking tape.


43. Route the front illuminated door sill trim harness through the clip you installed, and attach one piece of protective tape B over the clip.

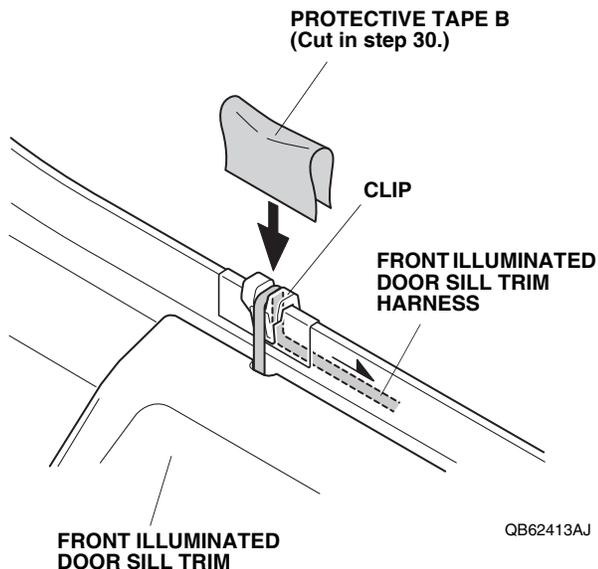

44. Plug the front illuminated door sill trim harness 2-pin connector into the door sill trim harness 2-pin connector.

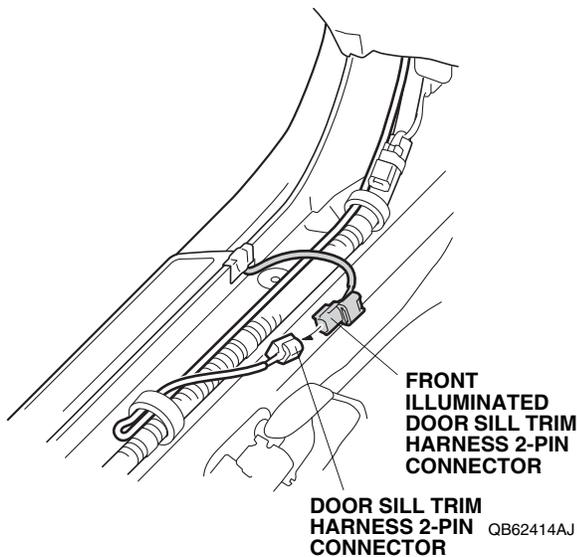


45. Bundle up the excess front illuminated door sill trim harness, and secure it to the vehicle harness with one wire tie with holder.

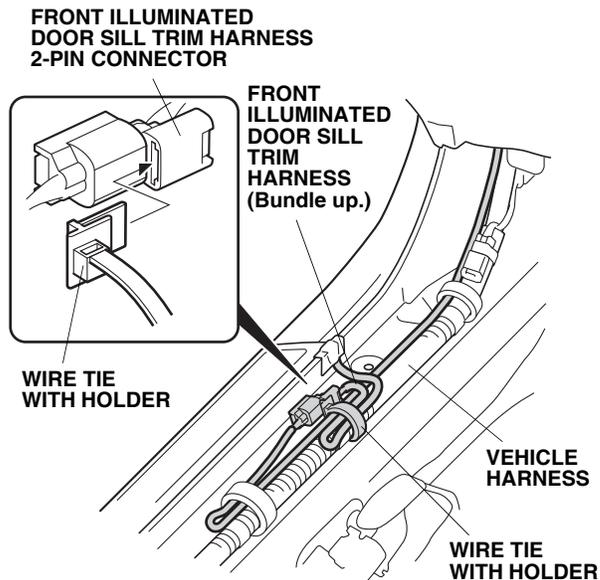


#### Installing the Front Illuminated Door Sill Trim (Passenger's side)

46. Pull away the right front door opening seal.

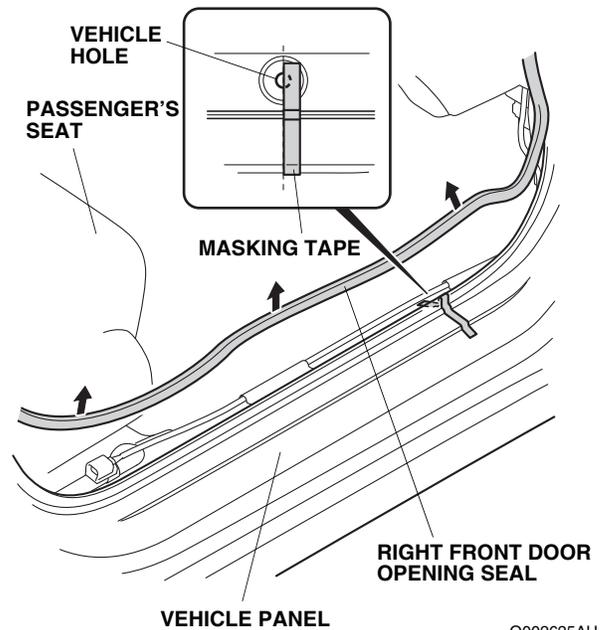


47. Attach a strip of masking tape to the vehicle panel at the location shown.

48. Position the front illuminated door sill trim with the masking tape.

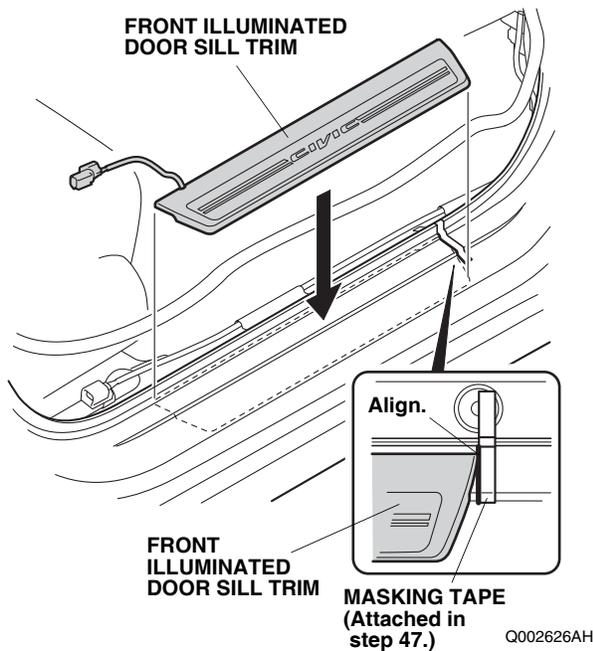


49. Route the front illuminated door sill trim harness over the vehicle panel of the door opening seal.

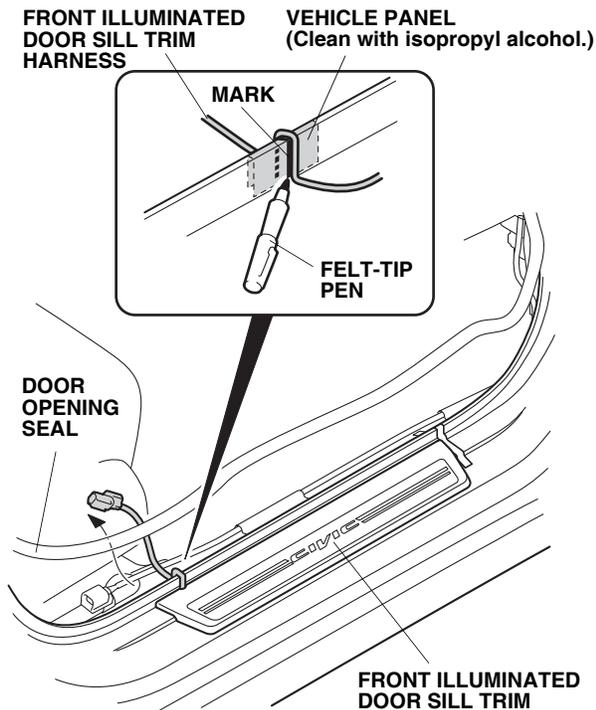


50. Using isopropyl alcohol on a shop towel, clean the vehicle panel around the harness, then use a felt-tip pen to mark the vehicle panel at the harness.

51. Remove the front illuminated door sill trim from the vehicle panel.

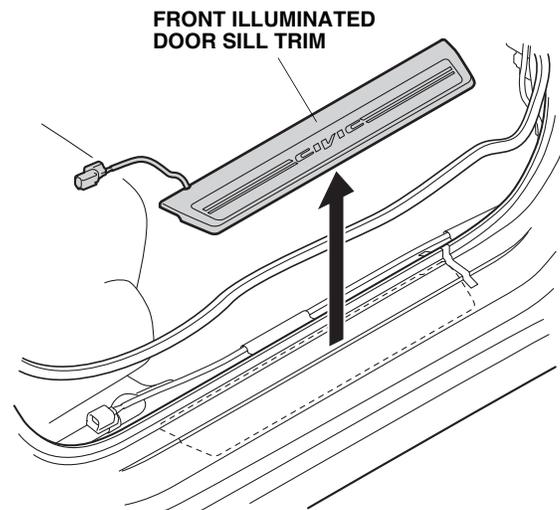


QB62417AJ

52. Attach one protective tape A over the mark you made on the vehicle panel, and install one clip over the protective tape.

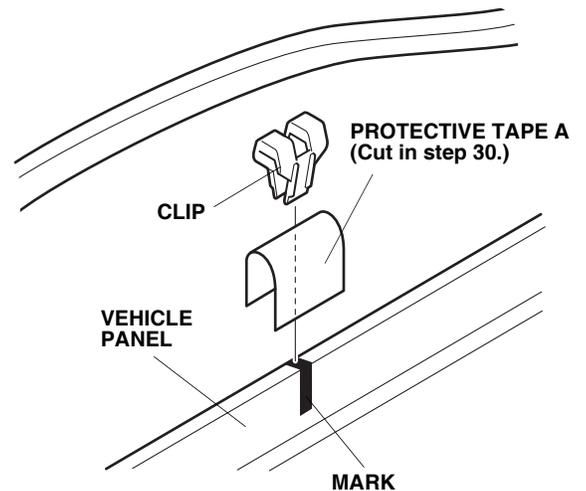


QAD1512AH

53. Peel back the ends of three adhesive backings on the front illuminated door sill trim and attach them to the front of the trim with masking tape. Remove the other two adhesive backings.

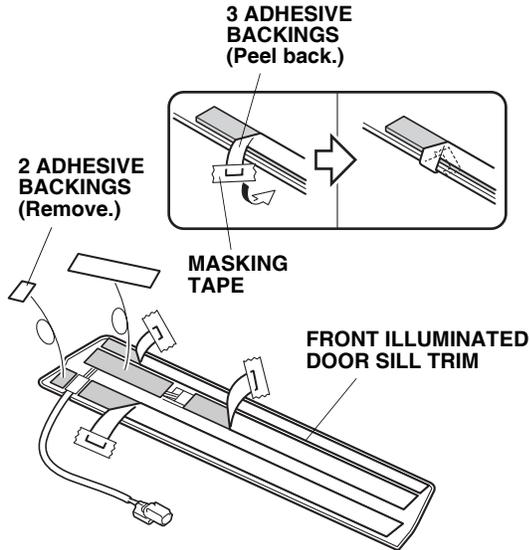


Q002617AH

54. Using an alcohol swab, thoroughly clean the vehicle panel where the front illuminated door sill trim will attach.

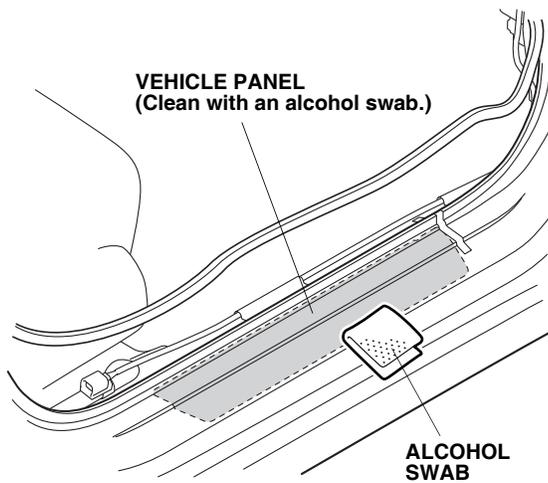


QB62418AJ

55. Position the front illuminated door sill trim on the vehicle panel and align it with the masking tape.

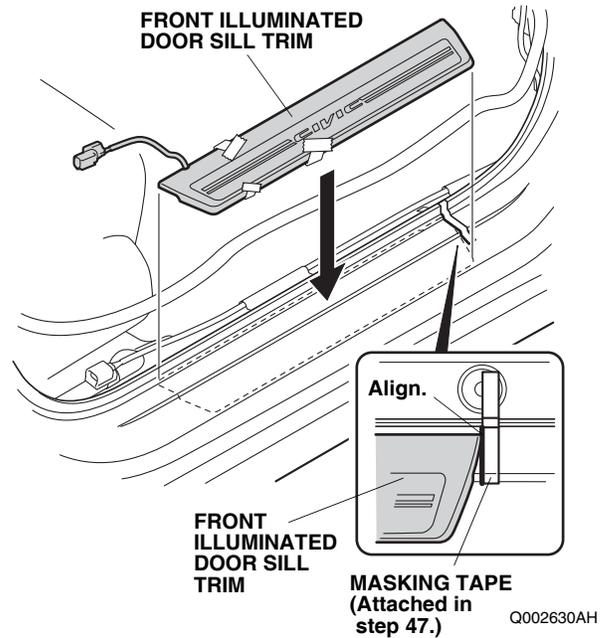


56. Attach the front illuminated door sill trim to the vehicle panel by removing three adhesive backings in the order shown and pressing on the trim firmly with your hands.

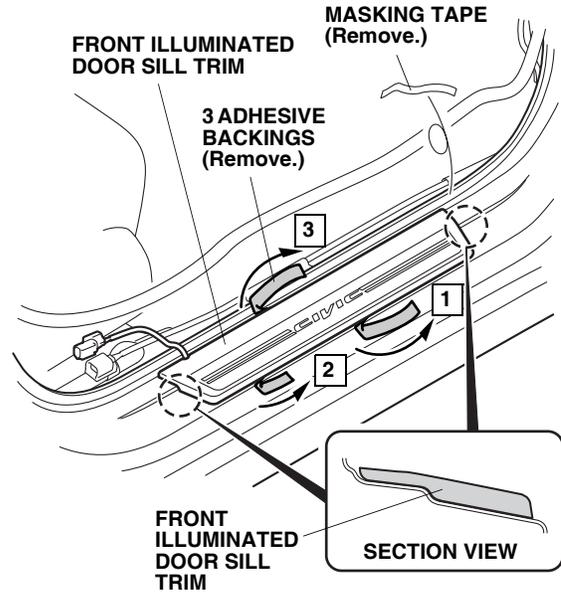


Q002631AH

57. Remove the masking tape.


58. Route the front illuminated door sill trim harness through the clip you installed, and attach one piece of protective tape B over the clip.

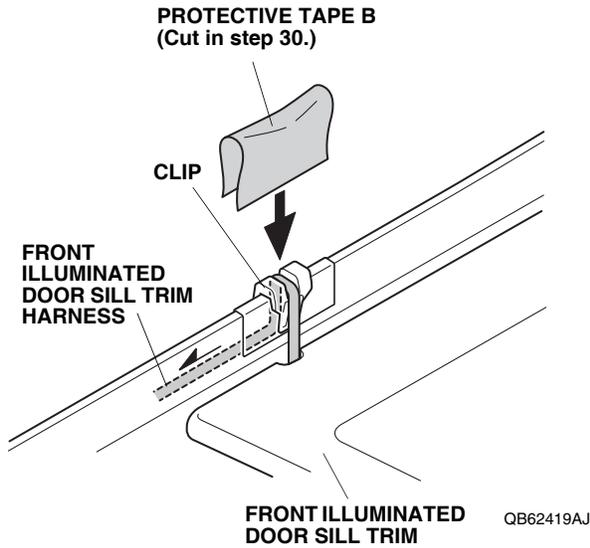

59. Plug the front illuminated door sill trim harness 2-pin connector into the door sill trim harness 2-pin connector.

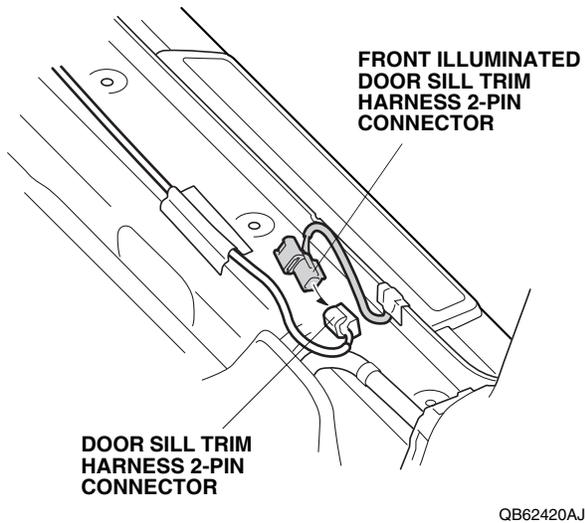


60. Bundle up the excess front illuminated door sill trim harness, and secure it to the vehicle harness with one wire tie with holder.

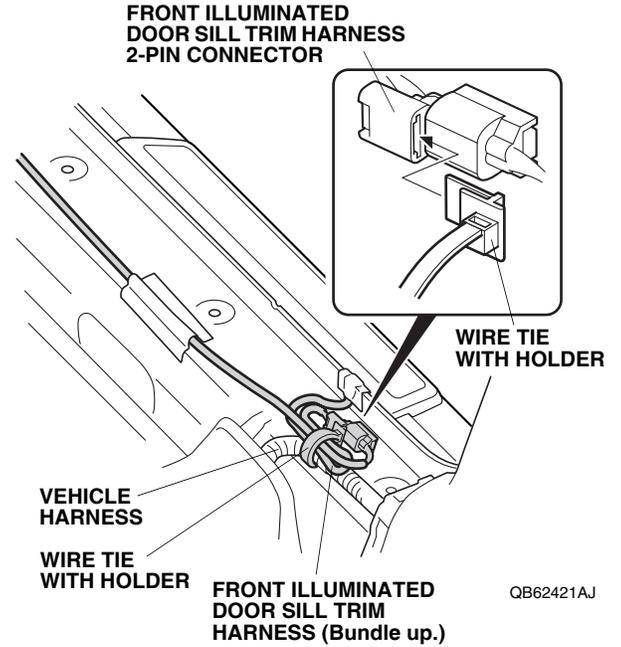


### Installing the Rear Door Sill Trim

61. Open the left rear door.

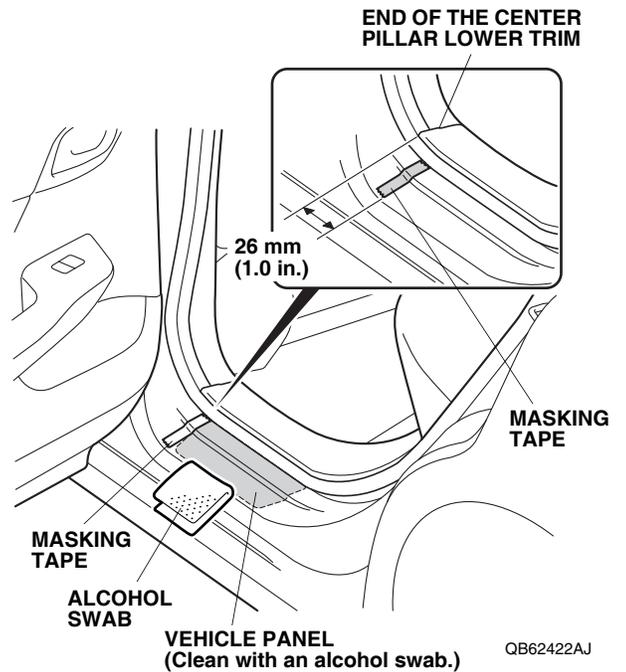


62. Attach a strip of masking tape to the vehicle panel at the measurement shown.
63. Using an alcohol swab, thoroughly clean the vehicle panel where the rear door sill trim will attach.


64. Peel back the ends of two adhesive backings on the rear door sill trim and attach them to the front of the trim with masking tape. Remove the other two adhesive backings.

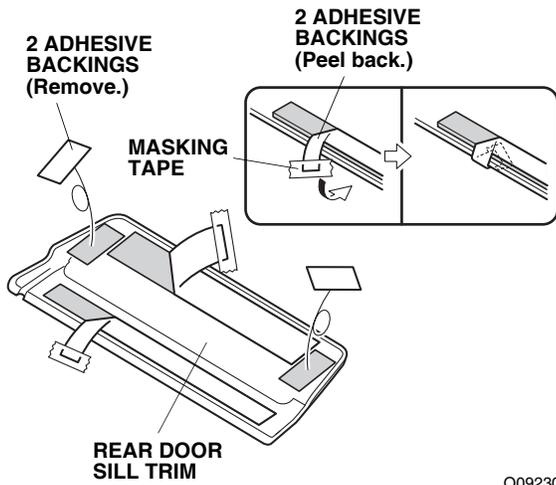

65. Position the rear door sill trim with the masking tape.

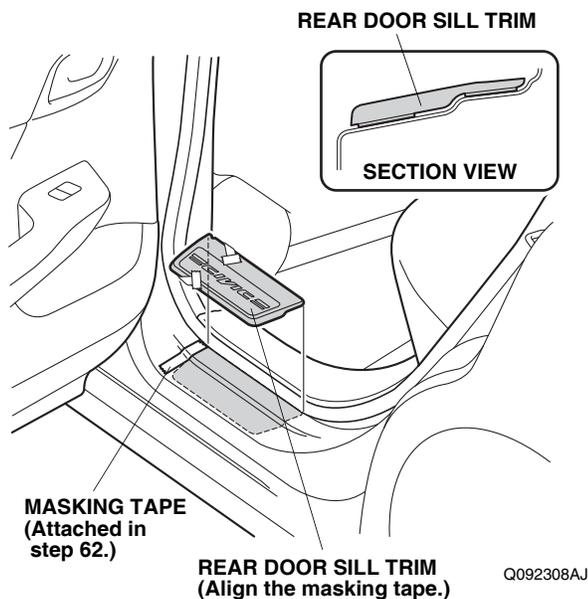

66. Attach the rear door sill trim to the vehicle panel by removing two adhesive backings and pressing on the trim firmly with your hands.

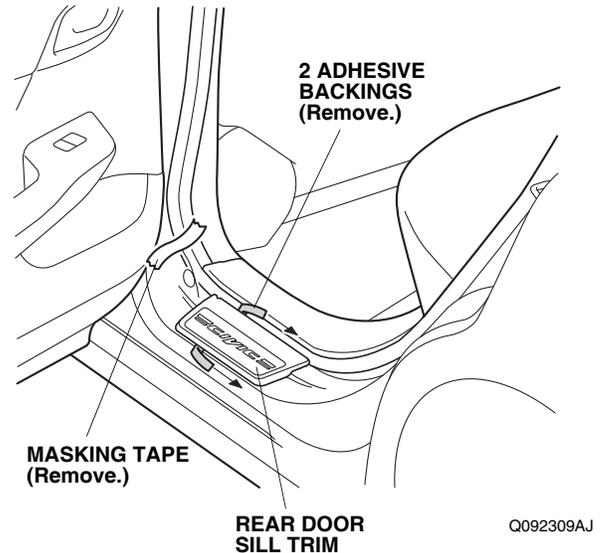

67. Remove the masking tape.
68. Repeat steps 61 through 67 to install the rear door sill trim on the right side of the vehicle.
69. Check that all wire harnesses are routed properly and all connectors are plugged in.
70. Reinstall all removed parts.
71. Reconnect the negative cable to the battery and check the operation of all lights and electrical accessories.
72. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
73. Reset the clock.
74. The front illuminated door sill trims come on when each door opens.
75. If the IMA battery level gauge is at zero, start the engine and hold the rpm between 3500 and 4000 (no load) in P or N position until the Charge/Assist meter indicates the IMA system has stopped charging the battery.