

# HONDA INSTALLATION INSTRUCTIONS


Accessory  
**EXHAUST PIPE FINISHER**  
P/N 08F53-TK6-100

Application  
**2013 FIT**

Publications No.  
**All 13210**  
Issue Date  
**JULY 2012**

## PARTS LIST

Exhaust pipe finisher

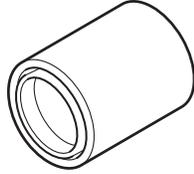

Flange bolt




## TOOLS AND SUPPLIES REQUIRED

Ratchet wrench  
Socket (10 mm)  
Torque wrench


## INSTALLATION

**NOTE:** Allow the exhaust pipe to cool down before installing the accessory.

1. Slide the exhaust pipe trim onto the exhaust pipe with the bolt facing down. Thread the flange bolt into the exhaust pipe trim.

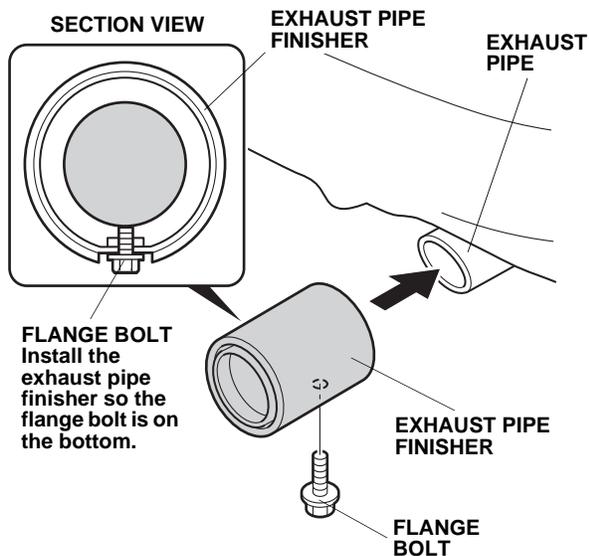

2. Slide the exhaust pipe trim firmly onto the exhaust pipe until it bottoms.

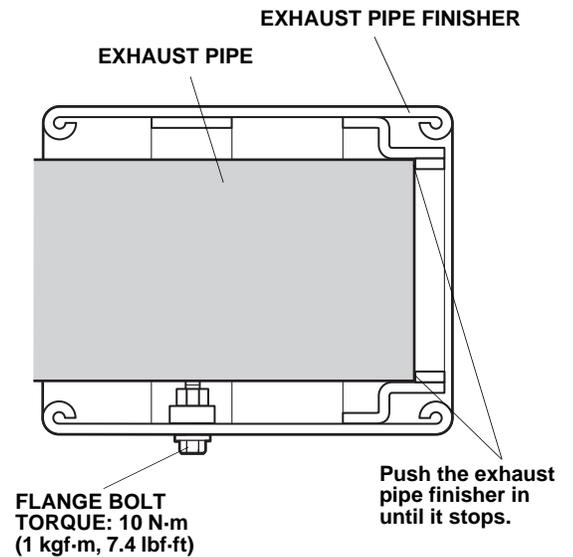

3. While pushing the exhaust pipe trim firmly against the pipe, torque the flange bolt to 10 N·m (7.5 lbf·ft).
4. Start the engine and rev it a few times. Listen for vibrations or abnormal noise from the exhaust pipe trim, and adjust it if necessary.