

# HONDA INSTALLATION INSTRUCTIONS


Accessory  
**TIE-DOWNS**  
P/N 08L96-TK6-100A

Application  
**2013 FIT  
(BASE MODEL)**

Publications No.  
**All 13245**  
Issue Date  
**JULY 2012**

## PARTS LIST

2 Tie-downs




## TOOLS AND SUPPLIES REQUIRED


Utility knife  
Ratchet  
10 mm Socket

## INSTALLATION


1. Pull the levers and tilt the rear seat-back forward. Be sure the headrests are stored.

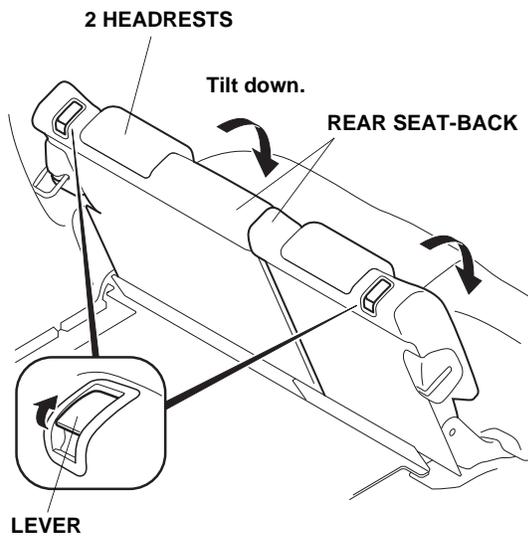


2. Raise the cargo board and fold back the floor carpet.

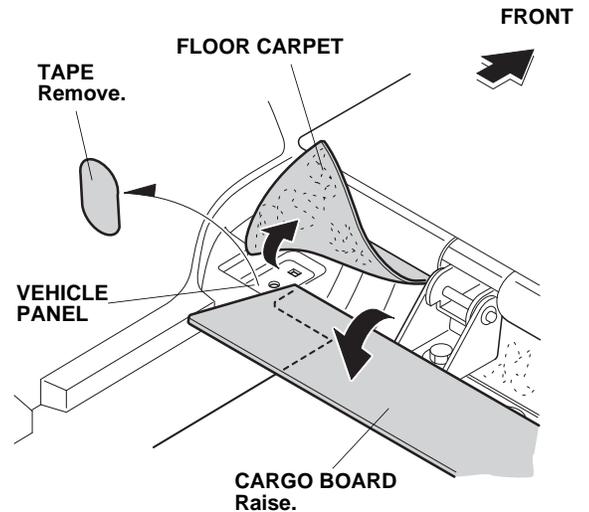

3. Remove the tape attached to the vehicle panel.
4. Put the carpet down. Use a utility knife to cut out a rectangular piece of carpet above the indentation in the floor.

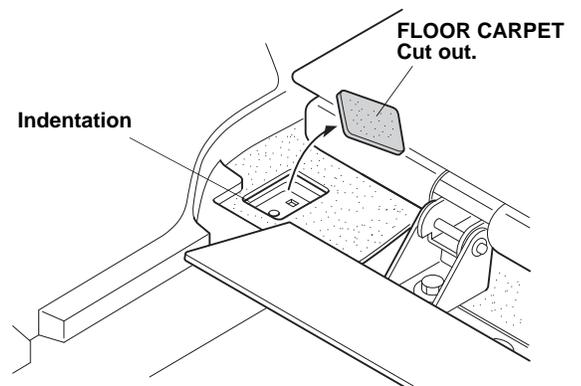

5. Fold back the carpet, and install one tie-down using the attached bolt.

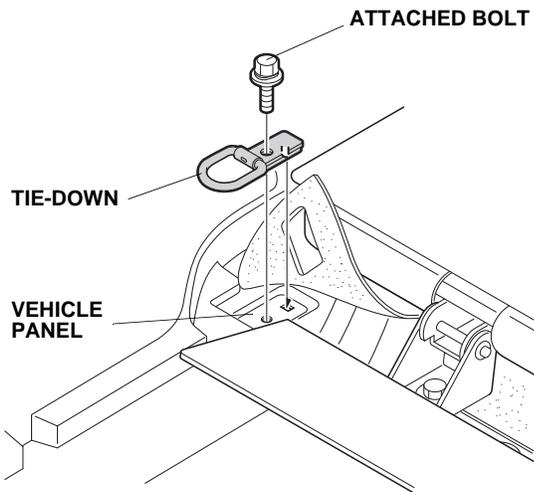

6. Repeat steps 2 through 5 to install a tie-down on the right side of the vehicle.
7. Reinstall the floor carpet and return the cargo board to its original position.

