



# INSTALLATION INSTRUCTIONS


Accessory  
**ILLUMINATED  
DOOR SILL TRIMS**  
P/N 08E12-T0A-110

Application  
**2016 CR-V**


Publications No.  
**VERSION 1**  
Issue Date  
**SEP 2015**

## PARTS LIST

Right front illuminated door sill trim

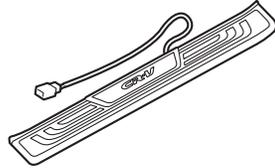

Left front illuminated door sill trim

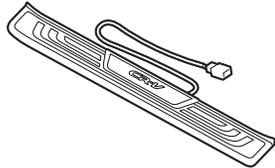

Right rear door sill trim




Left rear door sill trim




Door sill trim harness




13 Wire ties

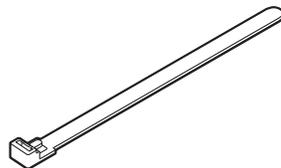


2 Wire ties with clip B

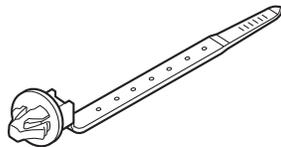

Wire tie with clip B

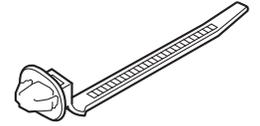

Fuse label

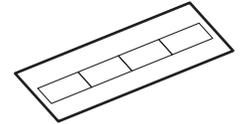


Urethane tape




3 Aluminum tapes



Protective tape



2 Alcohol swabs

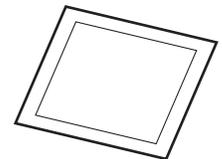


## TOOLS AND SUPPLIES REQUIRED

Diagonal cutters  
Ratchet  
8 mm Socket  
10 mm Open end wrench  
Isopropyl alcohol  
Scissors  
Shop towel  
Ruler  
Felt-tip pen  
Utility knife  
Masking tape  
Needle nose pliers

The following tools is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)

### Illustration of the Illuminated Door Sill Trims Installed on the Vehicle

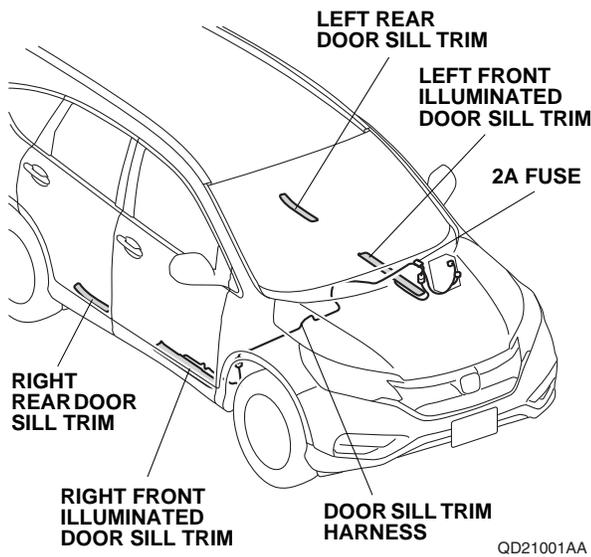


## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Disconnect the negative cable from the battery.

### Removing the Vehicle Parts


2. Remove the passenger's dashboard under cover.

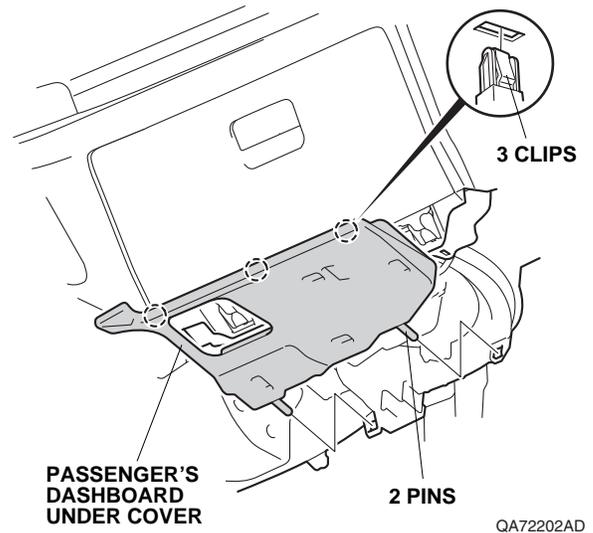


3. Open the glove box, and release the damper rod from the glove box.

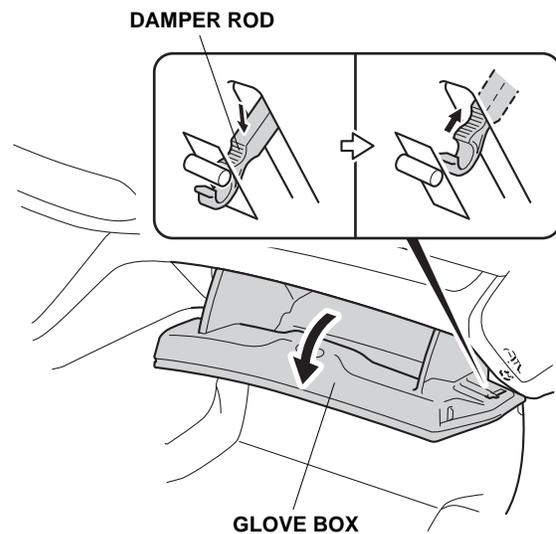


4. Close the glove box, and remove the two bolts from the glove box.

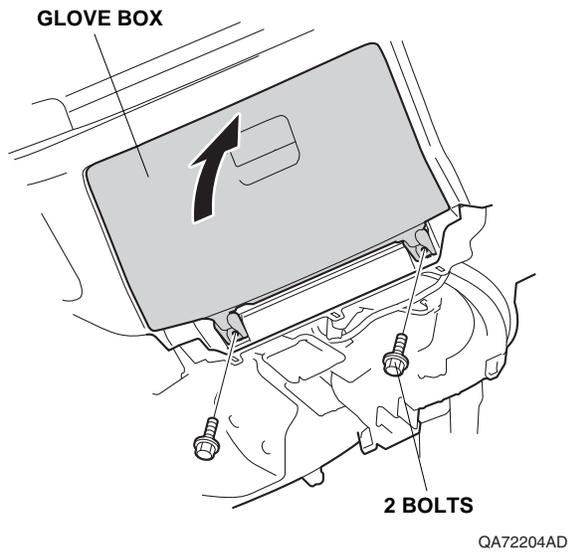


5. Remove the glove box.

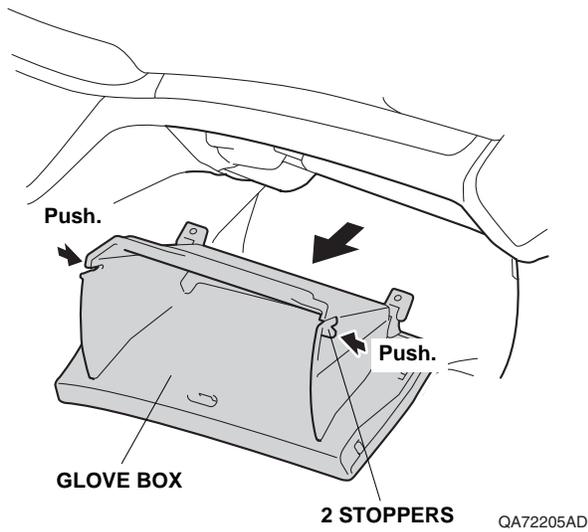


6. Remove the passenger's front door sill trim.

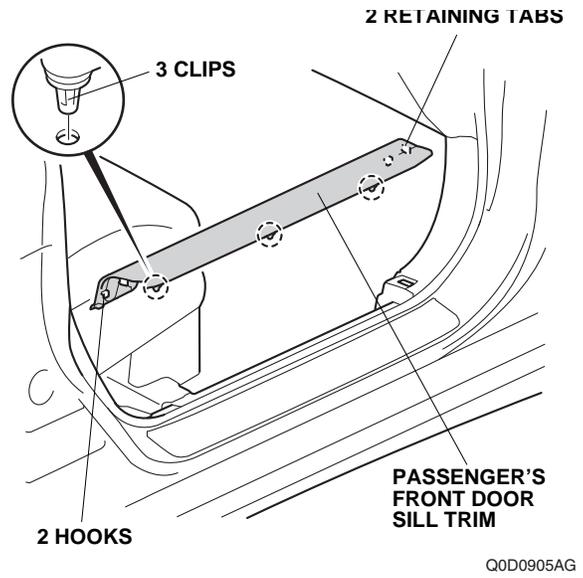

7. Attach the masking tapes to the vehicle panel along the passenger's front step garnish.

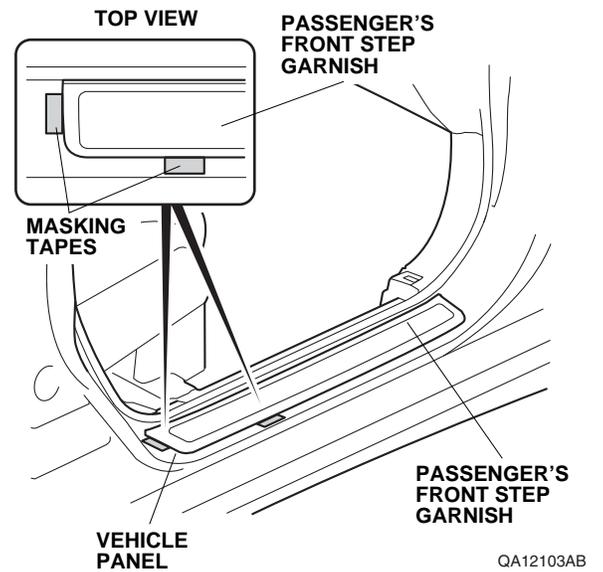


8. Pull away the door opening seal, and remove and discard the passenger's front step garnish.

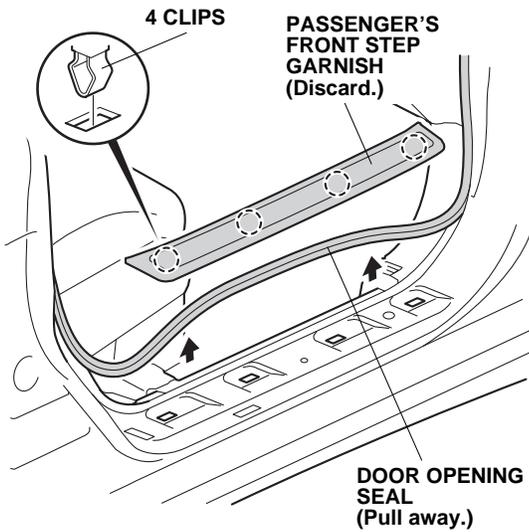


QA12104AB

9. Pull away the door opening seal, and remove the passenger's kick panel.

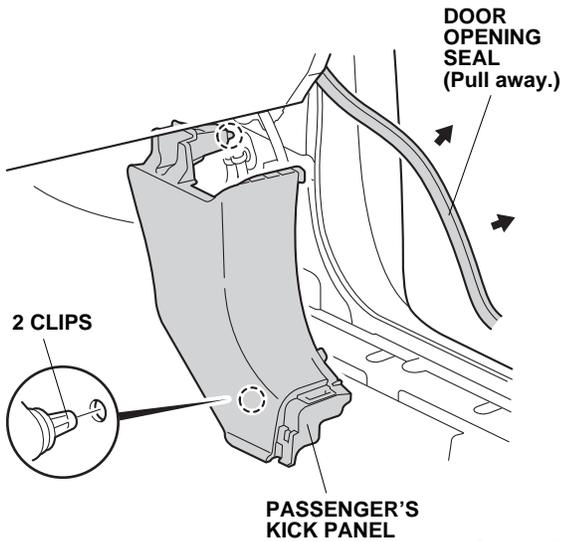


QA72206AD

10. Remove the right console cover.

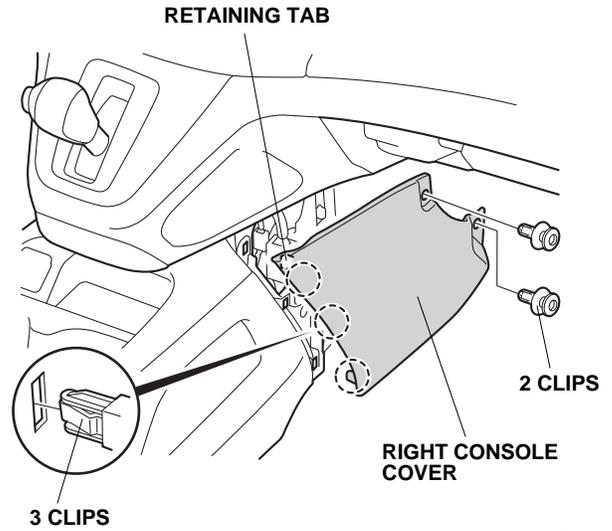


QA72207AD

11. Remove the driver's dashboard panel.

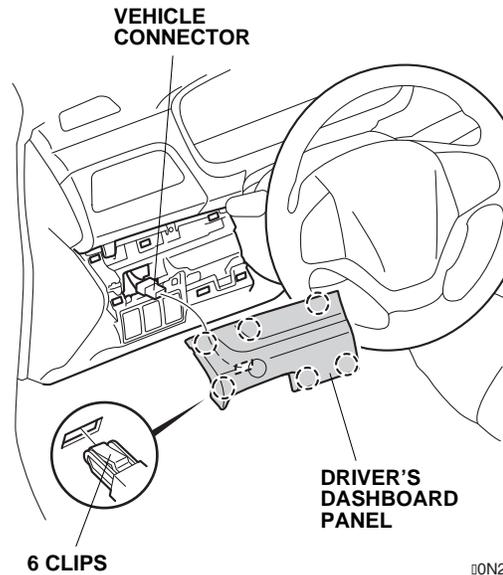


00N2019B0


12. Remove the driver's dashboard under cover.

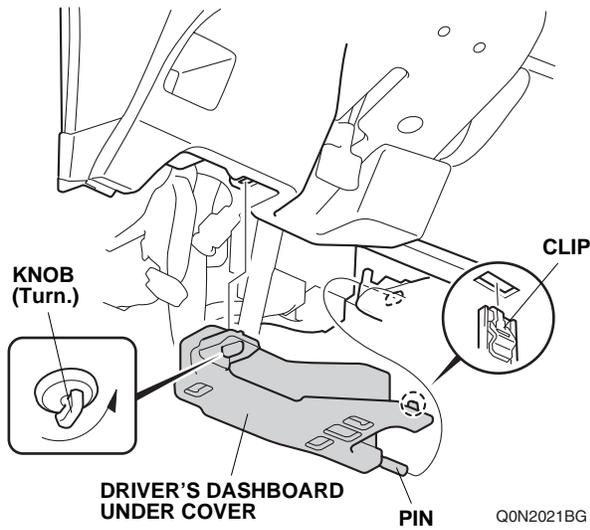


13. Remove the driver's dashboard lower cover and unplug the vehicle connectors.

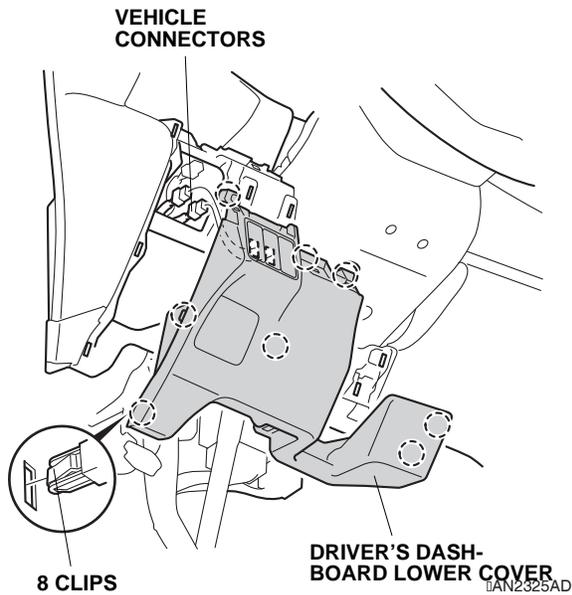


14. Remove the driver's front door sill trim.

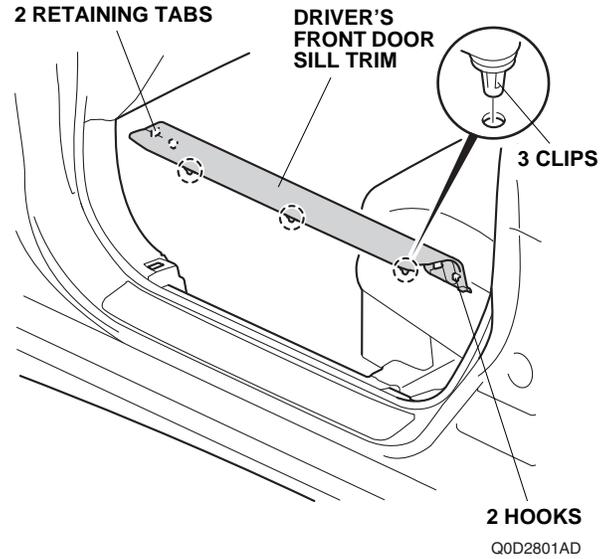


15. Attach the masking tapes to the vehicle panel along the driver's front step garnish.

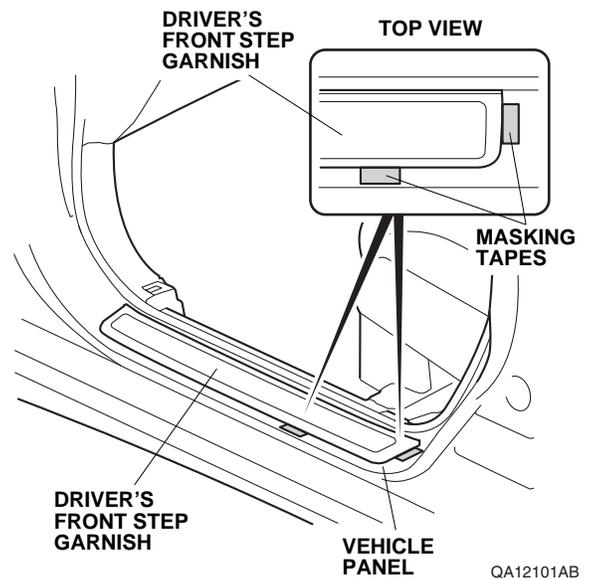


- Pull away the door opening seal, and remove and discard the driver's front step garnish.

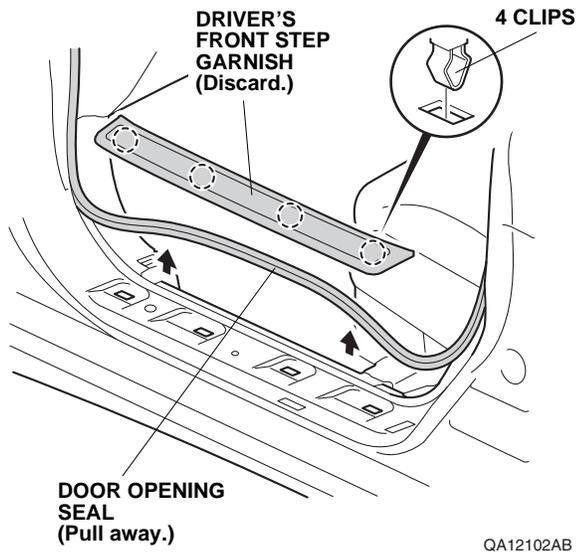

- Pull away the door opening seal, and remove the driver's kick panel.

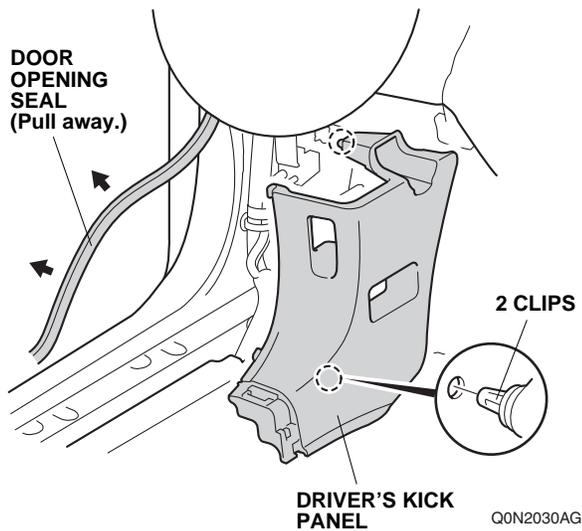


- Remove the left console cover.

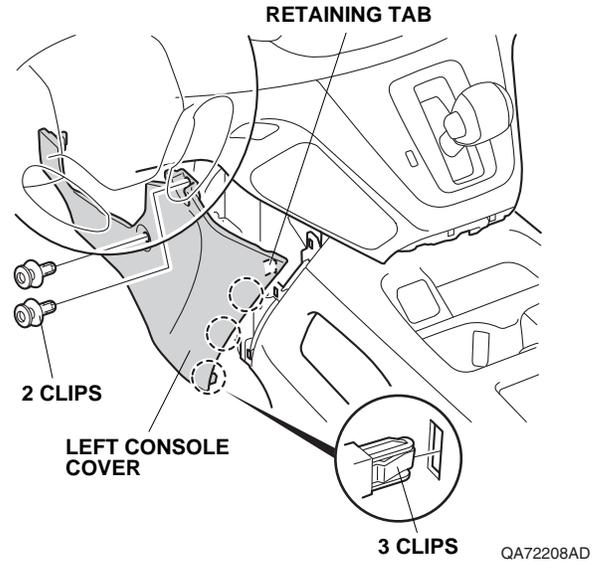


### Installing the front illuminated door sill trims and rear door sill trims


- Align the right front illuminated door sill trim with the masking tapes attached in step 7, and position the right front illuminated door sill trim.

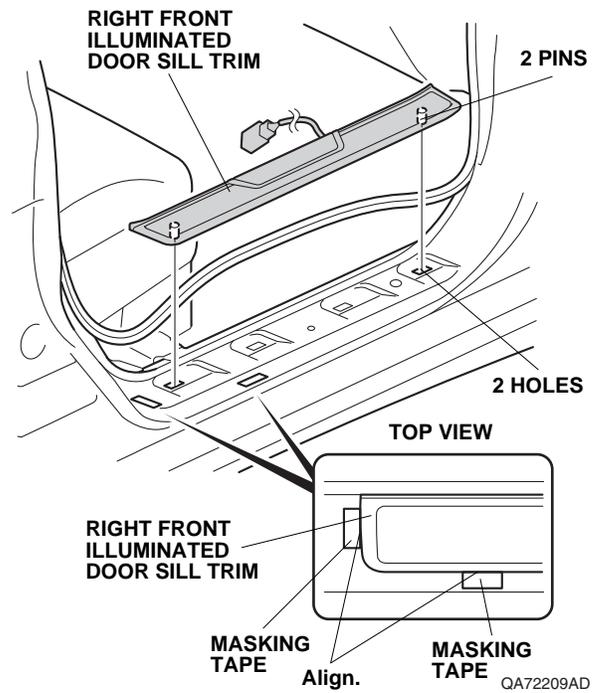


20. Reinstall the door opening seal, and using a felt-tip pen to mark the door opening seal as shown.

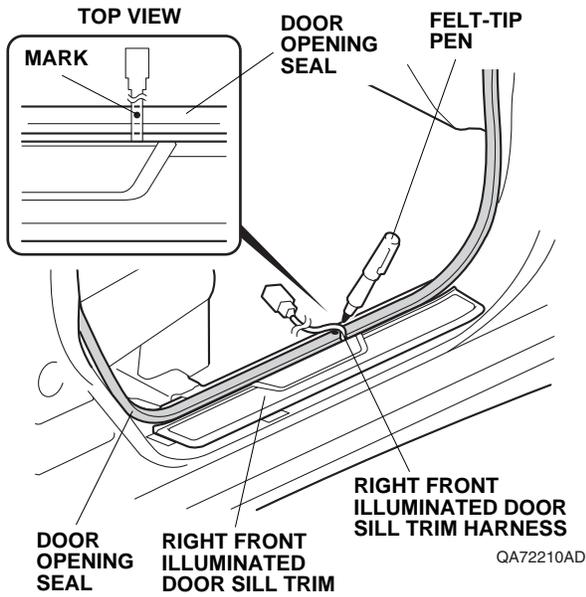

21. Pull away the door opening seal, and remove the right front illuminated door sill trim.

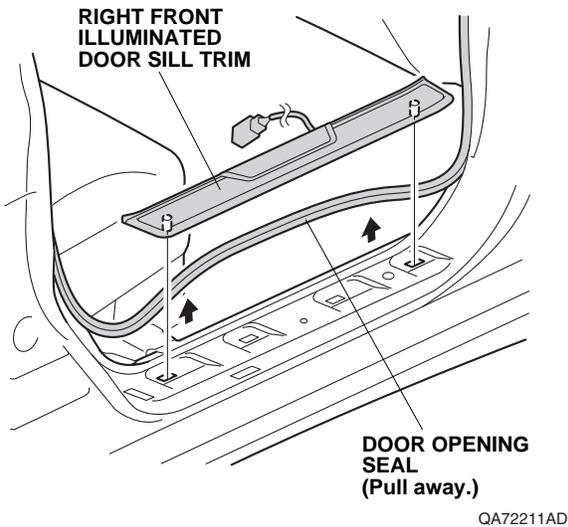


22. Using an utility knife, cut the door opening seal at the mark made in step 20.

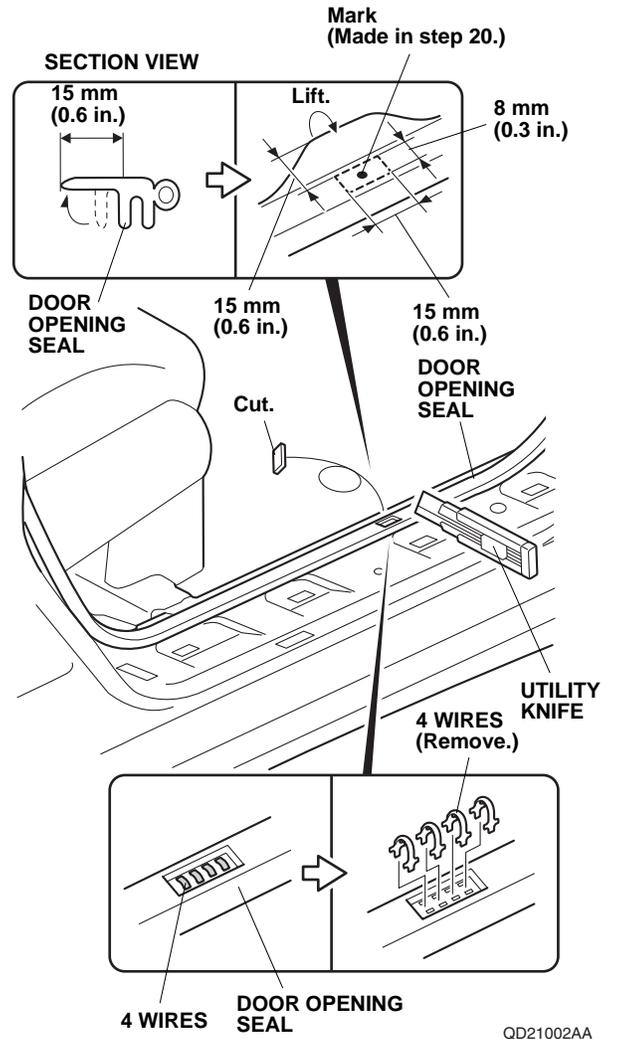


23. Remove the four wires from the part of the door opening seal.

24. Remove the adhesive backings from the right front illuminated door sill trim.

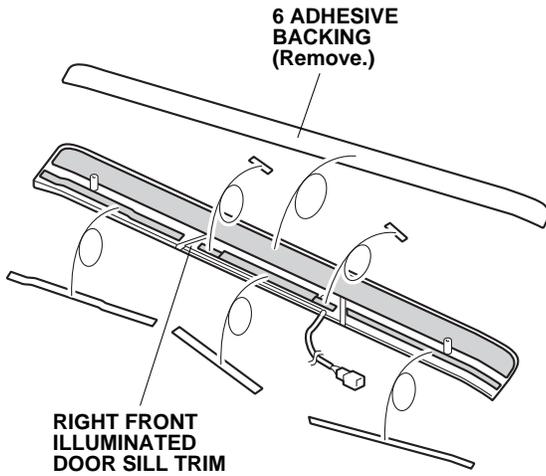


QA12415AB

25. Using one alcohol swab, thoroughly clean the vehicle panel where the right front illuminated door sill trim will attach.

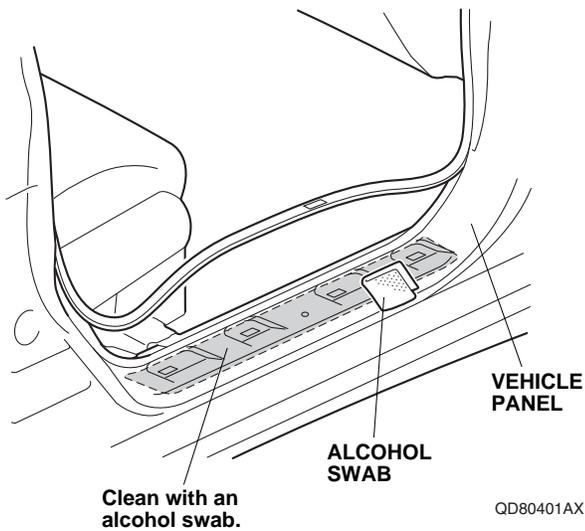


QD80401AX

26. Align the right front illuminated door sill trim with the masking tapes and install the right front illuminated door sill trim to the vehicle panel.

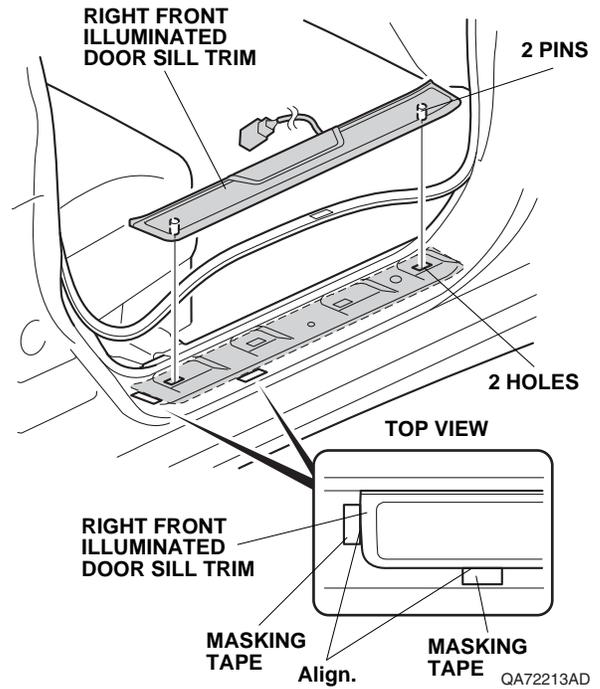


QA72213AD

27. Using scissors, cut the protective tape as shown.

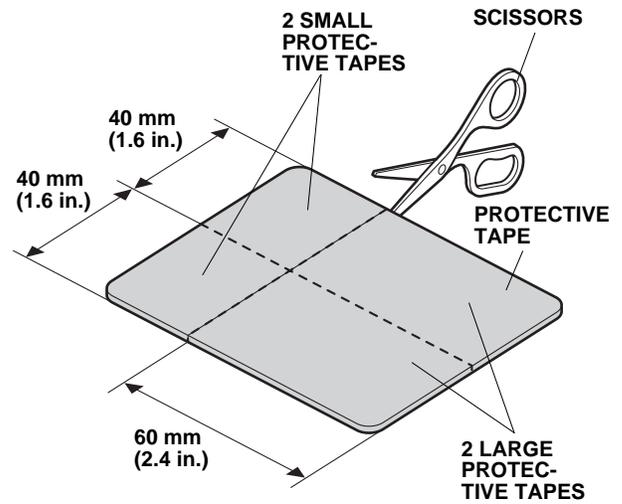


911405AX

28. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the small protective tape will attach. Attach one piece of small protective tape to the vehicle panel as shown.

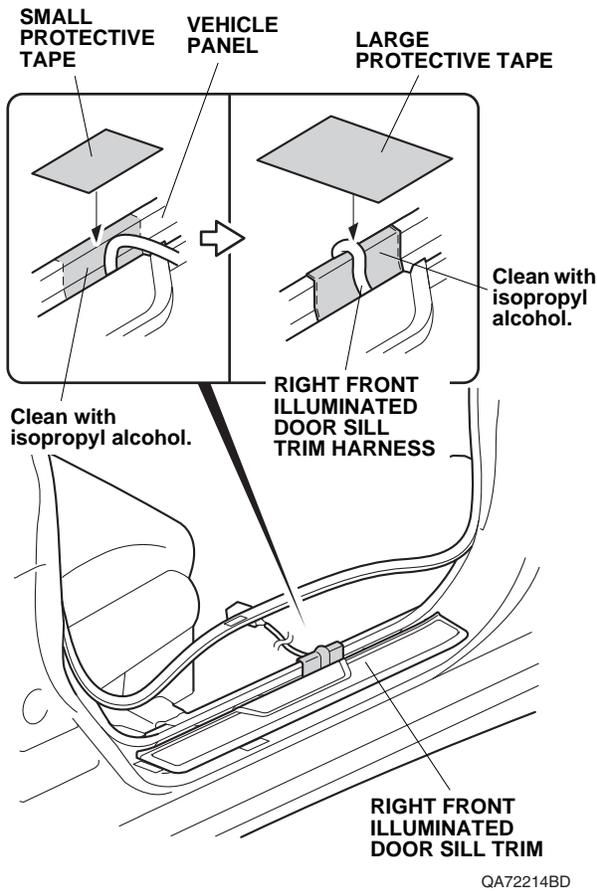


29. Using isopropyl alcohol on a shop towel, thoroughly clean the small protective tape where the large protective tape will attach. Secure the right front illuminated door sill trim harness to the vehicle panel with the large protective tape as shown.


30. Reinstall the door opening seal.

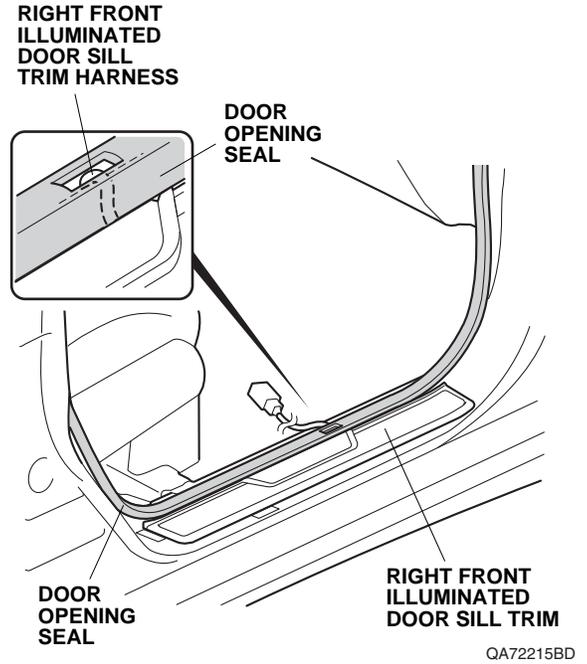


31. Remove the masking tapes.
32. Peel back the adhesive backings, and tape them to the front surface of the right rear door sill trim with masking tape. Remove the other adhesive backing.

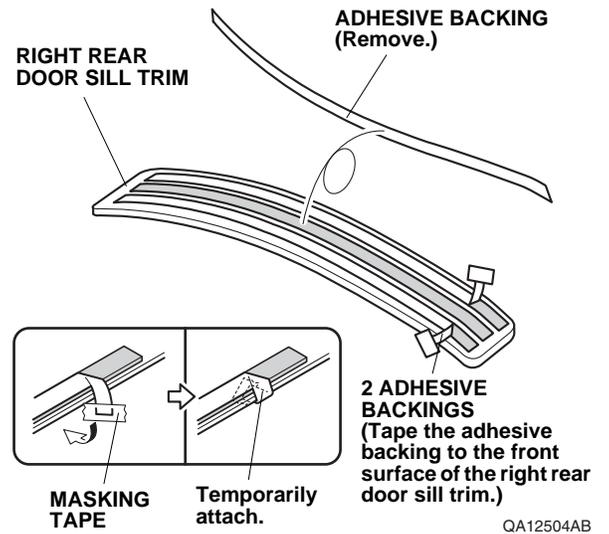


33. Using one alcohol swab, thoroughly clean the right rear step garnish where the right rear door sill trim will attach.

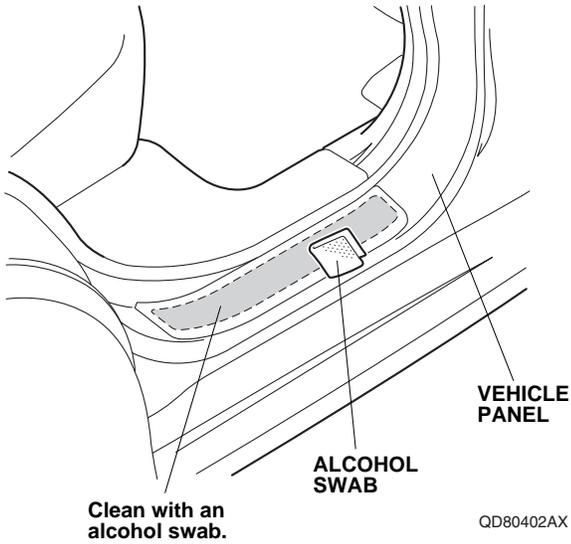

34. Install the right rear door sill trim to the right rear step garnish.

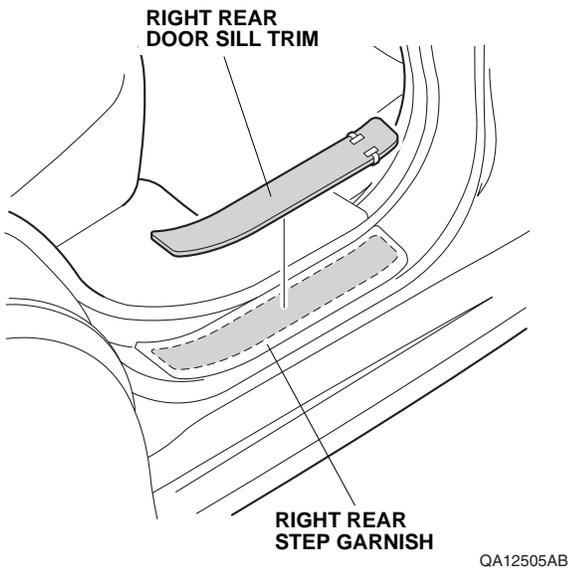


35. While applying light pressure against the right rear door sill trim, carefully remove the adhesive backings.

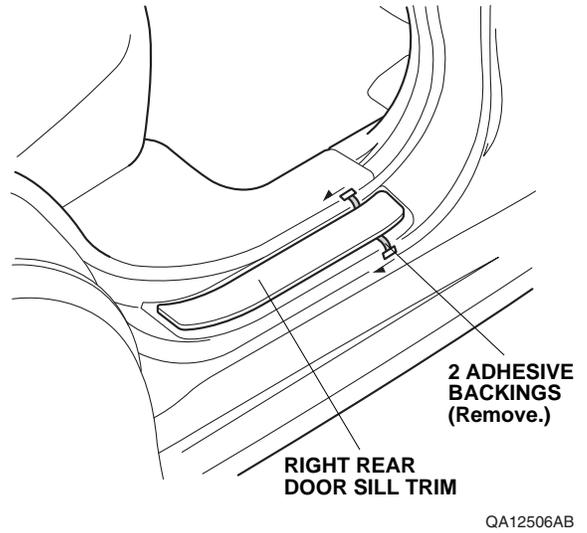


36. Repeat steps 19 through 35 to install the left front illuminated door sill trim and left rear door sill trim on the left side of the vehicle.

### Routing the Door Sill Trim Harness


37. Unplug the vehicle connectors from the fuse box as shown.

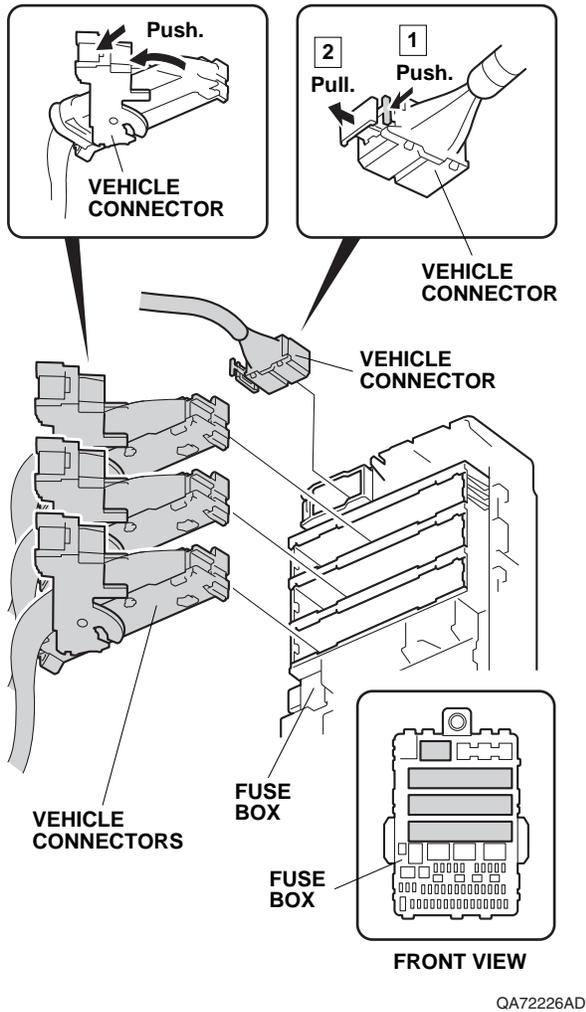


38. Release the fuse box.

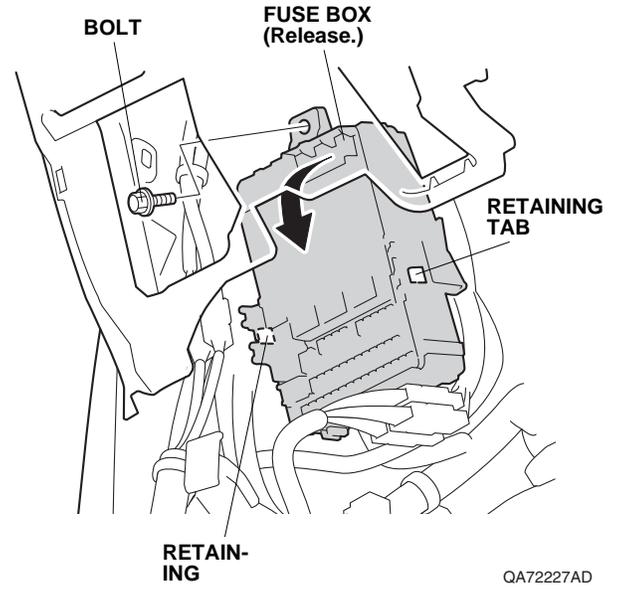

39. Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach. Attach the fuse label (2A STEP ILLUMI) to the fuse case on the door sill trim harness.

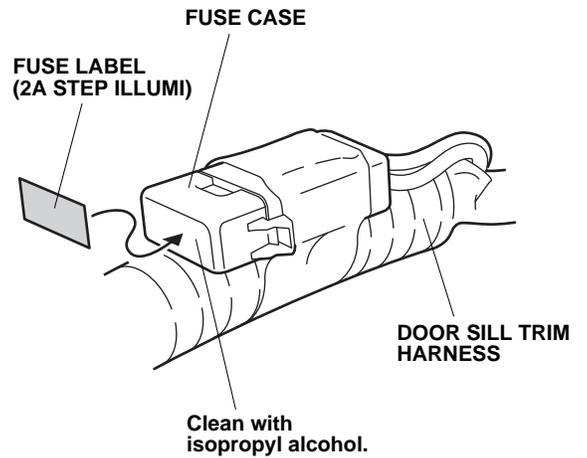


40. Unplug the vehicle 13-pin connector, and plug it into the door sill trim harness 13-pin connector.

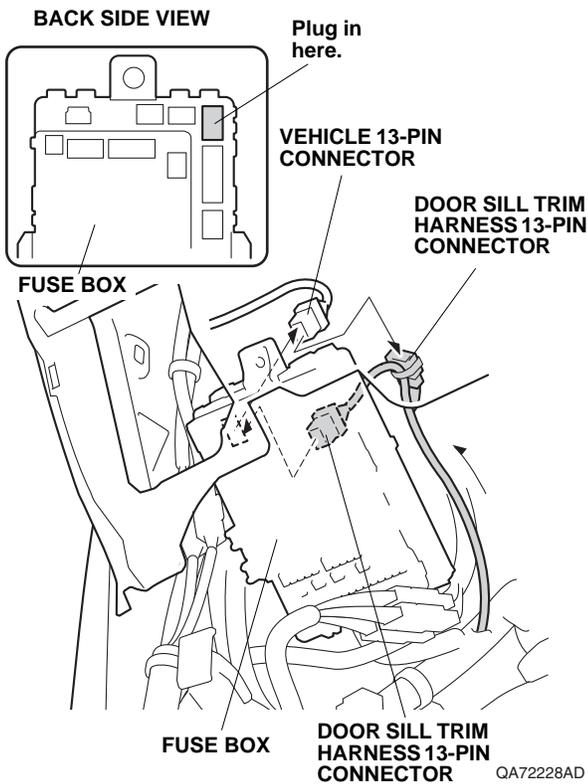


41. Plug the remaining door sill trim harness 13-pin connector into the fuse box.  
 42. Reinstall the fuse box.


43. Route the door sill trim harness as shown. Align the green tape on the door sill trim harness with the hole on the instrument panel, and secure the door sill trim harness to the instrument panel with one wire tie.

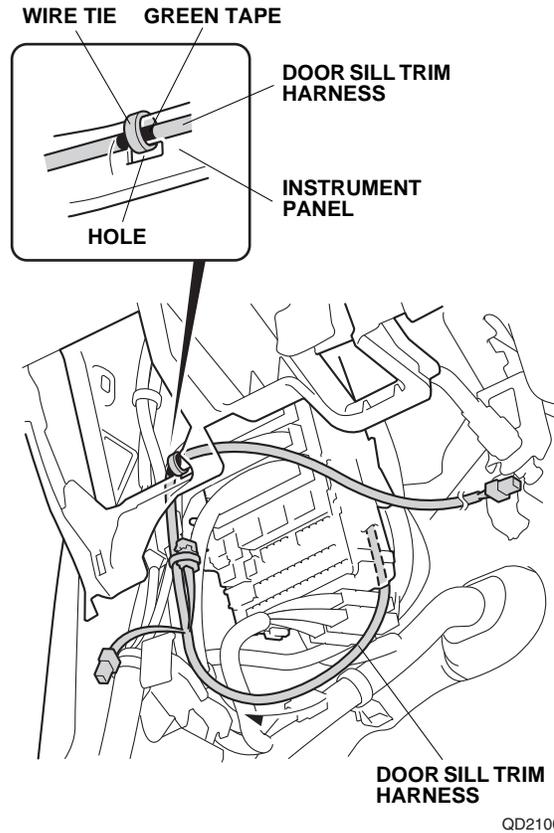

44. Secure the door sill trim harness to the vehicle harness with three wire ties.

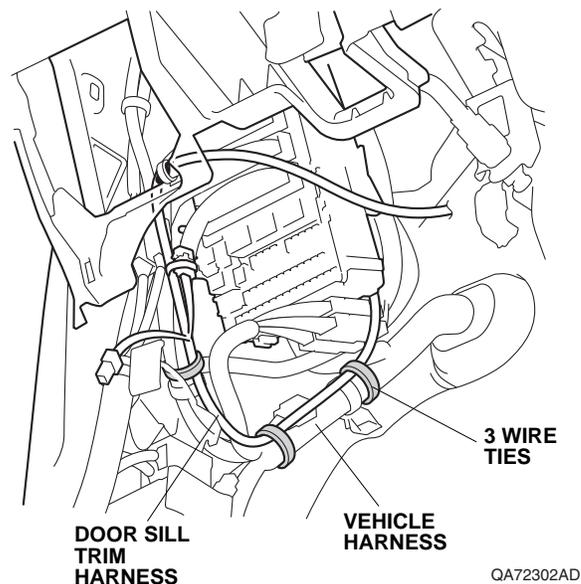


45. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tapes will attach.

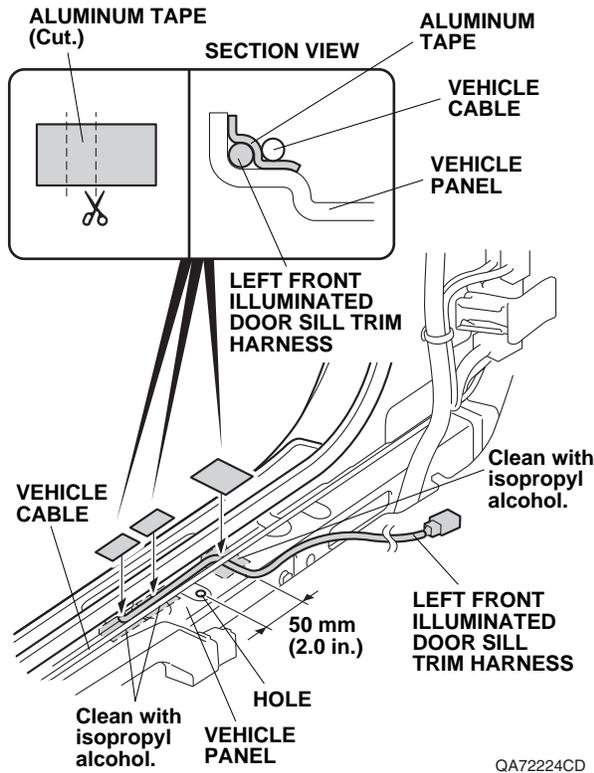


46. Using scissors, cut one aluminum tape, and secure the left front illuminated door sill trim harness to the vehicle panel with the three pieces of aluminum tape as shown.

47. Peel the floor carpet.

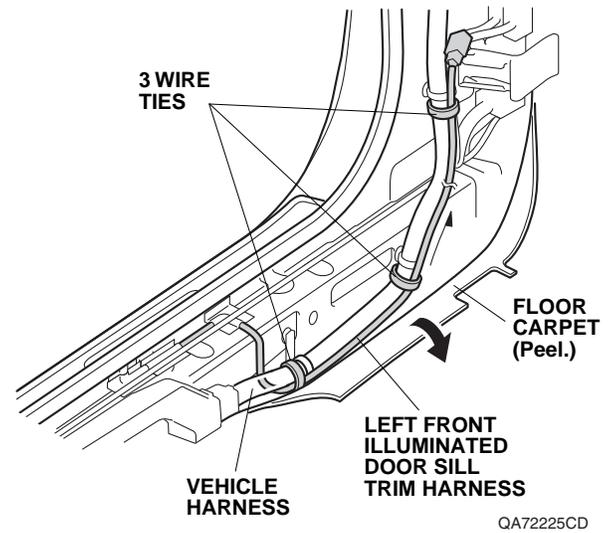

48. Route the left front illuminated door sill trim harness, and secure it to the vehicle harness with three wire ties.


49. Plug the door sill trim harness 2-pin connector into the left front illuminated door sill trim harness 2-pin connector.

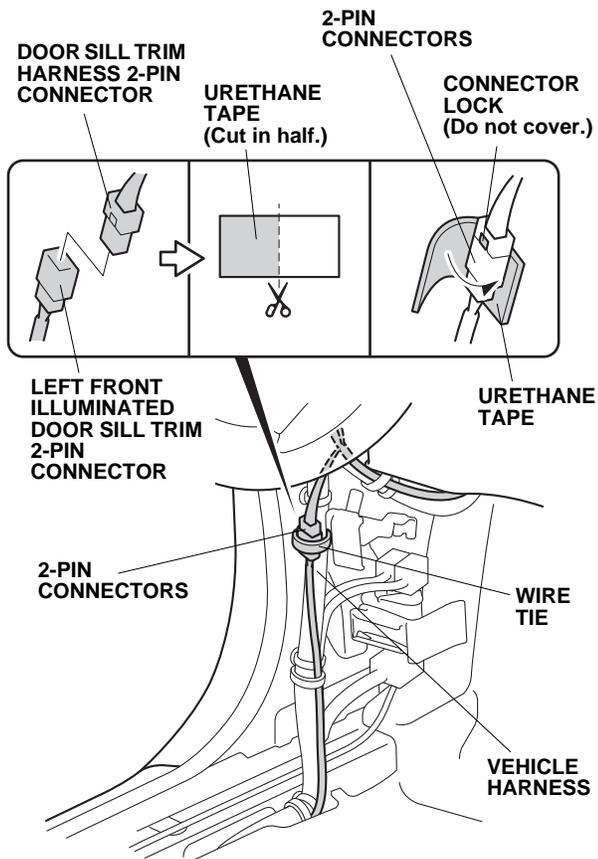

QA72303AD


50. Using scissors, cut one urethane tape in half, and attach one piece of urethane tape around the 2-pin connectors.  
NOTE: Do not cover the connector lock.
51. Secure the 2-pin connectors to the vehicle harness with one wire tie.

52. Route the door sill trim harness, and secure it to the instrument panel with one wire tie.  
If the vehicle is already equipped with other accessory harness, secure the door sill trim harness to the other accessory harness with one wire tie as shown.

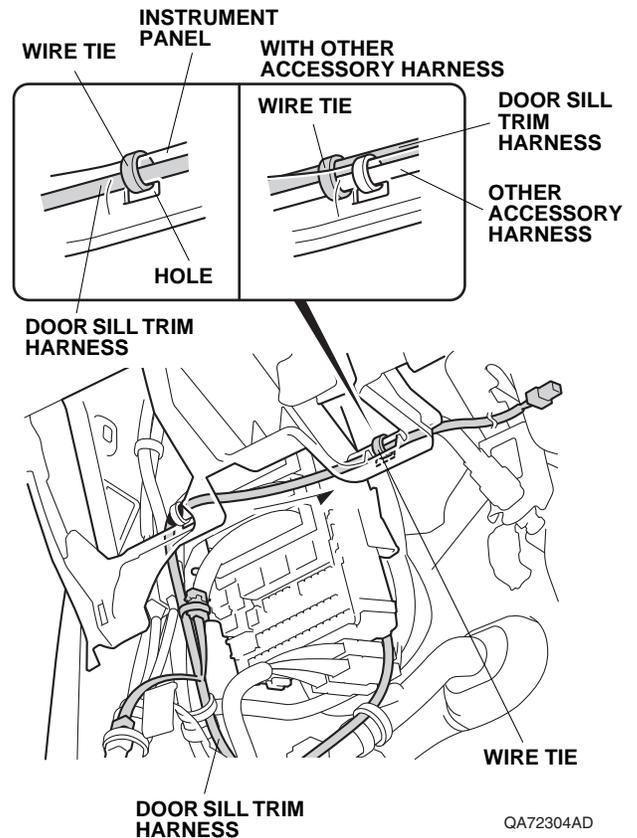


QA72304AD


53. Route the door sill trim harness, and secure it to the vehicle frame with one wire tie.

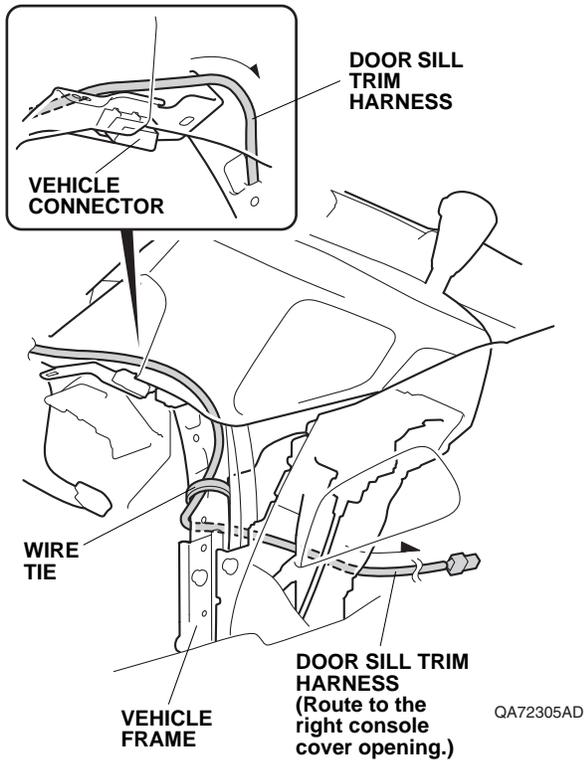


54. Route the door sill trim harness, and secure it to the vehicle frame with two wire ties.

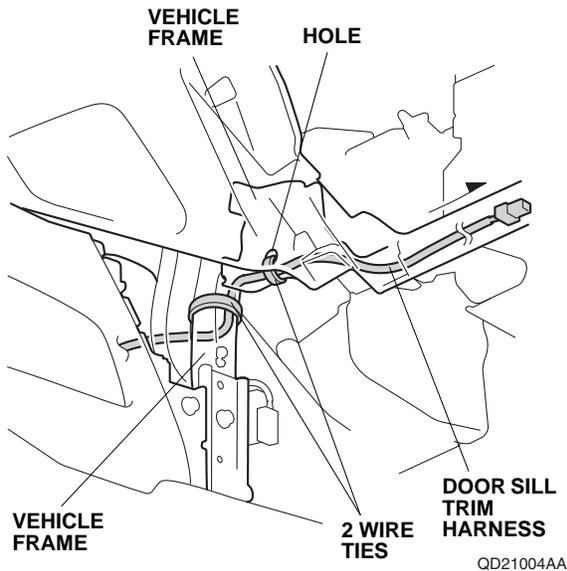

55. Route the door sill trim harness along the vehicle frame.

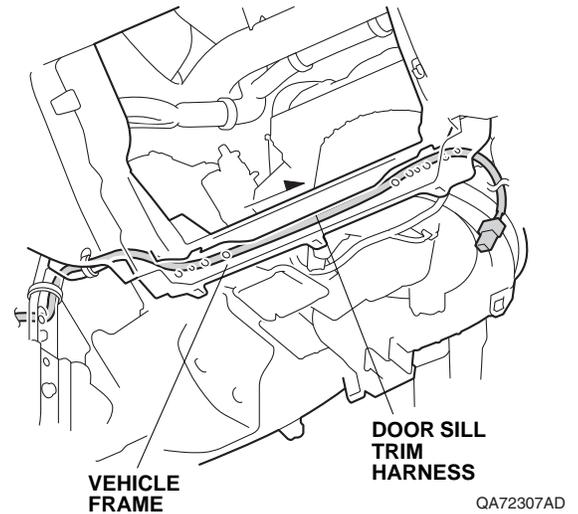


56. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tapes will attach.

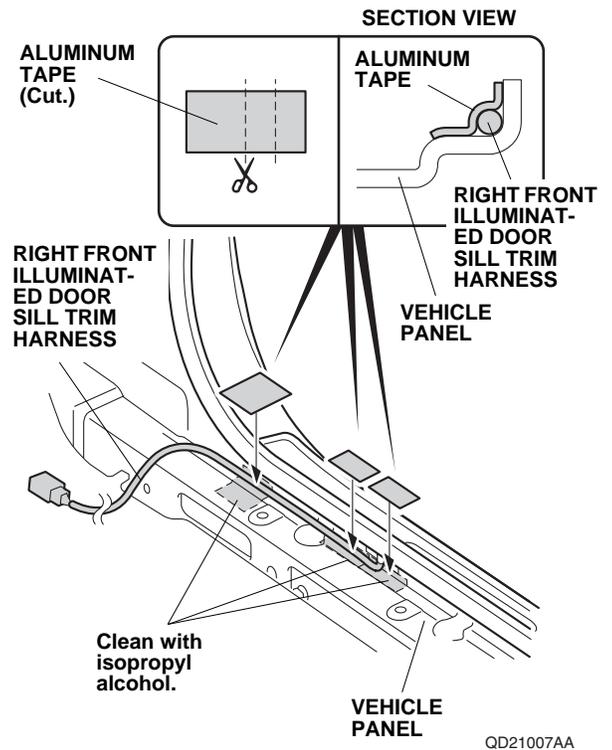

57. Using scissors, cut one aluminum tape, and secure the right front illuminated door sill trim harness to the vehicle panel with the three pieces of aluminum tape as shown.


58. Plug the door sill trim harness 2-pin connector into the right front illuminated door sill trim harness 2-pin connector.

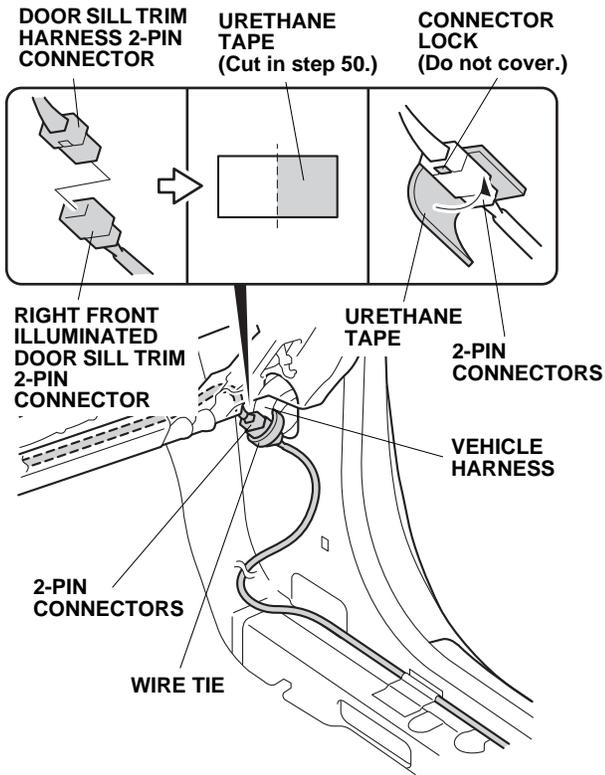

QB71704AY


59. Attach one piece of urethane tape cut in step 50 around the 2-pin connectors.
60. Secure the 2-pin connectors to the vehicle harness with one wire tie.

61. Secure the right front illuminated door sill trim harness to the hole in the vehicle panel with the wire tie with clip B.
- If the vehicle is equipped with the vehicle unit, using diagonal cutters, cut the clip portion off of one wire tie with clip B. Secure the right front illuminated door sill trim harness to the vehicle harness with cut wire tie with clip B.

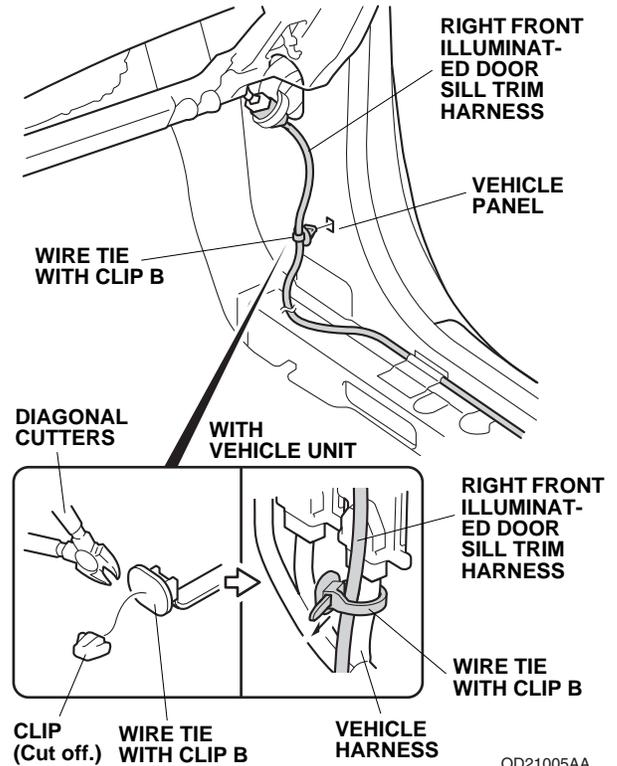


QD21005AA

62. Using isopropyl alcohol on a shop towel, thoroughly clean the vehicle panel where the aluminum tape will attach.

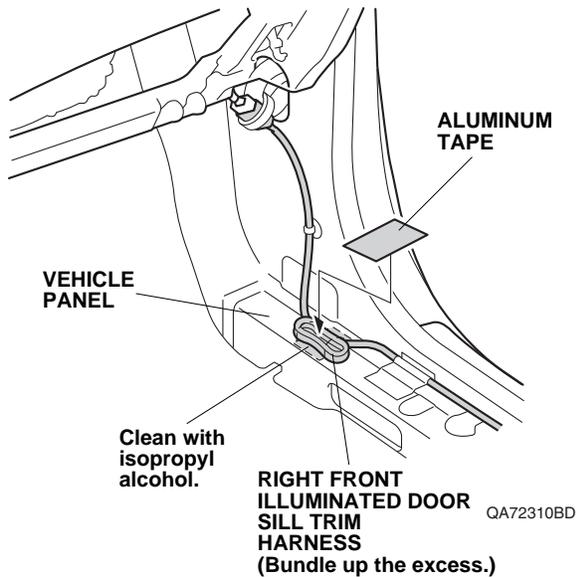

63. Bundle up the excess right front illuminated door sill trim harness, and secure it to the vehicle panel with one aluminum tape.
64. Secure the door sill trim harness to the holes in the vehicle frame with two wire ties with clip A.

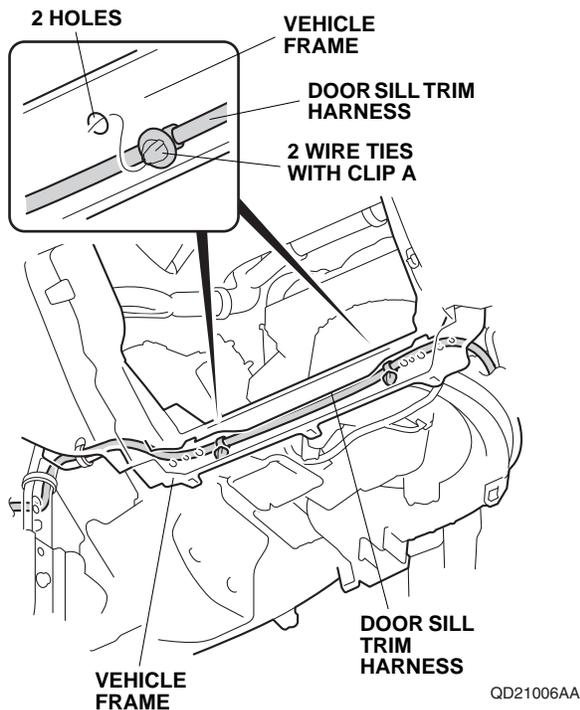

65. Check that all wire harnesses are routed properly and all connectors are plugged in.
66. Reinstall all removed parts.
67. Reconnect the negative cable to the battery.
68. Press and hold the radio power button for two seconds to restore the radio and navi (if equipped) system functions.
69. Reset the clock on vehicle without navigation.
70. Restore the systems back to normal operation as described in the Service Manual if necessary.

### Check the Operation of the Illuminated Door Sill Trims

71. Make sure the light comes on when you open each door.