



# INSTALLATION INSTRUCTIONS


Accessory  
**TAILGATE TRIM**  
P/N 08F52-SZT-100

Application  
**2016 CR-Z**

Publications No.  
**VERSION 1**  
Issue Date  
**OCT 2015**

## PARTS LIST


Tailgate trim

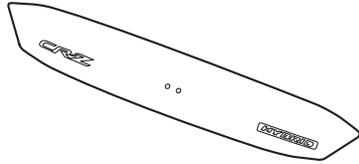

“H” Emblem



2 Alcohol swabs



2 Clips



## TOOLS AND SUPPLIES REQUIRED


Masking tape

String

Utility knife

Needle nose pliers

## Illustration of the Tailgate Trim on the Vehicle

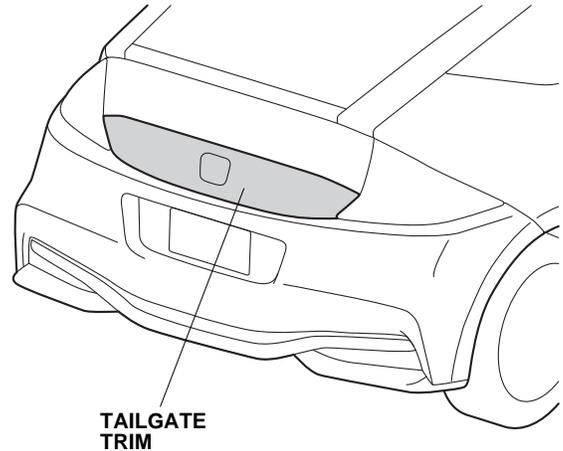

TAILGATE TRIM

QE41701AG


## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

### NOTE:

- Do not damage the paint finish.
- This kit should be installed only if the ambient air temperature is 15° C (60° F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Make sure your customer is aware of this.


1. Apply masking tape as shown.

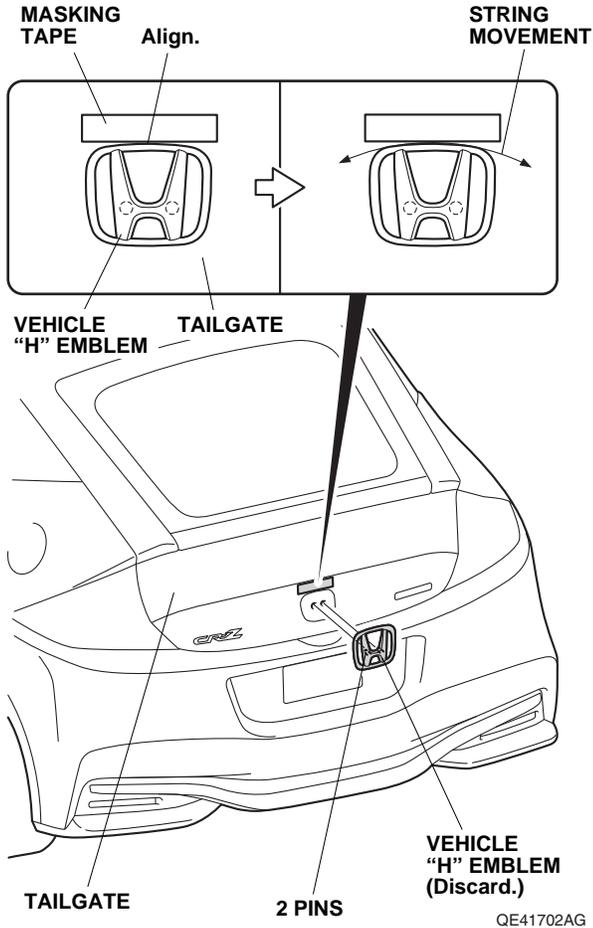

QE41702AG


2. Using a string, remove the vehicle "H" emblem as shown.  
NOTE: Do not damage the vehicle when removing the emblem with the string.
3. Remove the masking tape.

4. Using a string, remove the vehicle "CR-Z" emblem and vehicle "HYBRID" emblem as shown.  
NOTE: Do not damage the vehicle when removing the emblems with the string.

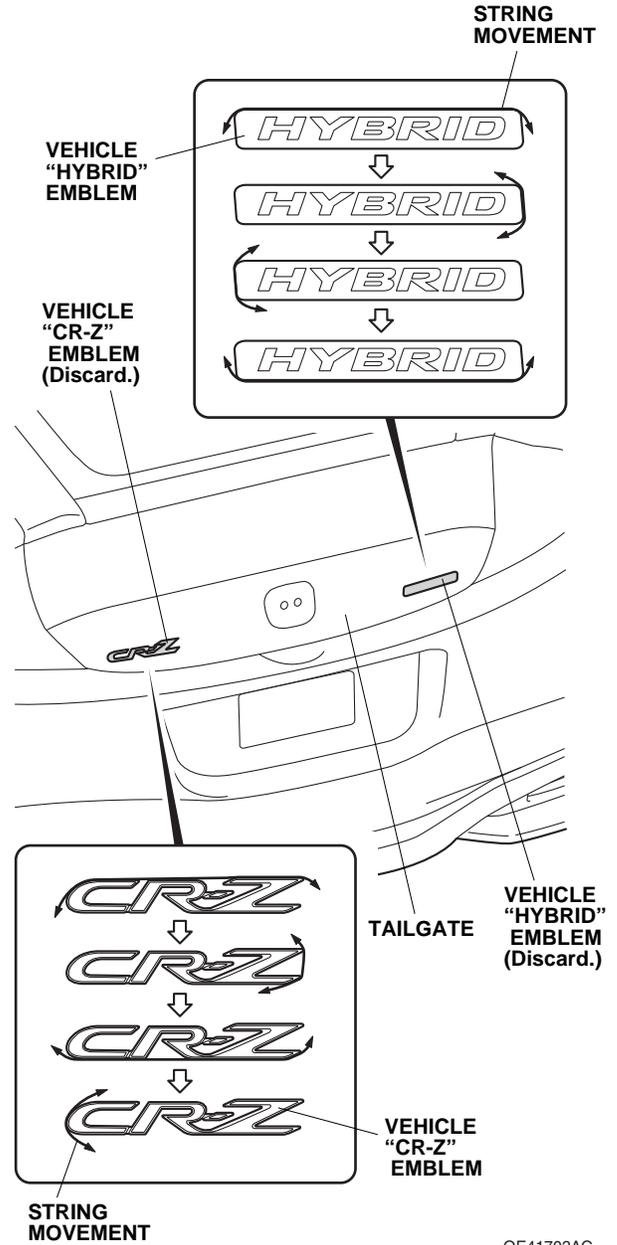


QE41703AG

- If the clips on the vehicle "H" emblem remained on the vehicle, use a needle nose pliers to remove the clips.  
NOTE: Do not damage the vehicle when removing the clips.

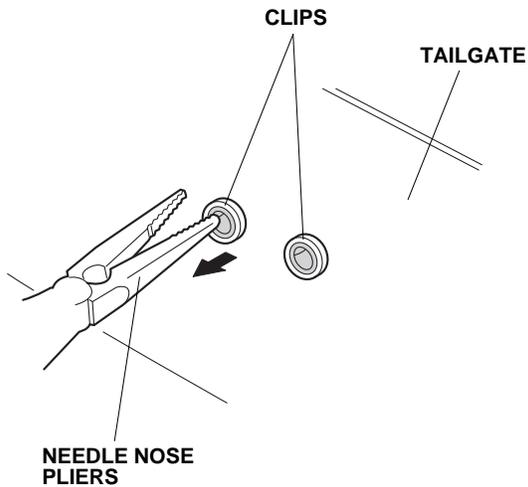


6529110S

- Using one alcohol swab, thoroughly clean the area where the tailgate trim will attach.

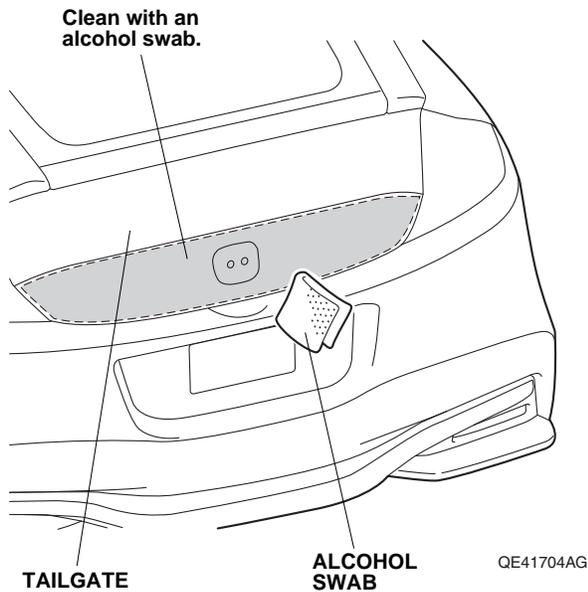

QE41704AG


- Using a utility knife, cut the adhesive backing on the tailgate trim as shown.

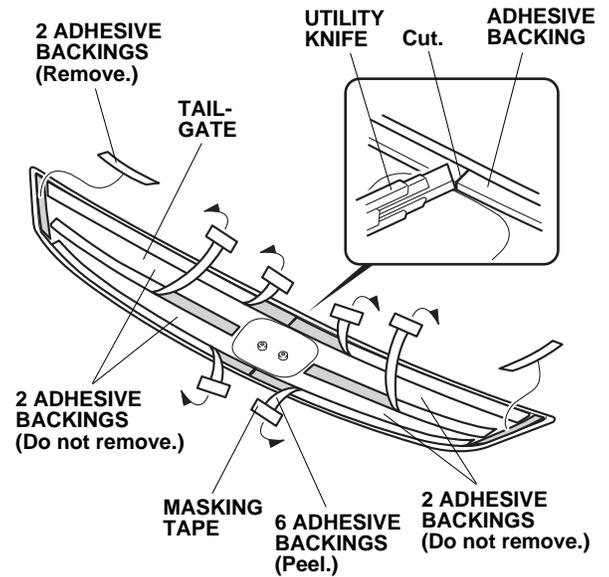


973006BY

- Attach the strips of masking tape to the end of the adhesive backings as shown. Peel back the adhesive backings partway and temporarily attach them to the front surface of the tailgate trim.
- Remove the remaining adhesive backings.


10. Align and attach the tailgate trim to the tailgate.

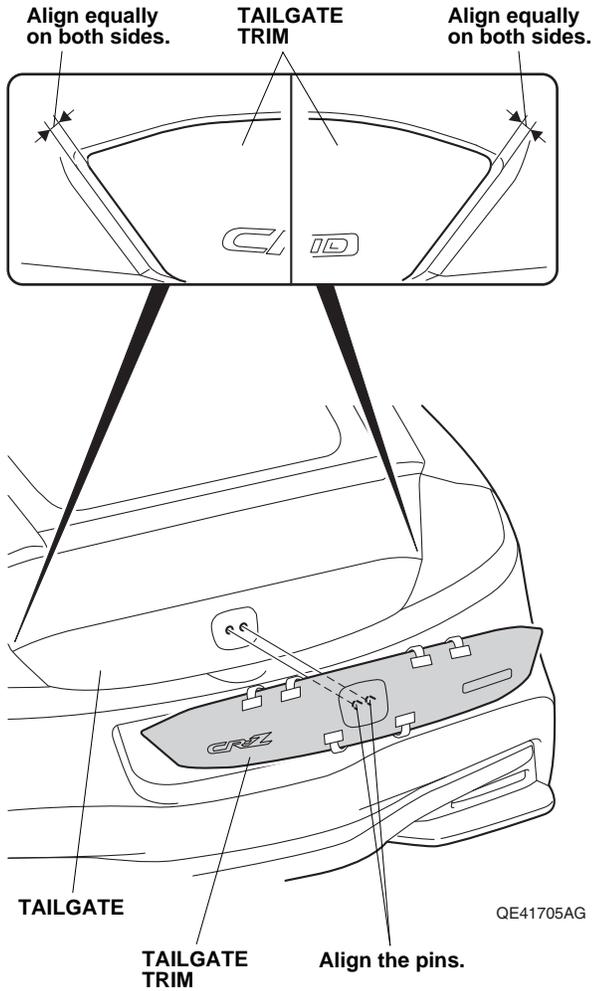

11. Secure the tailgate trim to the tailgate with two clips.

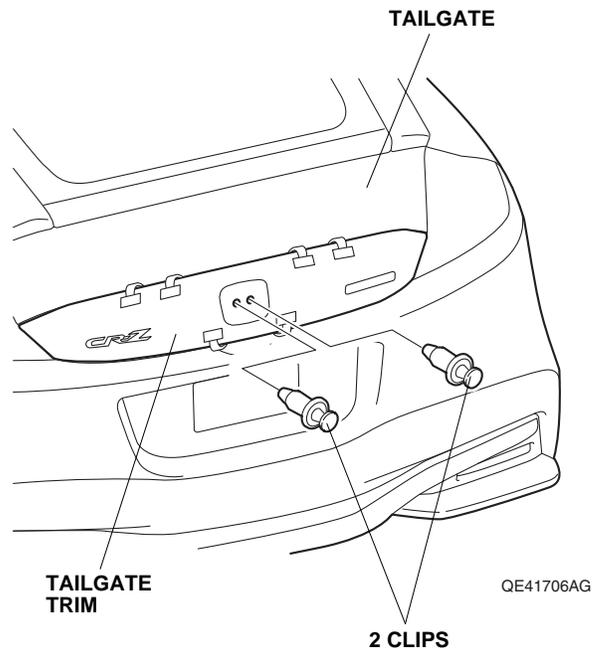


12. While applying light pressure to the tailgate trim, carefully remove the taped adhesive backings in the order shown.

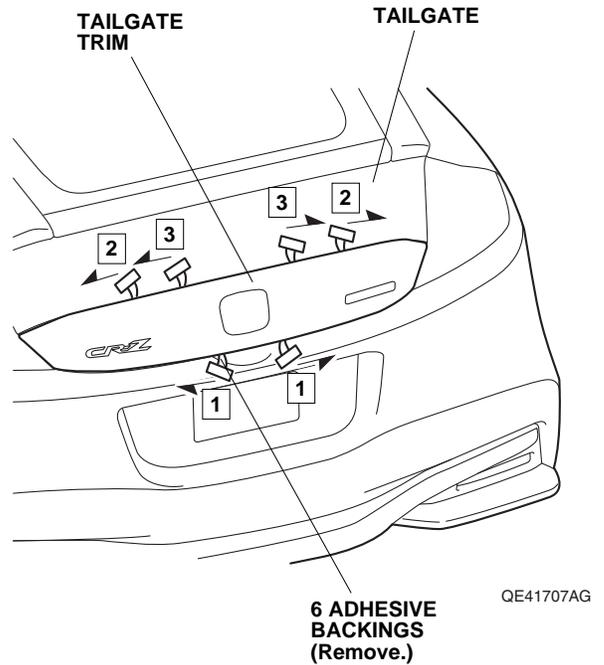


13. Using the palm of your hand, firmly press the tailgate trim to the tailgate.

14. Align the "H" emblem to the tailgate trim as shown.

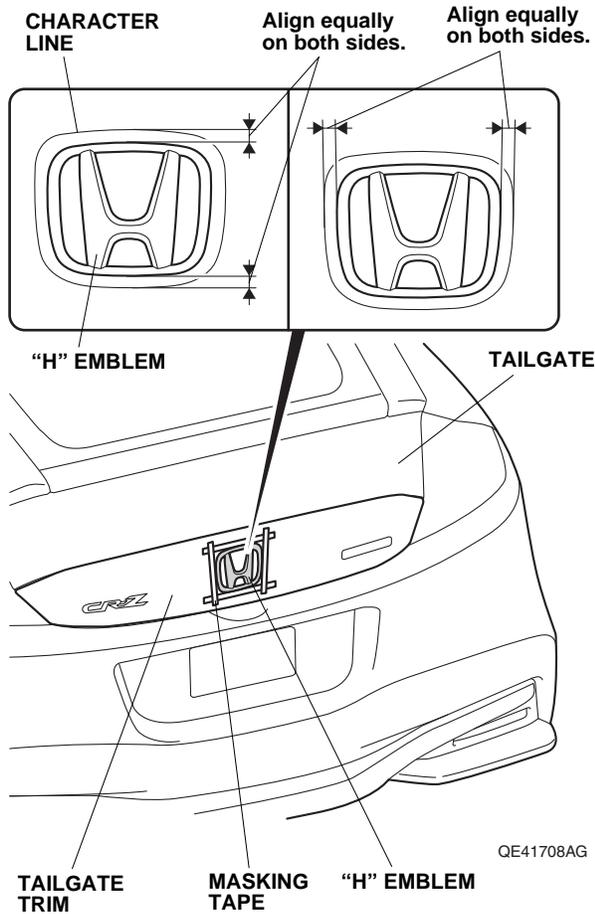


15. Apply masking tape around the "H" emblem.  
16. Remove the "H" emblem.

17. Using one alcohol swab, thoroughly clean the area where the "H" emblem will attach.  
NOTE: Make sure to use the second alcohol swab included in the kit.

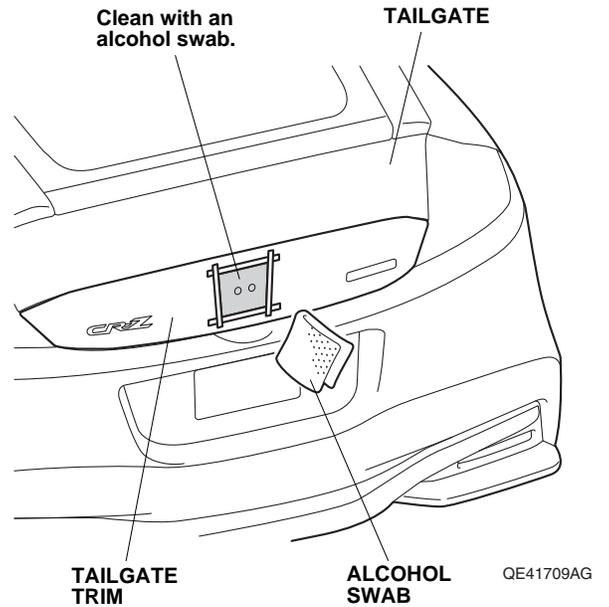

18. Remove the adhesive backing from the "H" emblem. Align the "H" emblem with the masking tape attached in step 15 and attach it to the tailgate trim.

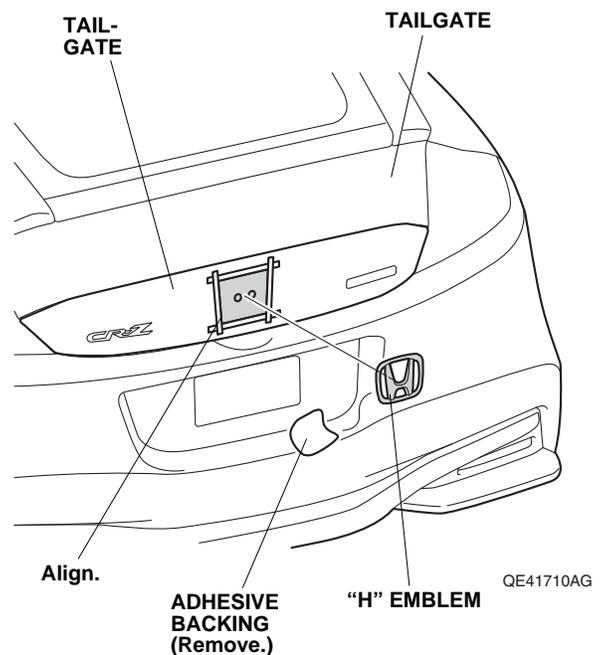

19. Using the palm of your hand, firmly press the "H" emblem to the tailgate trim.  
20. Remove the masking tape.