



INSTALLATION INSTRUCTIONS


Accessory
FULL NOSE MASK
P/N 08P35-T2F-100

Application
2017 ACCORD
4-DOOR


Publications No.
VERSION 1
Issue Date
JUN 2016

PARTS LIST

Mask
(hood section)

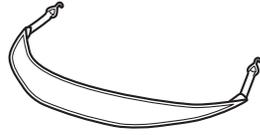

Mask
(bumper section)

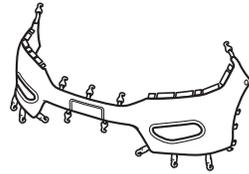

2 Snap-screws




2 Washers



2 Fenderwell nuts



Storage bag

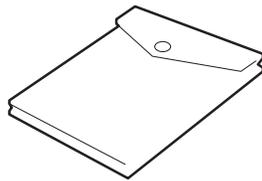

TOOLS AND SUPPLIES REQUIRED


Stubby Phillips screwdriver

Flat-tip screwdriver

Scissors

Utility knife

Illustration of the Full Nose Mask on the Vehicle

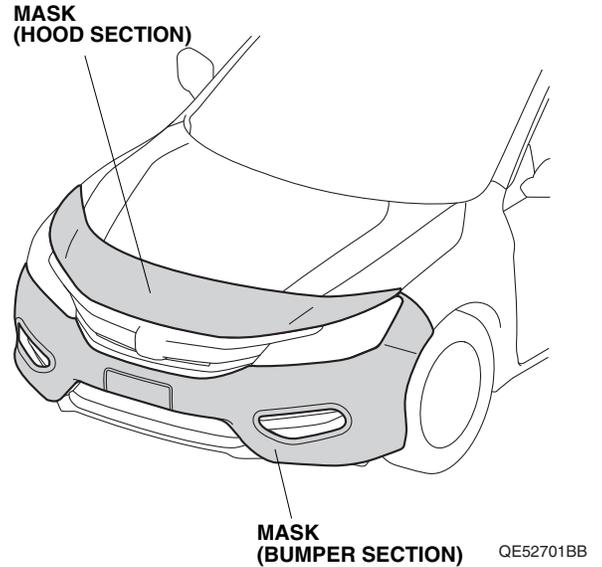

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”


NOTE:

- Make sure the vehicle and nose mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Clean and wax the areas to be covered using a high-quality paste wax.
- Make sure to install the nose mask securely. If the nose mask starts to flap or comes loose while driving, safely pull to the side of the road, stop the vehicle, and secure or remove the nose mask.

Displaying the License Plate

If your state law requires the display of both license plates, cut out the piece of the bumper section that covers the front license plate:


- Face the inside of the mask toward you.
- Carefully cut out the overcast stitching with scissors. Remove the stitching and license plate section.

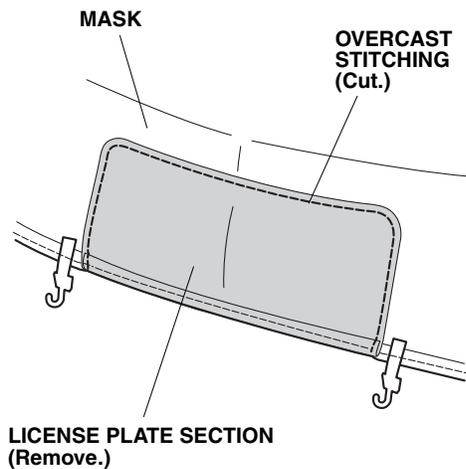

QB53102AY

Installing the Hood Section


1. Open the hood. Fit the corners of the mask (hood section) around the hood. Adjust the mask so that it fits smoothly over the edges. Attach eight hooks to each hole in the hood. Remove / install the hooks by inserting your finger into the belt of each hook. Pulling the hooks with excessive force can break the hook strap.

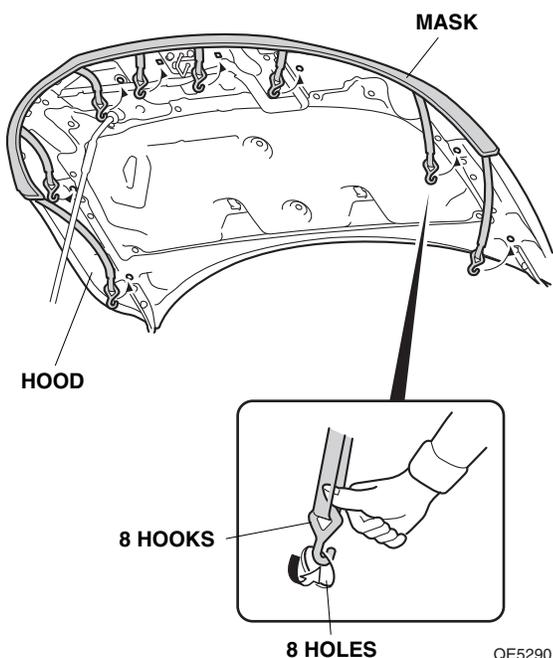

QE52901AB

Installing the Bumper Section


2. Turn the steering wheel fully clockwise.

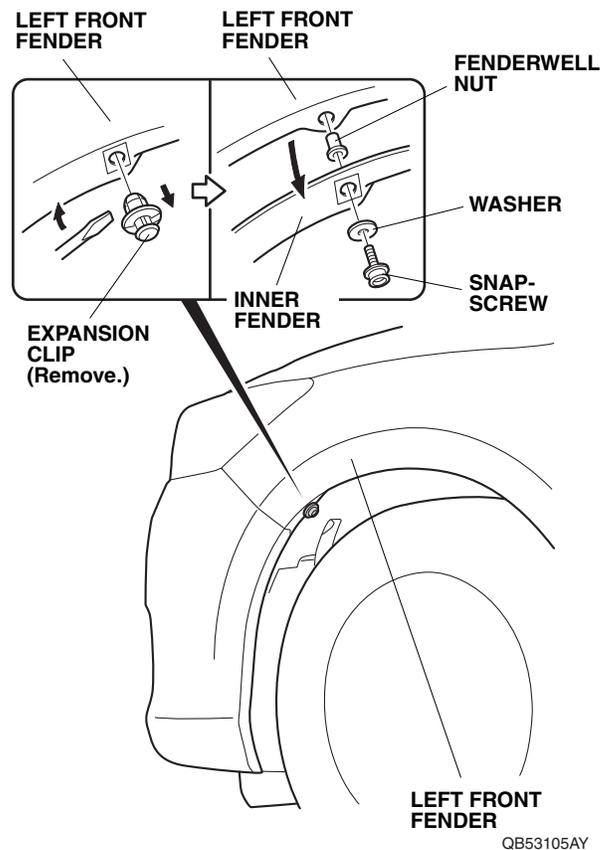


QB53105AY

3. Remove the expansion clip that fastens the inner fender, then clean the area around the hole.
4. Pull the inner fender out, and insert one fenderwell nut into the hole on the left front fender.
5. Place one washer onto the snap-screw, then install and securely tighten the snap-screw into the fenderwell nut.
6. Turn the steering wheel fully counterclockwise, and repeat steps 3 through 5 on the right side.


7. Insert seven tabs under the left headlight, and attach one hook to the vehicle panel. Repeat on the right side.

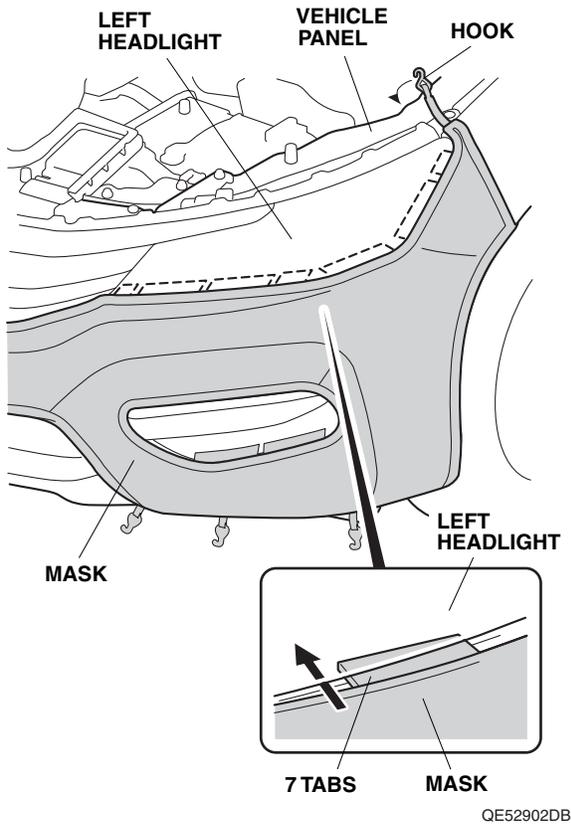


8. Insert two tabs under the left fog light trim. Repeat on the right side.

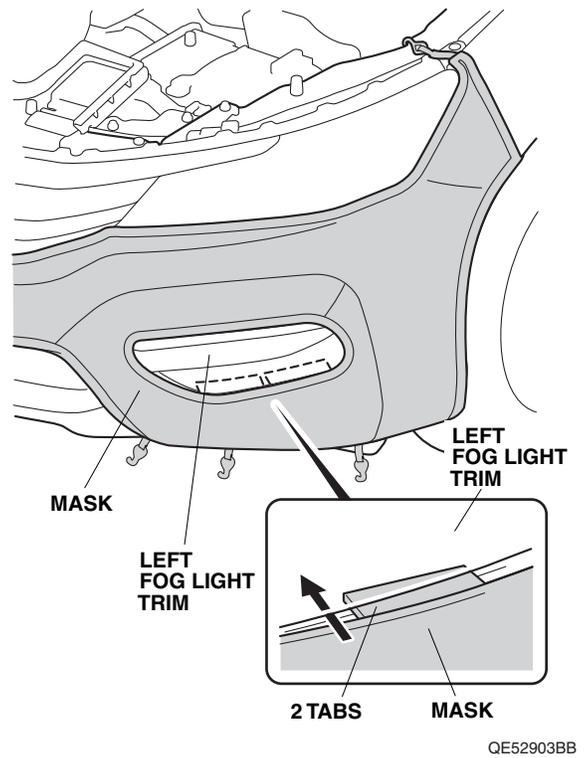


9. Pull the mask back toward the fenderwell, smooth out any wrinkles, and then snap the mask onto the snap-screw. Repeat on the right side.

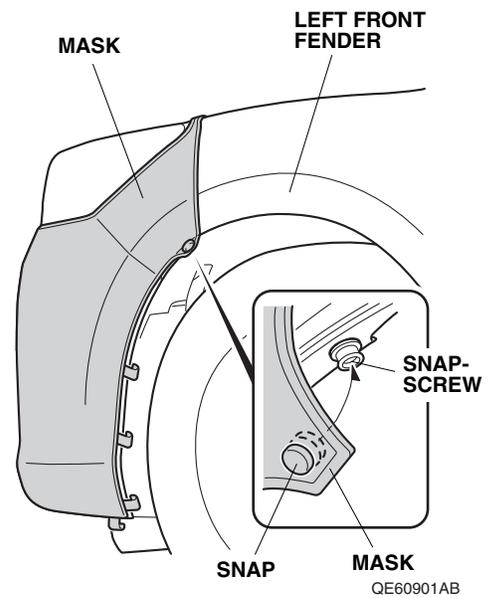

10. Attach four plastic hooks to the fenderwell. Repeat on the right side.

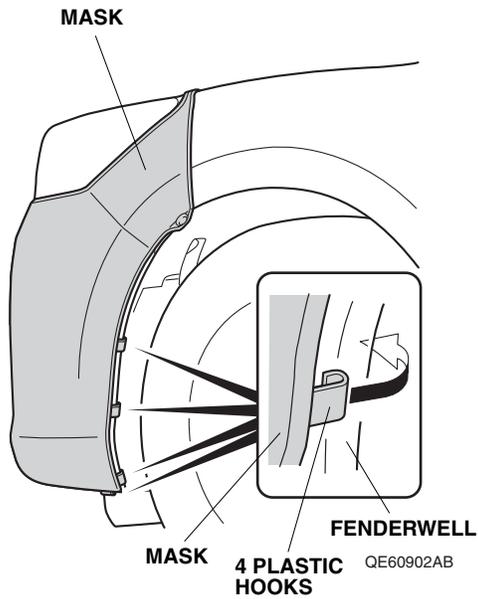


11. Close the hood. Attach three hooks to the inside edge of the front grille.

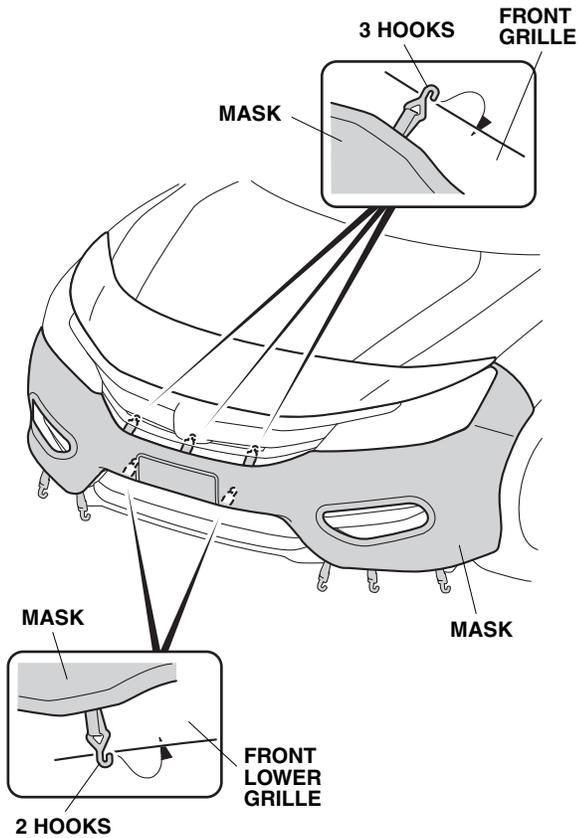

12. Attach two hooks to the inside edge of the front lower grille.

13. Attach three hooks to the holes in the under front bumper and the left front inner fender. Repeat on the right side.

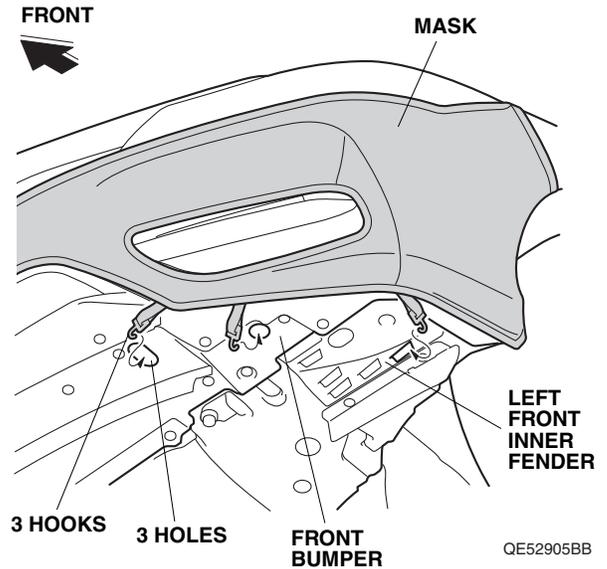

CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry out of direct sunlight. Make sure the mask is completely dry before you reinstall it.