



INSTALLATION INSTRUCTIONS

Accessory
SPORTS PEDALS

Application
2017 CIVIC
5-DOOR

Publications No.
VERSION 1

Issue Date
SEP 2016

PARTS LIST

Sports Pedal Kit (CVT models)
P/N 08U74-TEA-100

Accelerator pedal cover



Brake pedal pad cover



Brake pedal pad



4 Rivets A (without groove)



4 Rivets B (with groove)



Sports Pedal Kit (M/T models)
P/N 08U74-TEA-100A

Accelerator pedal cover



2 Pedal pad covers



2 Pedal pads



4 Rivets A (without groove)



6 Rivets B (with groove)



TOOLS AND SUPPLIES REQUIRED


Drill
3.5 mm Drill bit
Eye protection (face shield, safety goggles, etc.)
File
Pushpin
3.5 mm Hand riveter
Masking tape
Tape
Ruler

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


Installing the Sports Pedals

1. Apply masking tape to the accelerator pedal cover as shown.

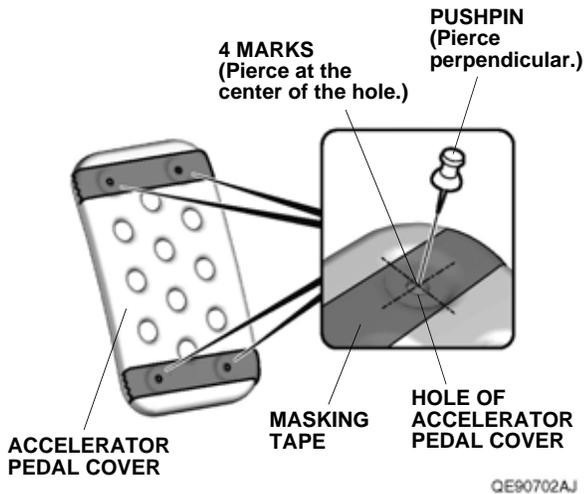


2. Using a pushpin, pierce masking tape as shown.

3. Using masking tape, loosely install the accelerator pedal cover onto the accelerator pedal as shown. NOTE: Be sure to install the accelerator pedal cover in the correct orientation.

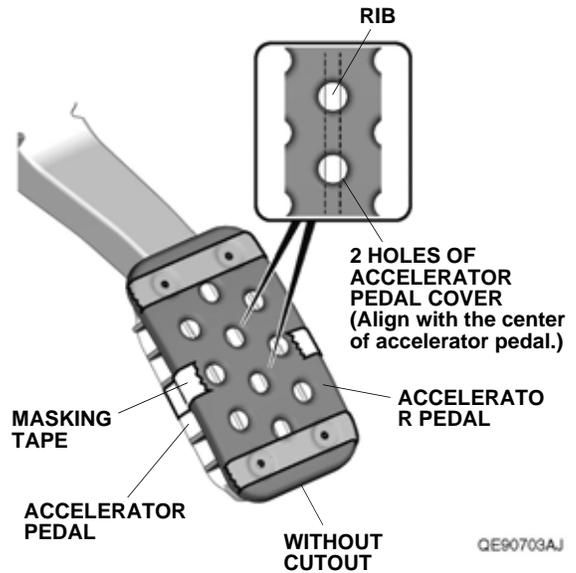

4. While wearing eye protection, drill the accelerator pedal at the four pierced marks with a 3.5mm drill bit. NOTE:

- Wrap the tape around the drill bit 7 mm (0.28 in.) from the tip of the drill.
- Hold the accelerator pedal firmly with your hand while drilling the hole.
- Make sure to drill perpendicular to the accelerator pedal. Remove any burrs.

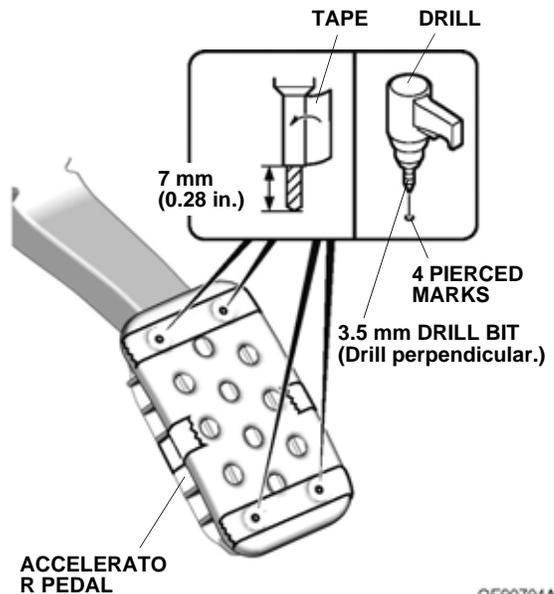


5. Remove the masking tape.

- Using the hand riveter, secure the accelerator pedal cover to the accelerator pedal with four rivets A in the order shown.

NOTE:


- Make sure that you use the correct rivet before proceeding with the installation.
- Make sure that the rivet is attached.

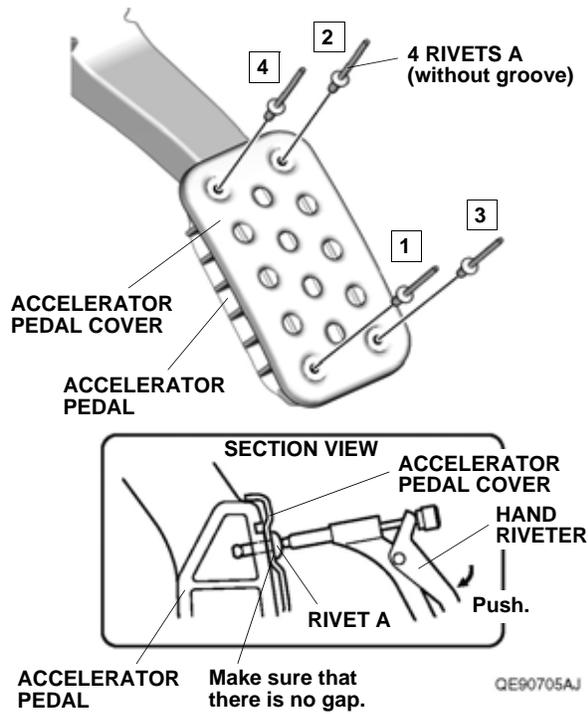

If the vehicle is equipped with CVT models, continue with step 7. If the vehicle is equipped with M/T models, go to step 11.


CVT models

- Remove the brake pedal pad from the brake pedal.

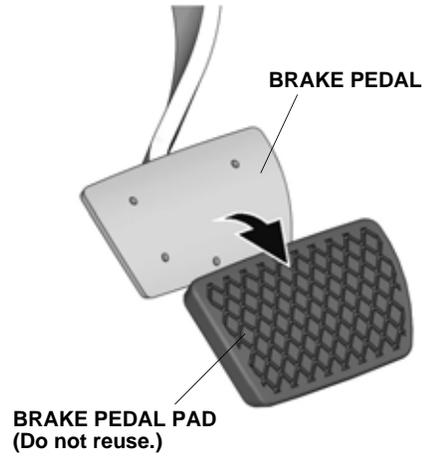


QE90706AJ

- Install the new brake pedal pad onto the brake pedal. **NOTE:** Make sure that the brake pedal pad is properly installed on the brake pedal.

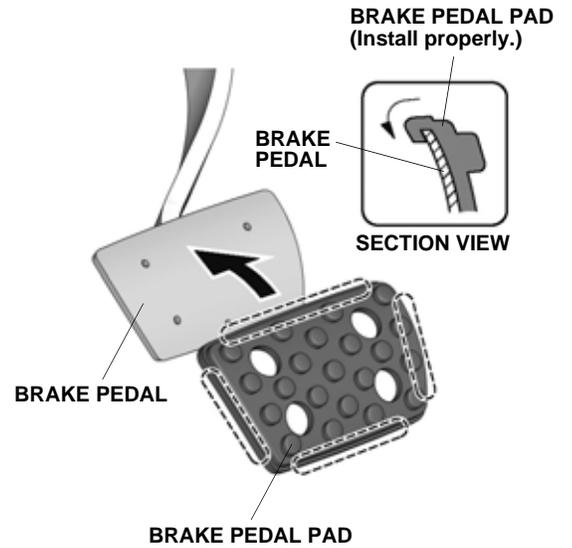

QE90707AJ

- Loosely install the brake pedal pad cover on the brake pedal pad.

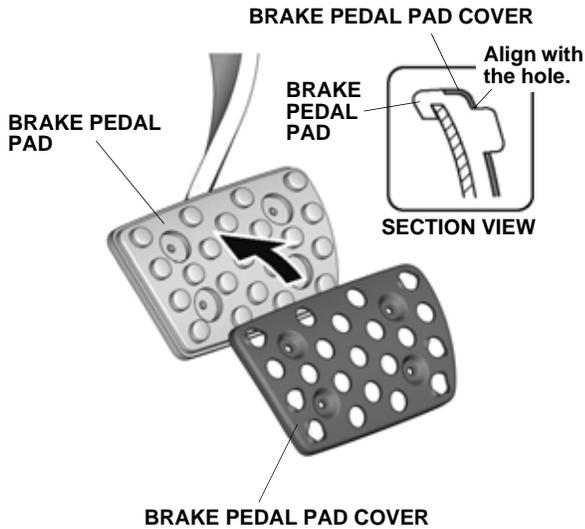


QE90708AJ

- Using the hand riveter, install the brake pedal pad cover on the brake pedal with four rivets B in the order shown.

NOTE:


- Make sure that you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure that the rivet is attached.

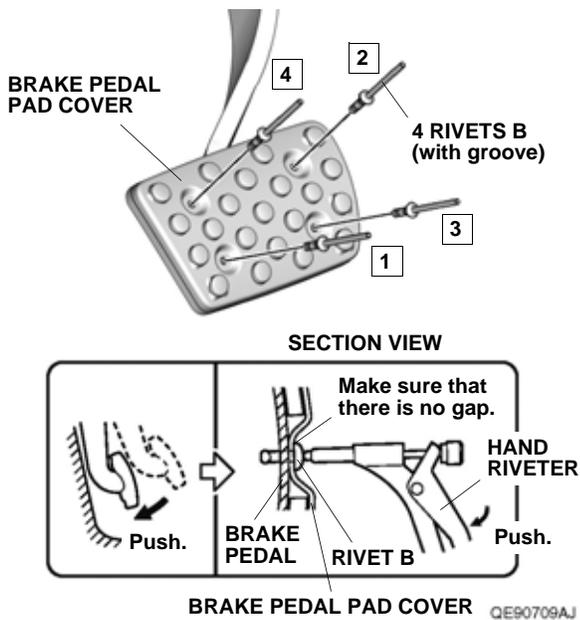

QE90709AJ


M/T models

- Remove the brake pedal pad from the brake pedal.

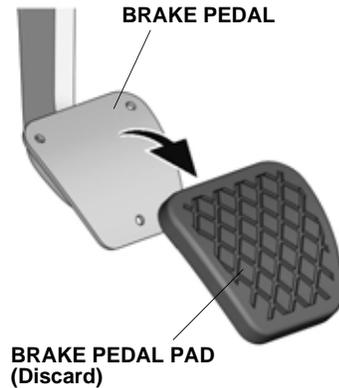


QE90710AJ

- Install the pedal pad on the brake pedal.

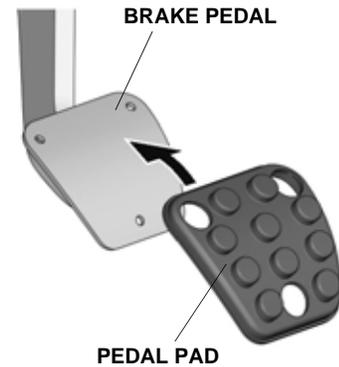

QE90711AJ

- Loosely install the pedal pad cover to the pedal pad.

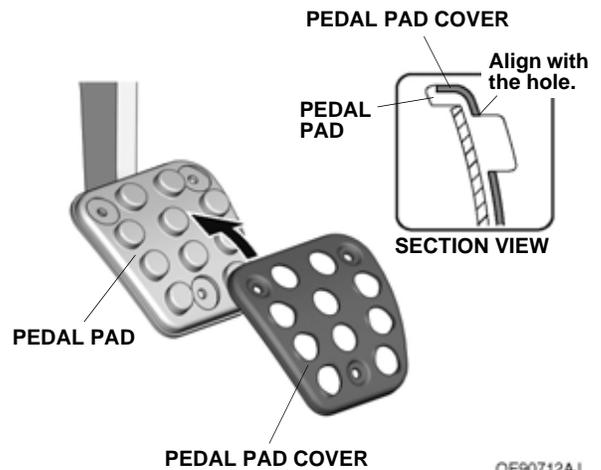


QE90712AJ

14. Using the hand riveter, install the pedal pad cover on the brake pedal with three rivets B in the order shown.

NOTE:

- Make sure that you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure that the rivet is attached.

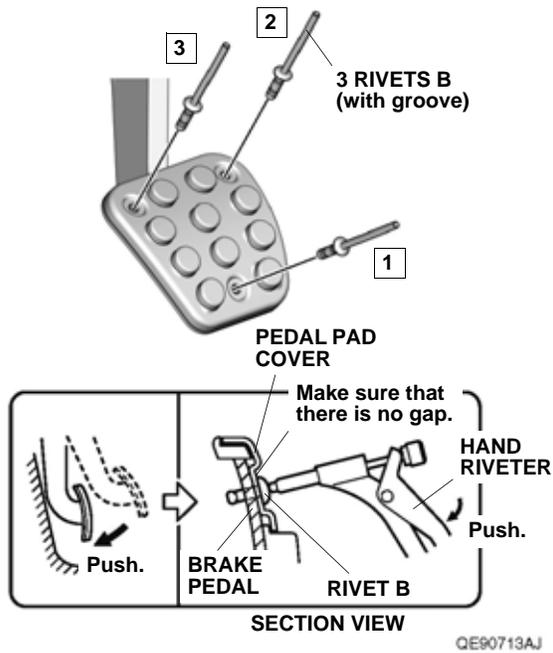

15. Repeat steps 11 through 14 to install the pedal pad and pedal pad cover on the clutch pedal.