



# INSTALLATION INSTRUCTIONS

Accessory  
**SPORTS PEDALS**

Application  
**2018 CIVIC  
5-DOOR  
(EXCEPT Si)**

Publications No.  
**VERSION 1**

Issue Date  
**AUG 2017**

## PARTS LIST

**Sports Pedal Kit (CVT models)  
P/N 08U74-TEA-100**

Accelerator pedal cover



Brake pedal pad cover



Brake pedal pad



4 Rivets A (without groove)



4 Rivets B (with groove)



**Sports Pedal Kit (M/T models)  
P/N 08U74-TEA-100A**

Accelerator pedal cover



2 Pedal pad covers



2 Pedal pads



4 Rivets A (without groove)



6 Rivets B (with groove)



## TOOLS AND SUPPLIES REQUIRED


Drill  
3.5 mm Drill bit  
Eye protection (face shield, safety goggles, etc.)  
File  
Pushpin  
3.5 mm Hand riveter  
Masking tape  
Tape  
Ruler

## INSTALLATION

**Customer Information:** The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


### Installing the Sports Pedals

1. Apply masking tape to the accelerator pedal cover as shown.

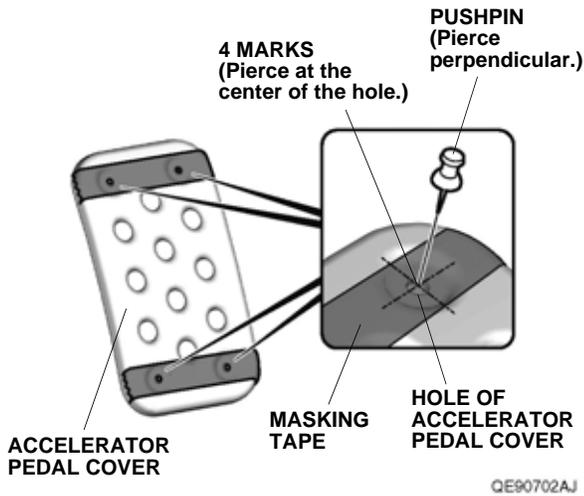

2. Using a pushpin, pierce masking tape as shown.


3. Using masking tape, loosely install the accelerator pedal cover onto the accelerator pedal as shown. NOTE: Be sure to install the accelerator pedal cover in the correct orientation.

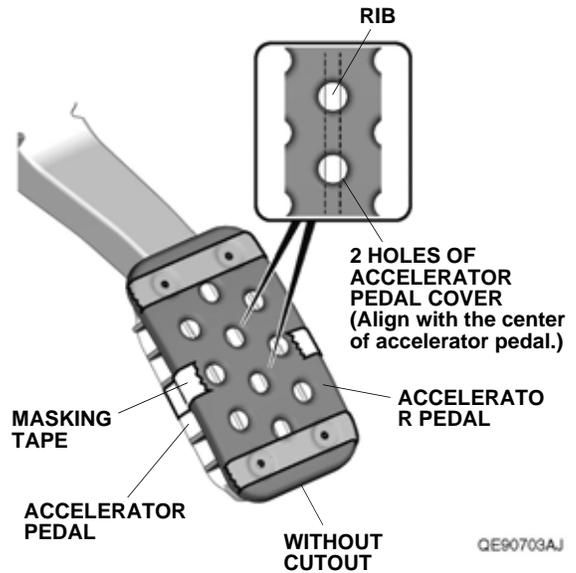

4. While wearing eye protection, drill the accelerator pedal at the four pierced marks with a 3.5mm drill bit.

#### NOTE:

- Wrap the tape around the drill bit 7 mm (0.28 in.) from the tip of the drill.
- Hold the accelerator pedal firmly with your hand while drilling the hole.
- Make sure to drill perpendicular to the accelerator pedal. Remove any burrs.

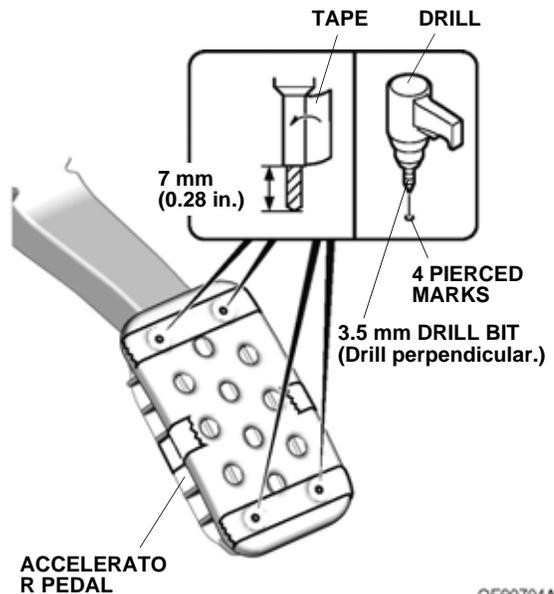


5. Remove the masking tape.

- Using the hand riveter, secure the accelerator pedal cover to the accelerator pedal with four rivets A in the order shown.

**NOTE:**


- Make sure that you use the correct rivet before proceeding with the installation.
- Make sure that the rivet is attached.

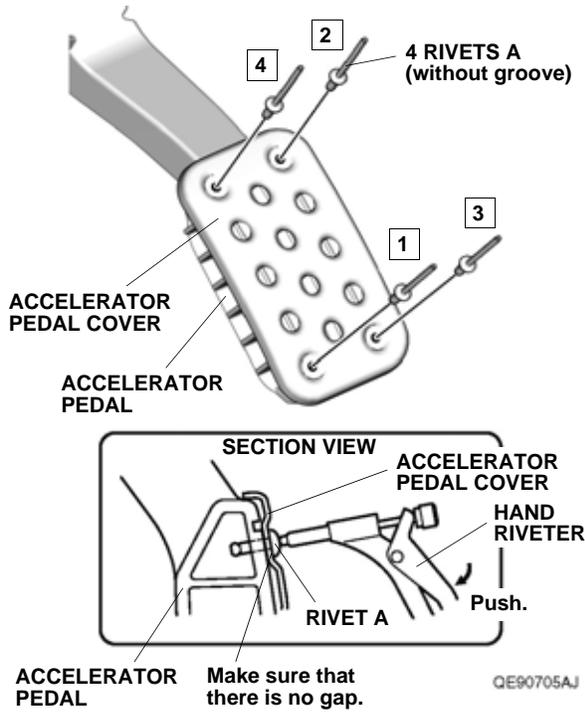

**If the vehicle is equipped with CVT models, continue with step 7. If the vehicle is equipped with M/T models, go to step 11.**


**CVT models**

- Remove the brake pedal pad from the brake pedal.

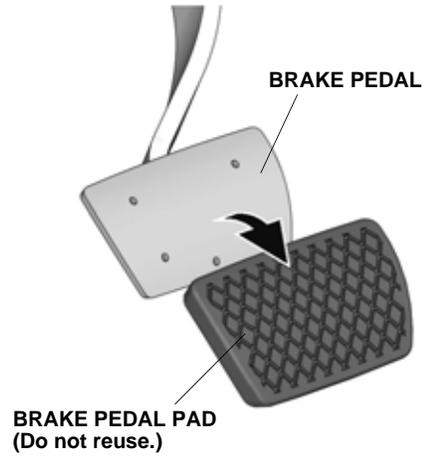


QE90706AJ

- Install the new brake pedal pad onto the brake pedal. **NOTE:** Make sure that the brake pedal pad is properly installed on the brake pedal.

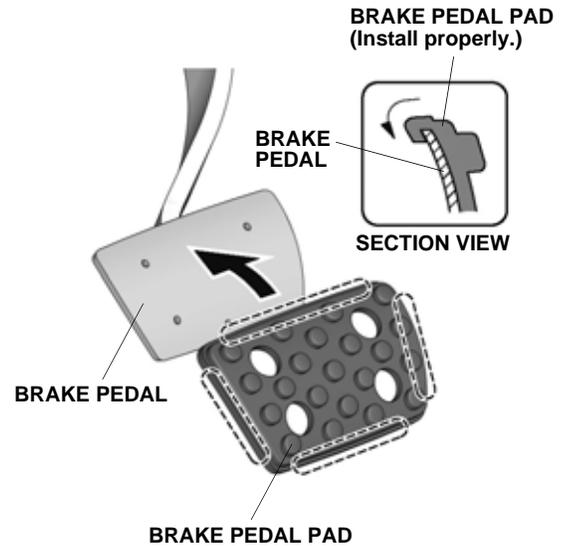

QE90707AJ

9. Loosely install the brake pedal pad cover on the brake pedal pad.

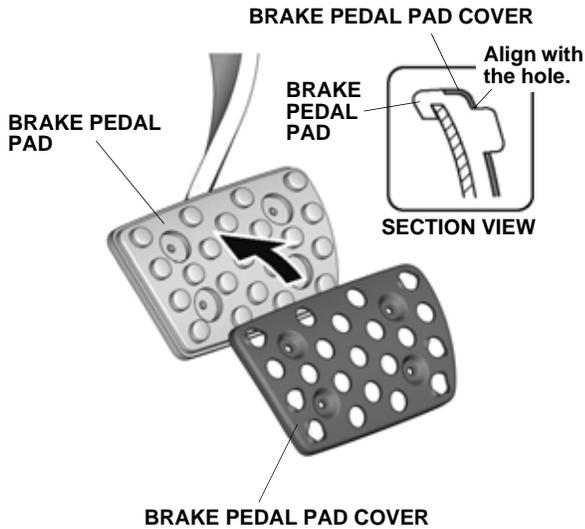


QE90708AJ

10. Using the hand riveter, install the brake pedal pad cover on the brake pedal with four rivets B in the order shown.

NOTE:


- Make sure that you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure that the rivet is attached.

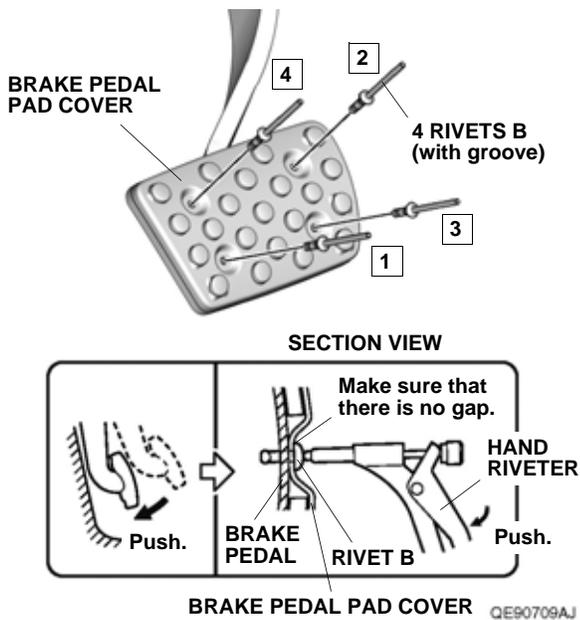

QE90709AJ


## M/T models

11. Remove the brake pedal pad from the brake pedal.

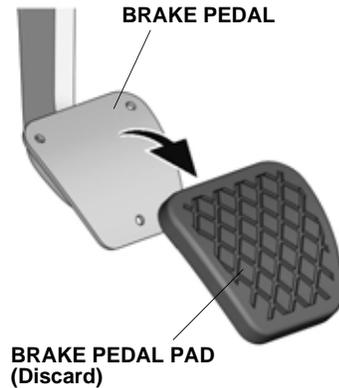


QE90710AJ

12. Install the pedal pad on the brake pedal.

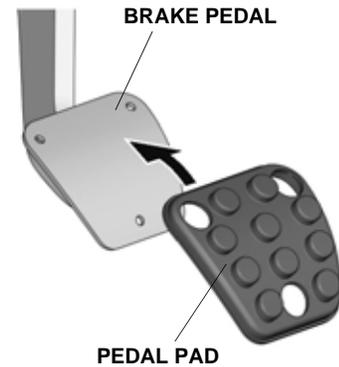

QE90711AJ

13. Loosely install the pedal pad cover to the pedal pad.

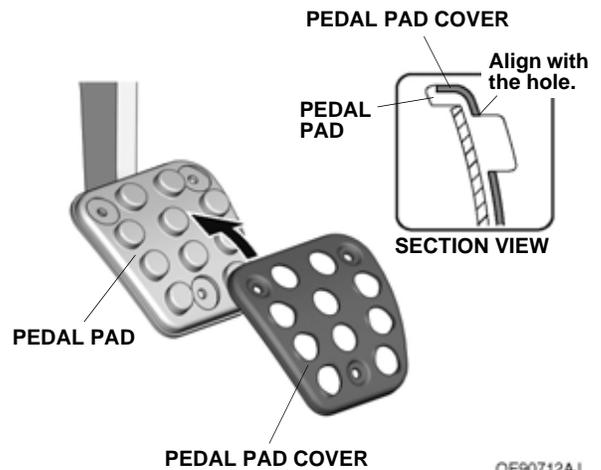


QE90712AJ

14. Using the hand riveter, install the pedal pad cover on the brake pedal with three rivets B in the order shown.

**NOTE:**

- Make sure that you use the correct rivet before proceeding with the installation.
- When holding down the brake pedal, be careful not to injure your fingers.
- Make sure that the rivet is attached.

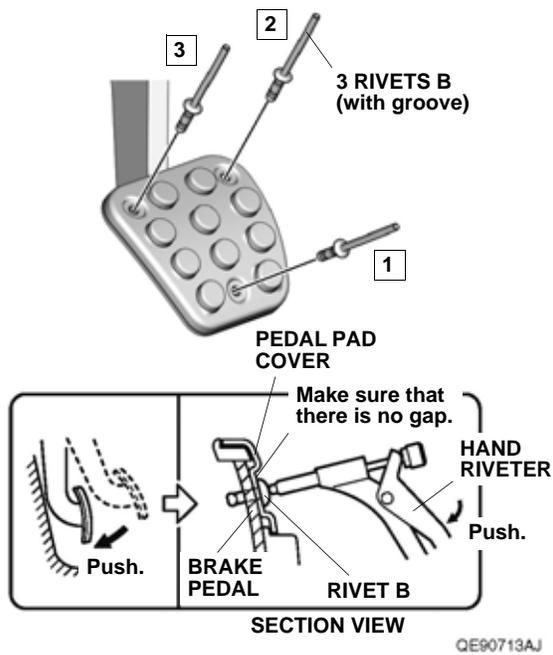

15. Repeat steps 11 through 14 to install the pedal pad and pedal pad cover on the clutch pedal.